

OMRON

形 ZX-GIF11(A)/41(A)

スマートセンサ 形ZX-GTC□□用 インターフェイスユニット

取扱説明書

このたびは、当社の「形ZX-GIF」をお買い上げいただき、ありがとうございます。当製品の持つ機能および性能を十分に活用し、末永くご使用いただきたいと存じます。製品を安全に利用していただくため、使用の前に必ずこの取扱説明書をお読みになり、十分に理解してご使用ください。また、この取扱説明書は、必要なときにいつでも参照できるよう大切に保管してください。



オムロン株式会社
© OMRON Corporation 2007 All Rights Reserved.

安全上の要点


次に示す項目は安全を確保するうえで必要なことです。必ず守ってください。

- ①設置環境について
 - ・引火性・爆発性ガスの環境では使用しないでください。
 - ・操作・保守の安全を確保するため、高電圧機器や動力機器から離して設置してください。
 - ・通気孔を塞がないように設置してください（連結時の連結面は除く）。
- ②電源、配線について
 - ・定格電圧（DC24V+10%,-15%）を越えて使用しないでください。
 - ・電源の逆接続および交流電源への接続はしないでください。
 - ・電源は高電圧が発生しないように対策（安全超低電圧回路）されている直流電源装置から供給してください。
 - ・オープンコレクタ出力は、負荷を短絡させないでください。
 - ・高圧線、動力線と当製品の配線は別配線としてください。同一配線あるいは同一ダクトにすると誘導を受け、誤動作あるいは破損の原因になることがあります。
 - ・コントローラ同士を連結接続するときは、指定の組み合わせでご使用ください。
- ③その他
 - ・本製品を分解・修理、改造、加圧変形、焼却しないでください。
 - ・廃棄するときは、産業廃棄物として処理してください。
 - ・万一、異常を感じたときは、すぐに使用を中止し、電源を切った上で、当社支店・営業所までご連絡下さい。

使用上の注意

- ①設置場所について
次のような場所には設置しないでください。
 - ・強い外乱光（レーザ光、アーク溶接光など）が発生している場所
 - ・周囲温度が定格の範囲を超える場所
 - ・温度変化が急激な場所（結露する場所）
 - ・相対湿度が35～85%RHの範囲を超える場所
 - ・腐食性ガス、可燃性ガスがある場所
 - ・塵埃、塩分、鉄粉がある場所
 - ・振動や衝撃が直接加わる場所
 - ・直射日光が当たる場所
 - ・水・油・化学薬品の飛沫がある場所
 - ・強磁界、強電界がある場所
- ②電源および配線について
電源印加中のコネクタの脱着は避けてください。破損の原因となります。
- ③ウォームアップについて
電源投入後、約10分間放置してからご使用ください。電源投入直後は回路が安定していませんので、計測値が徐々に変化することがあります。
- ④保守点検について
インターフェイスユニットの清掃には、シンナー、ベンゼン、アセトン、灯油類は使用しないで下さい。

付属のクランプについて

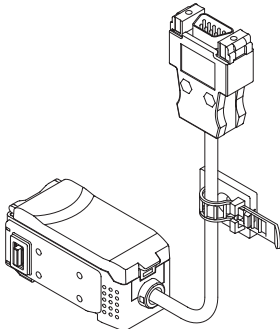


シリアル通信コードを、付属のクランプを使用して機器等に固定することができます。

■定格/性能

項目	形式	ZX-GIF11	ZX-GIF11A	ZX-GIF41	ZX-GIF41A
適合コントローラ		ZX-GTC11/ZX-GTC41			
表示灯		電源表示灯(緑) コントローラ通信表示灯(橙) コントローラ通信エラー表示灯(赤) RS-232C通信表示灯(橙) RS-232C通信エラー表示灯(赤) バイナリ出力表示灯(黄)			
通信ポート		RS-232Cポート(D-SUB 9ピンコネクタ)			
12ビットバイナリ出力 (D0~D11,GATE)		NPNオープンコレクタ出力 DC30V 20mA max 残留電圧1.2V以下		PNPオープンコレクタ出力 DC30V 20mA max 残留電圧2V以下	
電源電圧		コントローラより供給(消費電流:60mA)			
耐電圧		AC1000V 50/60Hz 1min			
絶縁抵抗		20MΩ(DC500Vメガにて)			
周囲温度		使用時:0~+50℃ 保存時:-15~+60℃ (ただし、氷結、結露しないこと)			
周囲湿度		使用時・保存時:35~85%RH (ただし、結露しないこと)			
振動(耐久)		10~150Hz	片振幅 0.35mm	X,Y,Z方向	80min
保護構造		IEC60529 IP20			
コード長		RS-232C 0.5m、バイナリ出力 2m			
材質		ケース:ポリブチレンテレフタレート、カバー:ポリカーボネート			
付属品		クランプ:2個、取扱説明書			
質量(梱包状態)		約330g	約550g	約330g	約550g

■取付方法


- 【DINレールへの装着】
- ①前部をDINレールにはめ込みます。
 - ②後部をDINレールに押しつけます。

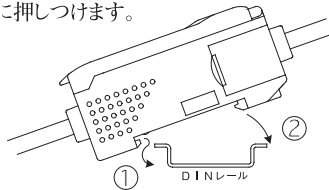


お願い

①、②の順序を逆にしないでください。
逆の順序で装着しますと取り付け強度が低下する場合があります。


- 【コントローラへの接続】
- ③DINレールに装着した状態でコントローラ左側に押しつけます。

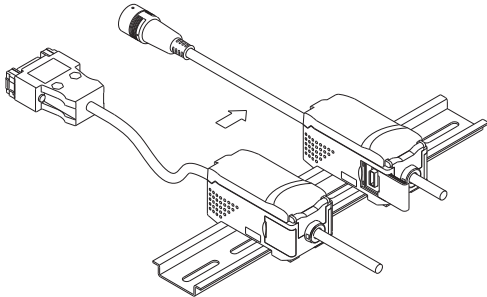


- 【取りはずし】
- ④前方に押しつけます。
 - ⑤前方を持ち上げます。

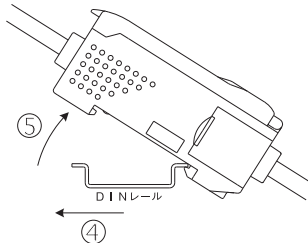

■各部の名称・機能

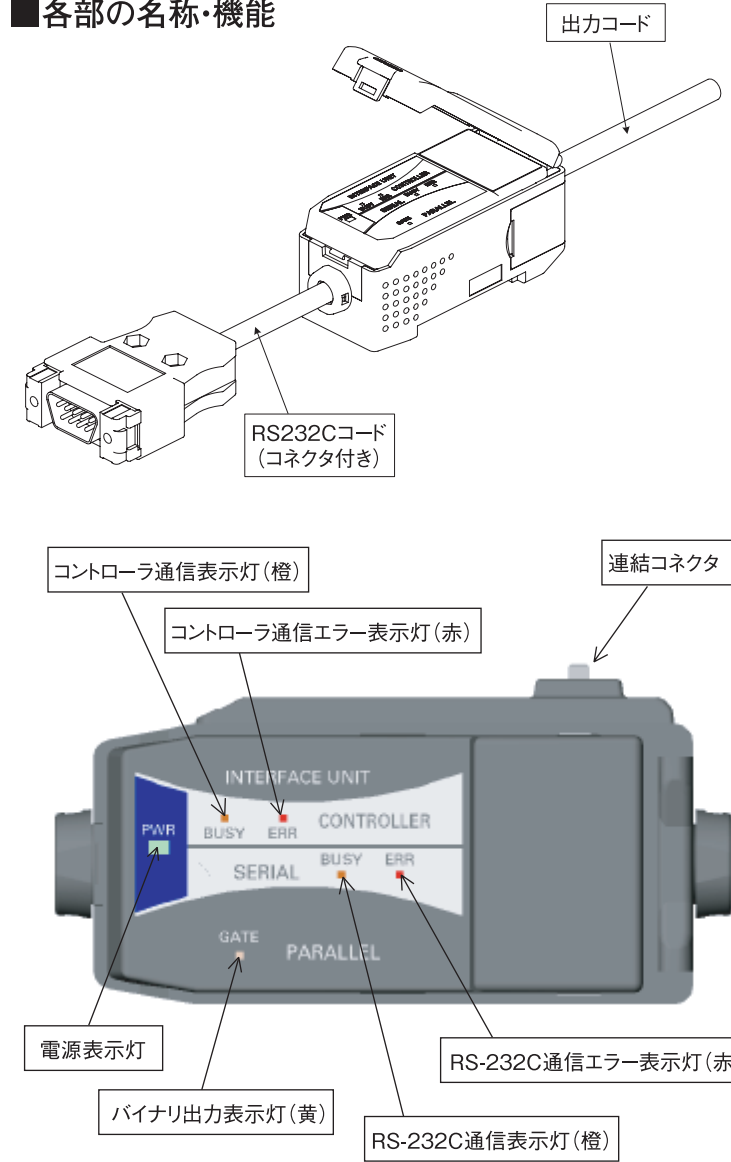

ZX-GIF11/41の背面には、切替スイッチがありますが、必ず下記の位置（工場出荷状態）に設定しておいてください。切替えると通信機能が変更され正常に動作しません。

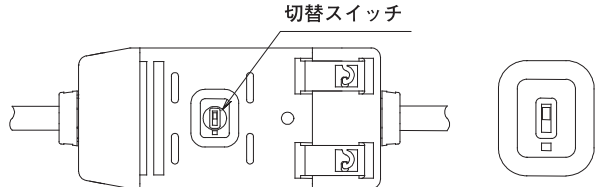

<表示灯詳細>

表示灯名称	色	内容
電源表示灯	緑	インターフェイスユニットに電源が投入されている時に点灯します。
コントローラ通信表示灯	橙	コントローラ間通信が正常に実施されている時に点灯します。
コントローラ通信エラー表示灯	赤	コントローラ間通信が異常の場合に点灯します。
RS-232C通信表示灯	橙	外部端末（例:パソコン）との通信が正常に実施されている時に点灯します。
RS-232C通信エラー表示灯	赤	外部端末（例:パソコン）との通信が異常の場合に点灯します。
バイナリ出力表示灯	黄	バイナリ出力が出力中、点灯します。


注) コントローラ通信エラー表示灯は電源投入約1秒間点灯しますが、異常ではありません。

■形 ZX 用機能設定ソフトウェア（ZX-GSW11）

ZX-GSW11は、パソコンなどの外部端末から簡単に波形表示や設定などが行えるソフトウェアです。このソフトウェアをご使用いただくことで、スマートセンサを更に有効に活用することができます。


※形ZX-GIF11A/ZX-GIF41AにCD-ROMの形態で同梱しています。
※ソフトウェア使用許諾について
セットアップディスク内にあるLicense.txtの内容に同意していただける場合のみご使用いただけます。

■接続

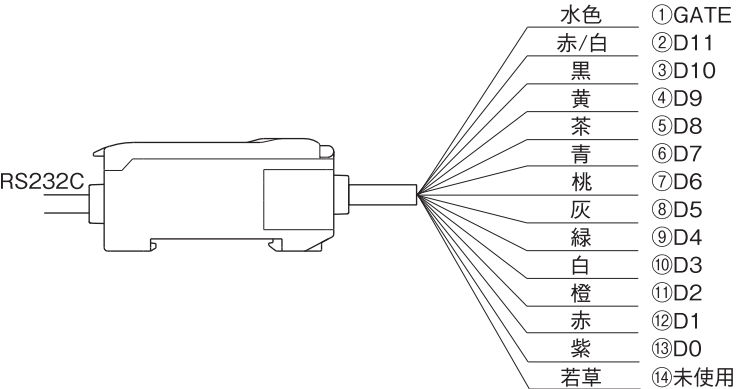


コネクタのピン配置とパソコンとの接続例

形 ZX-GIF □□側

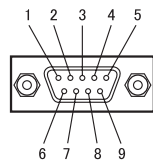

パソコン側（PC/AT 互換機）

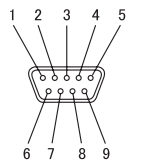










形ZX-GIF□□とパソコンをD-sub 9ピン（メス-メス）のクロスケーブルで接続します。

1	N.C.
2	RD
3	SD
4	N.C.
5	SG
6	N.C.
7	N.C.
8	N.C.
9	N.C.

1	CD
2	RD
3	SD
4	ER
5	SG
6	DR
7	RS
8	CS
9	CI
コネクタ フード	FG

*ピンNo.は接続する外部装置の種類や機種によって異なる場合があります。お手持ちのプログラマブルコントローラやパソコンの取扱説明書を確認してください。

NPNタイプ

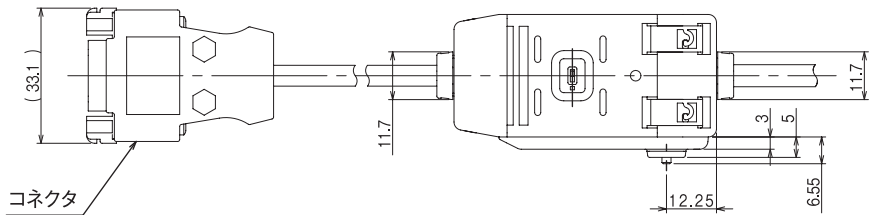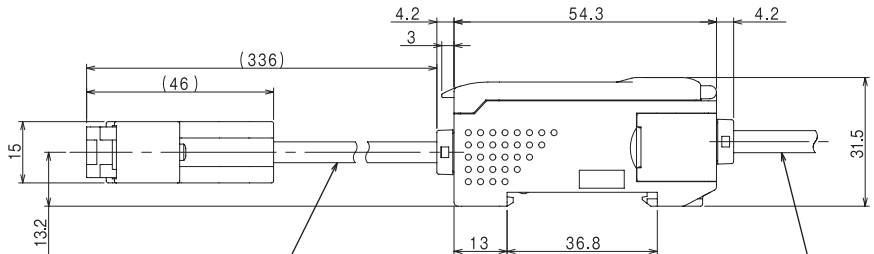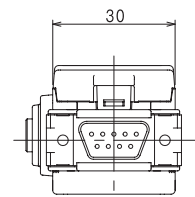

[単位:mm]

ご使用に際してのご承諾事項

- ① 安全を確保する目的で直接的または間接的に人体を検出する用途に、本製品を使用しないでください。同用途には、当社センサカタログに掲載している安全センサをご使用ください。
- ② 下記用途に使用される場合、当社営業担当者までご相談のうえ仕様書などによりご確認いただくとともに、定格・性能に於いて余裕を持った使い方で、万一故障があっても危険を最小にする安全回路などの安全対策を講じてください。
- a) 屋外の用途、潜在的な化学的汚染あるいは電気的妨害を被る用途
またはカタログ、取扱説明書等に記載のない条件や環境での使用
- b) 原子力制御設備、焼却設備、鉄道・航空・車両設備、医用機械、娯楽機械、安全装置、および行政機関や個別業界の規制に於て設備
- c) 人命や財産に危険が及ぶようなシステム・機械・装置
- d) ガス、水道、電気の供給システムや24時間連続運転システムなどの高い信頼性が必要とされる設備
- e) その他、上記 a) ～ d) に準ずる、高度な安全性が必要とされる用途
- * 上記は適合用途の条件の一部です。当社のベスト、総合カタログデータシート等最新版のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー

- お問い合わせ先
カスタマサポートセンター
フリーコール **0120-919-066**
携帯電話・PHSなどではご利用いただけませんので、その場合は下記電話番号へおかけください。
電話 **055-982-5015** (通話料がかかります)
- 〔技術のお問い合わせ先〕
■営業時間:8:00~21:00
■営業日:365日
■上記フリーコール以外のセンシング機器の技術窓口:
電話 **055-982-5002** (通話料がかかります)
- 〔営業のお問い合わせ時間〕
■営業時間:9:00~12:00 / 13:00~17:30 (土・日・祝祭日は休業)
■営業日:土・日・祝祭日 / 春期・夏期・年末年始休暇を除く
- FAXによるお問い合わせは下記をご利用ください。
カスタマサポートセンター お客様相談室 FAX 055-982-5051
- その他のお問い合わせ先
納期・価格・修理・サンプル・仕様書は貴社のお取引先、
または貴社担当オムロン営業員にご相談ください。

OMRON

Model ZX-GIF11(A)/41(A)

Smart Sensor
Communications Interface Unit

INSUTRUCITION SHEET

Thank you for selecting OMRON product. This sheet pri-marily describes precautions requited in installing and operating the product.

Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your con-venience, keep the sheet at your disposal.

TRACEABILITY INFORMATION:

Representative in EU:
Omron Europe B.V.
Wegalaan 67-69
2132 JD Hoofddorp,
The Netherlands

Manufacturer:
Omron Corporation,
Shiokoji Horikawa, Shimogyo-ku,
Kyoto 600-8530 JAPAN
Ayabe Factory
3-2 Narutani, Nakayama-cho,
Ayabe-shi, Kyoto 623-0105 JAPAN

The following notice applies only to products that carry the CE mark:
Notice:
This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.



© OMRON Corporation 2007 All Rights Reserved.

PRECAUTIONS FOR SAFE USE

Observe the following precautions to ensure safety.

- ①Environment
- Do not use the Smart Sensor in locations subject to explosive or flammable gases.
 - To ensure safety in operation and maintenance, do not install the Smart Sensor near high-voltage equipment or power devices.
- ②Power Supply and Wiring
- Do not apply voltage exceeding the rated voltage (24VDC +10%, -15%).
 - When supplying power to the Sensor, make sure that the polarity of the power is correct, and do not connect to an AC power supply.
 - Do not short-circuit a load for outputs.
 - Do not lay a power supply cable for the Smart Sensor together with high-voltage lines or power lines. Doing so, or placing them into the same duct world cause induction and lead to malfunction or damage.
 - When the Controller is connected and used mutully, Please use this product by combining specification.
- ③Others
- Do not attempt to disassemble, repair, modify, deform or burn this product.
 - When disposing of the Smart Sensor, treat it as industrial waste.
 - Please contact our banch and the office after it turns off power when you feel abnormality by any chance.

Detailed information for the functions and operation of the ZX-GT-series Smaet Sensors is available in an Operation Manual (Cat. No.SCHE-746), which is sold separately. Ask your OMRON representative for details. The Operation Manual can also be downloaded from the following Web site for free of charge:


http://www.fa.omron.co.jp/

PRECAUTIONS FOR CORRECT USE

- ①Environment
- Do not install the Smart Sensor in the following locations:
- Locations subject to strong electromagnetic fields or in an environment where the operation of the Sensor is subject to the reflection of intense light (such as other laser beams or electric arc-welding machines.)
 - Locations where the ambient temperature exceeds the rated temperature range.
 - Locations subject to rapid changes in temperature (causing condensation).
 - Locations where the relative humidity exceeds the range of 35% to 85%.
 - Locations subject to corrosive or flammable gases.
 - Locations where dust, salt, or metallic powder accumulate on the Sensor.
 - Locations subject to direct vibration or impact.

- Locations subject to direct sunlight.
 - Locations subject to exposure to water, oil, chemicals, etc.
 - Locations subject to strong electromagnetic or electrical fields.
- ②Power Supply and Wiring
- When using a commercially available switching regulator, ground the FG (frame ground) terminal.
 - If the power supply line is subject to surges, connect a surge absorber that meets the conditions of the usage environment.
 - Do not connect/disconnect the Controller from the Interface Unit with power on, or it might get damaged.
- ③Warm-up
- After tuning ON the power, allow the Smart Sensor to warm up for approximately 10 minutes prior to use. The circuitry is not stable immediately after turning the power ON, and the values gradually change until the Sensor is completely warmed up.
- ④Maintenance and Inspection
- Always turn OFF the power supply before adjusting or removing the Sensor Head.
 - Do not use thinners, benzene, acetone, or kerosene for cleaning the Sensor Head or Controller.

ACCESSORY CLAMPS

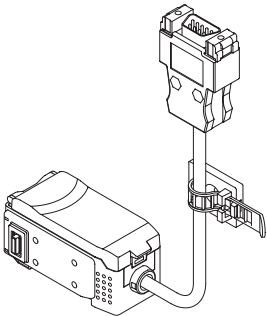

The clamps provided with the Unit can be used to secure the serial communication cable.


Rating/Performance

Item	Model	ZX-GIF11	ZX-GIF11A	ZX-GIF41	ZX-GIF41A
Agreement controller	ZX-GTC11/ZX-GTC41				
Indicator Lamp	Power indicator (green) Controller communication indicator (orange) Controller communication error indicator (red) RS-232C communication indicator (orange) RS-232C communication error indicator (red) Binary output indicator (yellow)				
Communication Port	RS-232C (9-pin, D-Sub connector)				
12 bit binary output (D0-D11, GATE)	NPN Open collector output 30VDC 20mA max. Residual voltage 1.2V or less		PNP Open collector output 30VDC 20mA max. Residual voltage 2V or less		
Power supply	From controller (60mA max.)				
Dielectric strength	1000VAC at 50/60Hz for 1min				
Insulation resistance	20MΩ at 500VDC				
Ambient temperature	Operating:0 to +50°C, Storage:-15 to +60°C (with no icing or condensation)				
Ambient humidity	Operating/Storage:35 to 85% (with no condensation)				
Vibration (durability)	10 to 150Hz Half-amplitude of 0.35mm for 80 minutes each in X, Y, and Z directions				
Protective structure	IEC60529 IP20				
Cable length	2m				
Material	Case:PBT (polybutylene terephthalate), Cover:Polycarbonate				
Accessories	Instruction manual, two clamps				
Weight (paced state)	Appox.330g	Appox.550g	Appox.330g	Appox.550g	

Installation

Mounting to DIN Track


- ①Mount the front of the Unit to the DIN Track.
②Press the rear of the Unit onto the DIN Track.

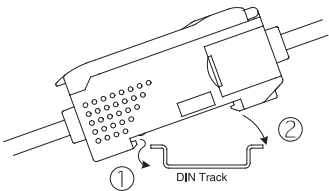

Note: Always mount the front of the Unit first. Mounting strength may decrease if mounting is performed in the reverse order.


Connecting to the Sensor Controller

- ③After mounting the Unit and Controller to DIN Track, press the Unit against the left side of the Controller.

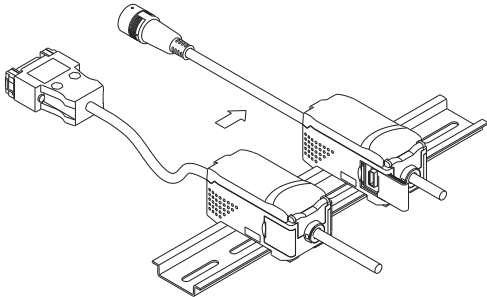


Removing the Unit from DIN Track


- ④Press the Unit toward the front.
⑤Lift the front of the Unit.

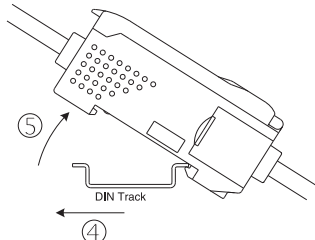

Nomenclature

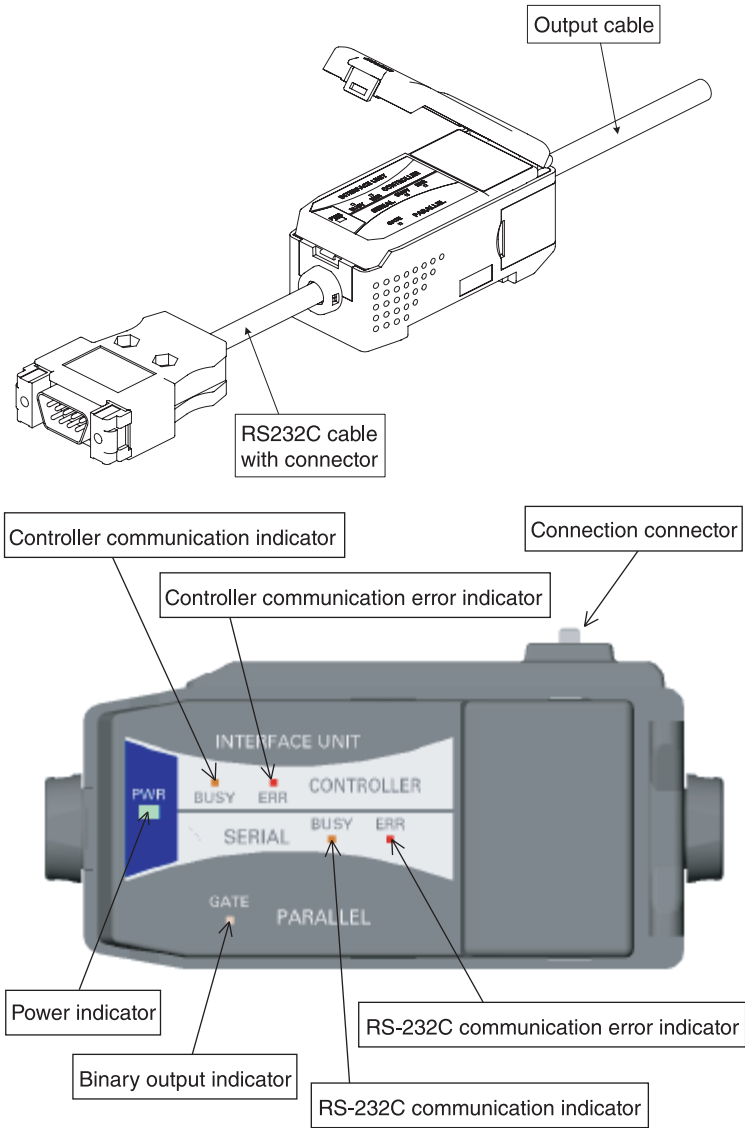

There is a switch on the bottom of hte Unit. This switch must be left in the factory-set position shown below. If the switch is changed position, communication do not work.

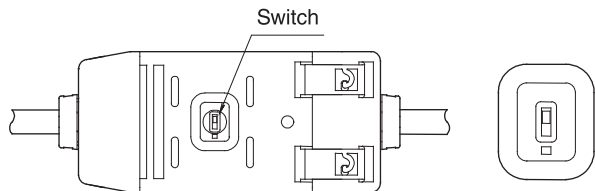

Indicator

Name	Color	Description
Power indicator	Green	Lit when power is supplied to the Unit.
Controller communication indicator	Orange	Lit when controllers are communicating with each other normally.
Controller communication error indicator	Red	Lit when there is a communication error between controllers.
RS-232C communication indicator	Green	Lit when the Unit is communicating normally with the external device. (e.g., computer)
RS-232C communication error indicator	Red	Lit when there is a communication error with the external device. (e.g., computer)
Binary output indicator	Yellow	Lit while the binary output is outputting.

Note: The controller communication error indicator will be on for 1 second after the power supply is turned ON, but this does not indicate an error.


ZX Function Setting Software (ZX-GSW11)

The ZX-GSW11 Function Setting Software enables easy wave-from displays and settings for the ZX-GIF11/41 from a personal computer. Using this software enable even more effective application of your Smart Sensor. For details, refer to the documentation provided with the applications software.

※Software License


The software may be used only when the user agrees with the terms specified in the License.txt file in the setup desk.

Connection

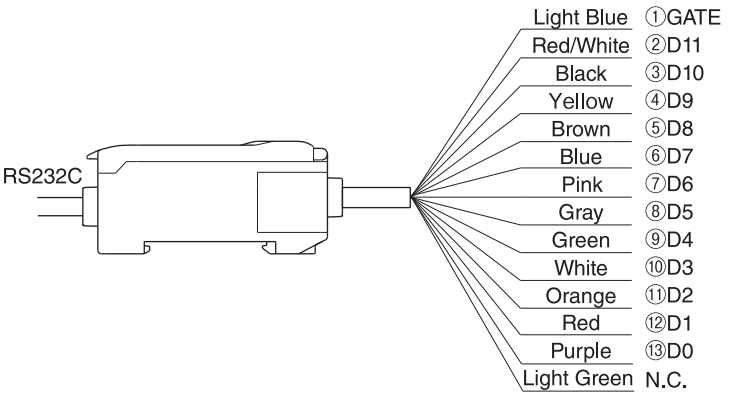


RS-232C Connector PIN Assignment

ZX-GIF □□ SIDE

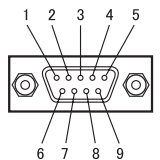


1	N.C.
2	RD
3	SD
4	N.C.
5	SG
6	N.C.
7	N.C.
8	N.C.
9	N.C.

Personal Computer SIDE




1	CD
2	RD
3	SD
4	ER
5	SG
6	DR
7	RS
8	CS
9	CI
connector food	FG

Input/Output Circuit

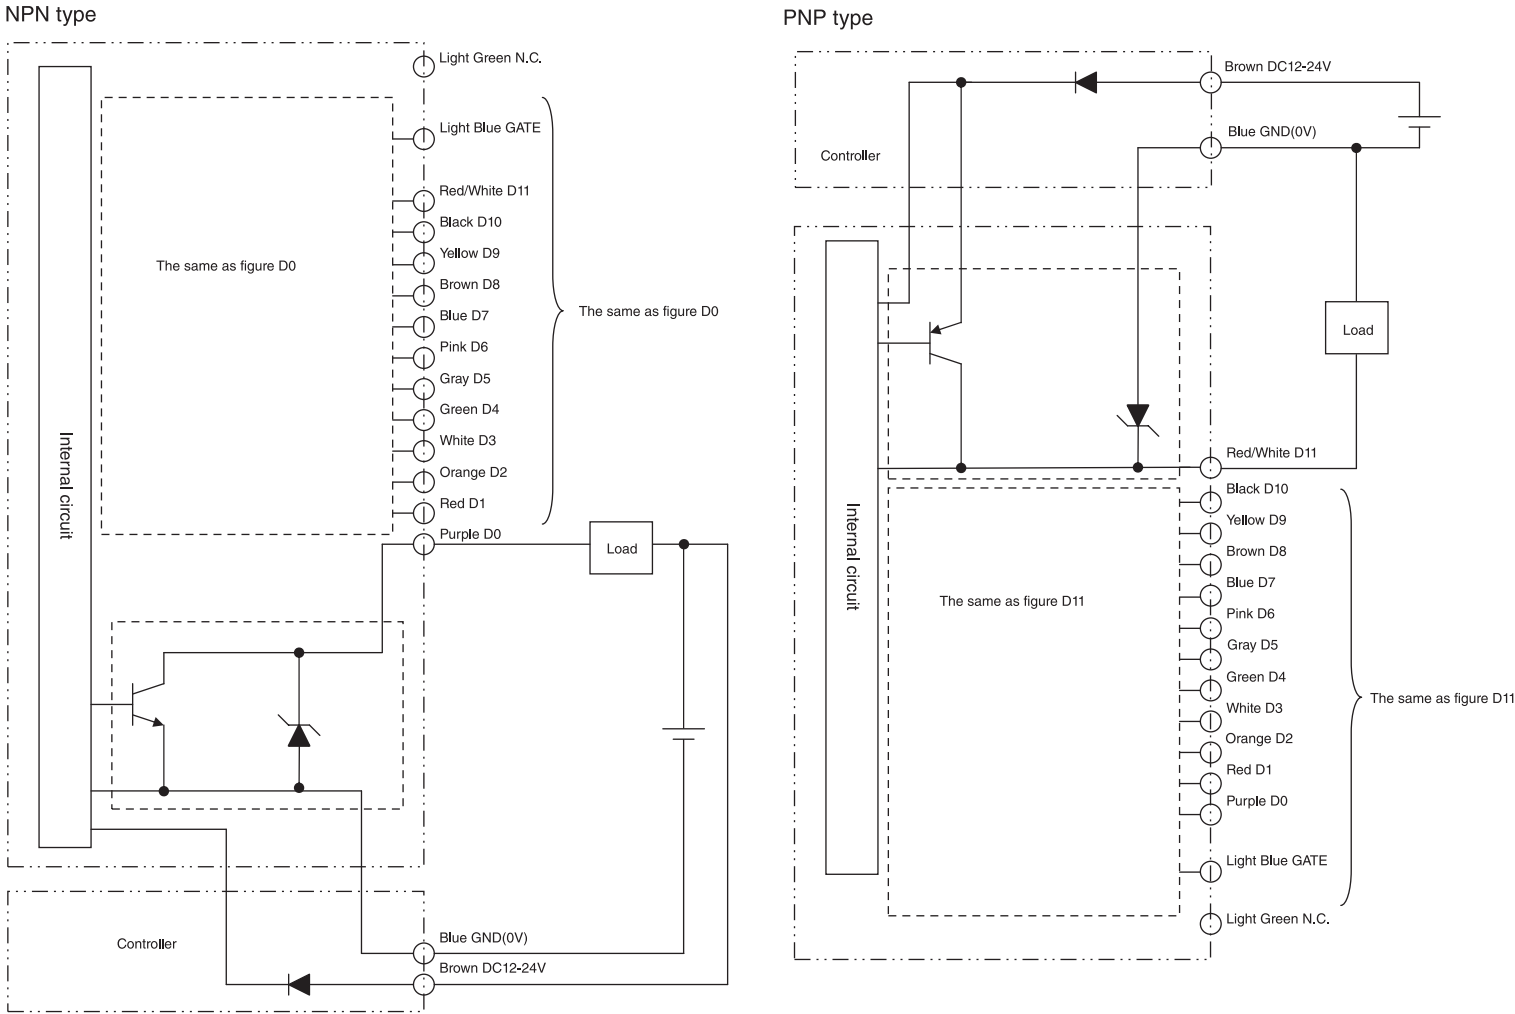

Dimension

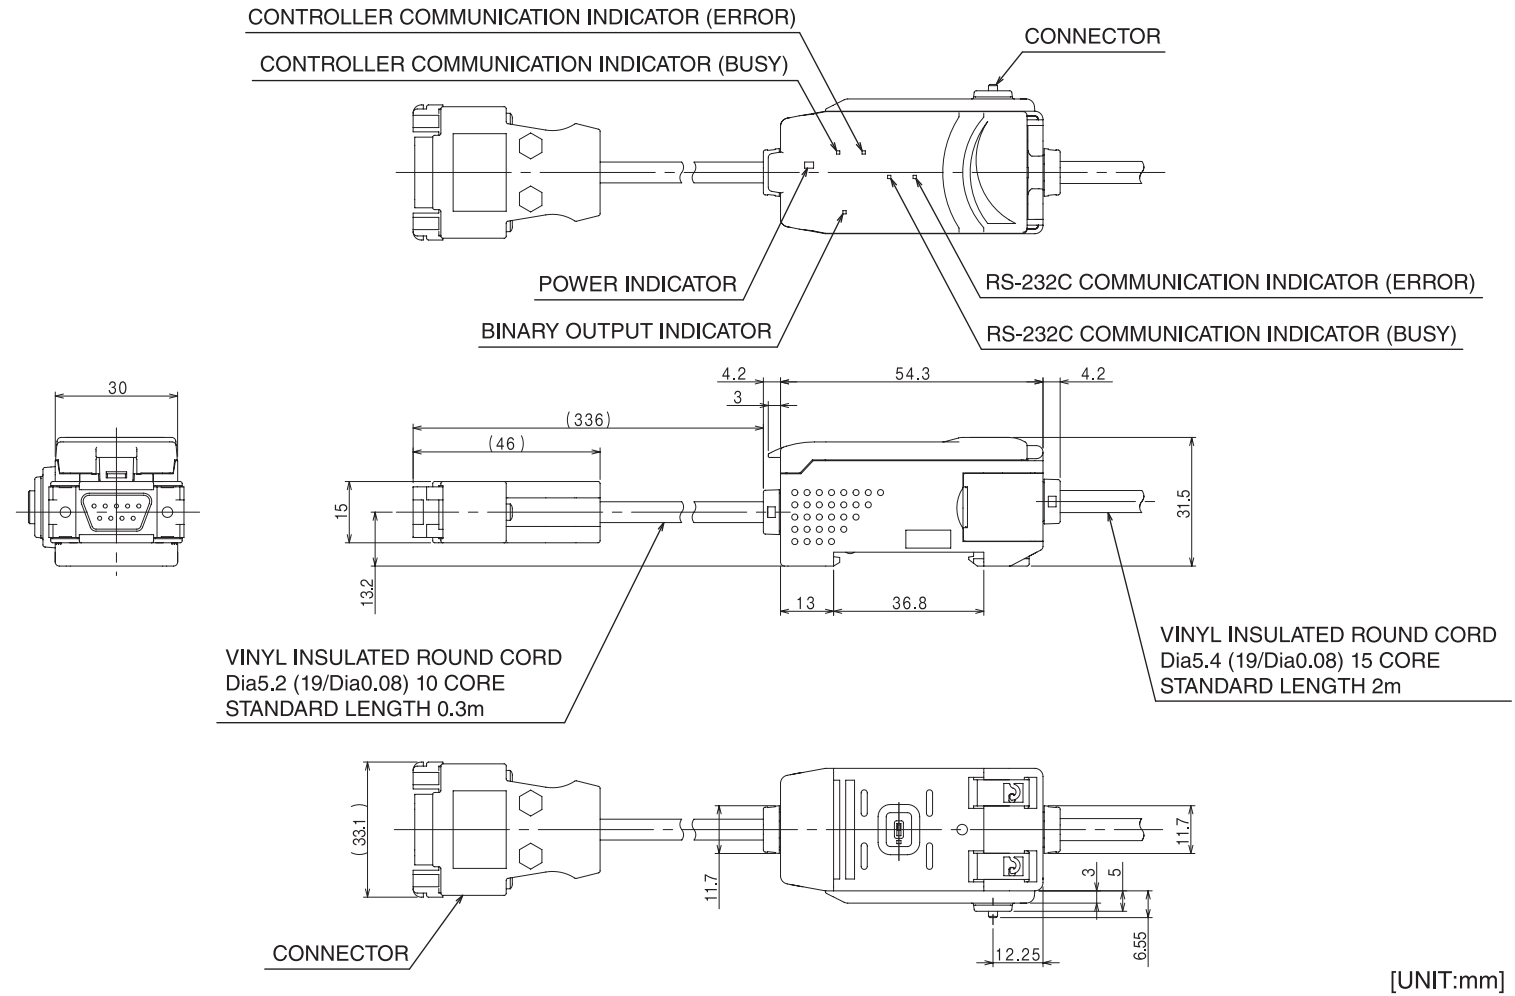

Suitability for Use

THE PRODUCTS CONTAINED IN THIS SHEET ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM. See also Product catalog for Warranty and Limitation of Liability.

- EUROPE
OMRON EUROPE B.V. Sensor Business Unit
Carl-Benz Str.4, D-71154 Nufringen Germany
Phone:49-7032-811-0 Fax: 49-7032-811-199
- NORTH AMERICA
OMRON ELECTRONICS LLC
One Commerce Drive Schaumburg,IL 60173-5302 U.S.A.
Phone:1-847-843-7900 Fax : 1-847-843-7787
- ASIA-PACIFIC
OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road #05-05-08(Lobby 2),
Alexandra Technopark, Singapore 119967
Phone : 65-6835-3011 Fax :65-6835-2711
- CHINA
OMRON(CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Phone : 86-21-5037-2222 Fax :86-21-5037-2200

OMRON Corporation

D OCT, 2009