



# TRANSISTORIZED INVERTER

## FR-F500J


### INSTRUCTION MANUAL (Detailed)

---

#### AIR-CONDITIONING INVERTER

# FR-F520J-0.4K to 15K (F)

# FR-F540J-0.4K to 15K (F)

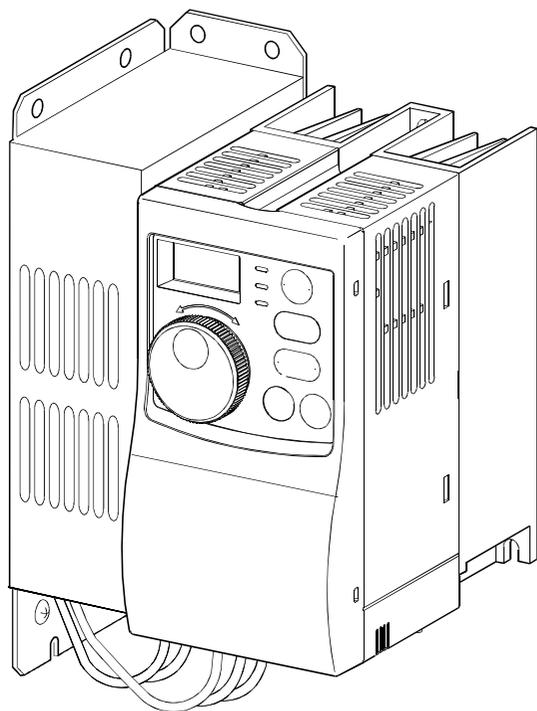

WIRING Chapter 1

FUNCTIONS Chapter 2

PROTECTIVE  
FUNCTIONS Chapter 3

SPECIFICATIONS Chapter 4

Thank you for choosing this Mitsubishi Transistorized inverter.

This instruction manual (detailed) provides instructions for advanced use of the FR-F500J series inverters.

Incorrect handling might cause an unexpected fault. Before using the inverter, always read this instruction manual and the instruction manual (basic) [IB-0600129E] packed with the product carefully to use the equipment to its optimum.

## This section is specifically about safety matters

Do not attempt to install, operate, maintain or inspect the inverter until you have read through this instruction manual (basic) and appended documents carefully and can use the equipment correctly. Do not use the inverter until you have a full knowledge of the equipment, safety information and instructions.

In this instruction manual (detailed), the safety instruction levels are classified into "WARNING" and "CAUTION".



Assumes that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury, or may cause physical damage only.

Note that even the  **CAUTION** level may lead to a serious consequence according to conditions. Please follow the instructions of both levels because they are important to personnel safety.

### 1. Electric Shock Prevention

#### **WARNING**

- While power is on or when the inverter is running, do not open the front cover. You may get an electric shock.
- Do not run the inverter with the front cover removed. Otherwise, you may access the exposed high-voltage terminals or the charging part of the circuitry and get an electric shock. Also, the inverter's ability to withstand earthquakes will deteriorate.
- Even if power is off, do not remove the front cover except for wiring or periodic inspection. You may access the charged inverter circuits and get an electric shock.
- Before starting wiring or inspection, check to make sure that the 3-digit LED inverter monitor is off, wait for at least 10 minutes after the power supply has been switched off, and check to make sure that there are no residual voltage using a tester or the like.
- This inverter must be earthed (grounded). Earthing (grounding) must conform to the requirements of national and local safety regulations and electrical codes. (NEC section 250, IEC 536 class 1 and other applicable standards)
- Any person who is involved in the wiring or inspection of this equipment should be fully competent to do the work.
- Always install the inverter before wiring. Otherwise, you may get an electric shock or be injured.
- Perform setting dial and key operations with dry hands to prevent an electric shock. You may get an electric shock.
- Do not subject the cables to scratches, excessive stress, heavy loads or pinching. Otherwise you may get an electric shock.
- Do not change the cooling fan while power is on. It is dangerous to change the cooling fan while power is on.

## 2. Fire Prevention

### CAUTION

- Install the inverter (filter pack) on an incombustible wall without holes, etc. Mounting it to or near combustible material can cause a fire.
- If the inverter has become faulty, switch off the inverter power. A continuous flow of large current could cause a fire.
- Do not connect the resistor directly to the DC terminals P and N. This could cause a fire.

## 3. Injury Prevention

### CAUTION

- Apply only the voltage specified in the instruction manual to each terminal to prevent damage, etc.
- Always connect to the correct terminal to prevent damage, etc.
- Always make sure that polarity is correct to prevent damage, etc.
- While power is on or for some time after power-off, do not touch the inverter (filter pack) or break register as they are hot and you may get burnt.

## 4. Additional Instructions

Also note the following points to prevent an accidental failure, injury, electric shock, etc.

### (1) Transportation and installation

### CAUTION

- When carrying products, use correct lifting gear to prevent injury.
- Do not stack the inverter boxes higher than the number recommended.
- Ensure that installation position and material can withstand the weight of the inverter. Install according to the information in the instruction manual.
- Do not install or operate if the inverter (filter pack) is damaged or has parts missing.
- When carrying the inverter, do not hold it by the front cover or setting dial; it may fall off or fail.
- Do not stand or rest heavy objects on the inverter.
- Check the inverter mounting orientation is correct.
- Prevent other conductive bodies as screws and metal fragments or other flammable substance as oil from entering the inverter (filter pack).
- As the inverter (filter pack) is a precision instrument, do not drop or subject it to impact.
- Use the inverter under the following environmental conditions: This could cause the inverter (filter pack) damage.

Environment	Surrounding Air Temperature	-10°C to +50°C (non-freezing)
	Ambient humidity	90%RH maximum (non-condensing)
	Storage temperature	-20°C to +65°C *1
	Atmosphere	Indoors (free from corrosive gas, flammable gas, oil mist, dust and dirt)
	Altitude/vibration	Max.1000m above sea level 5.9m/s <sup>2</sup> or less *2

\*1 Temperatures applicable for a short time, e.g. in transit.

\*2 When using with the filter pack installed on the rear panel of the FR-F520J-15K or FR-F540J-15K, do not install this combination on moving objects or places that have vibrations exceeding 1.96m/s<sup>2</sup>.

## (2) Wiring

### CAUTION

- Do not fit capacitive equipment such as power factor correction capacitor, radio noise filter (option FR-BIF(-H)) or surge suppressor to the output of the inverter.
- The connection orientation of the output cables U, V, W to the motor will affect the direction of rotation of the motor.

## (3) Trial run

### CAUTION

- Check all parameters, and ensure that the machine will not be damaged by a sudden start-up.
- When the load  $GD^2$  is small (at the motor  $GD$  or smaller) for 400V from 1.5K to 3.7K, the output current may vary when the output frequency is in the 20Hz to 30Hz range. If this is a problem, set the Pr.72 "PWM frequency selection" to 6kHz or higher. (When setting the PWM to a higher frequency, check for noise or leakage current problem and take countermeasures against it.)

## (4) Operation

### WARNING

- When you have chosen the retry function, stay away from the equipment as it will restart suddenly after an alarm stop.
- Since the  key is valid only when functions are set (refer to page 116), provide a circuit and switch separately to make an emergency stop (power off, mechanical brake operation for emergency stop, etc).
- Make sure that the start signal is off before resetting the inverter alarm. A failure to do so may restart the motor suddenly.
- The load used should be a three-phase induction motor only. Connection of any other electrical equipment to the inverter output may damage the equipment.
- Do not modify the equipment.
- Do not perform parts removal which is not instructed in this manual. Doing so may lead to fault or damage of the inverter.

## CAUTION

- The electronic thermal relay function does not guarantee protection of the motor from overheating.
- Do not use a magnetic contactor on the inverter input for frequent starting/stopping of the inverter.
- Use a noise filter to reduce the effect of electromagnetic interference. Otherwise nearby electronic equipment may be affected.
- Take measures to suppress harmonics. Otherwise power supply harmonics from the inverter may heat/damage the power capacitor and generator.
- When a 400V class motor is inverter-driven, please use an insulation-enhanced motor or measures taken to suppress surge voltages. Surge voltages attributable to the wiring constants may occur at the motor terminals, deteriorating the insulation of the motor.
- When parameter clear or all clear is performed, reset the required parameters before starting operations.
- The inverter can be easily set for high-speed operation. Before changing its setting, fully examine the performances of the motor and machine.
- In addition to the inverter's holding function, install a holding device to ensure safety.
- Before running an inverter which had been stored for a long period, always perform inspection and test operation.

### (5) Emergency stop

## CAUTION

- Provide a safety backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter fails.
- When the breaker on the inverter primary side trips, check for the wiring fault (short circuit), damage of the inner parts of the inverter, etc. Identify the cause of the trip, then remove the cause and power on the breaker.
- When any protective function is activated, take the appropriate corrective action, then reset the inverter, and resume operation.

### (6) Maintenance, inspection and parts replacement

## CAUTION

- Do not carry out a megger (insulation resistance) test on the control circuit of the inverter.

### (7) Disposing of the inverter

## CAUTION

- Treat as industrial waste.

### (8) General instructions

Many of the diagrams and drawings in this instruction manual show the inverter without a cover, or partially open. Never run the inverter in this status. Always replace the cover and follow this instruction manual when operating the inverter.

# CONTENTS

<b>1. WIRING</b>	<b>1</b>
1.1 Standard connection diagram and terminal specifications .....	2
1.1.1 Standard connection diagram .....	2
1.1.2 Explanation of main circuit terminals .....	3
1.2 Main circuit terminals .....	7
1.2.1 Terminal block layout .....	7
1.2.2 Cables, wiring length, and crimping terminals .....	8
1.2.3 Wiring instructions .....	9
1.2.4 Selection of peripheral devices .....	10
1.2.5 Leakage current and installation of earth (ground) leakage circuit breaker ..	11
1.2.6 Power-off and magnetic contactor (MC) .....	15
1.2.7 Regarding the installation of the reactor .....	16
1.2.8 Regarding noise (EMI) and the installation of a noise filter .....	17
1.2.9 Earthing (Grounding) precautions .....	18
1.2.10 Power supply harmonics .....	19
1.2.11 Harmonic suppression guideline .....	20
1.2.12 Inverter-driven 400V class motor .....	24
1.3 How to use the control circuit terminals .....	25
1.3.1 Terminal block layout .....	25
1.3.2 Wiring instructions .....	25
1.3.3 Changing the control logic .....	26
1.4 Input terminals .....	28
1.4.1 Run (start) and stop (STF, STR, STOP) .....	28
1.4.2 Connection of frequency setting potentiometer and output frequency meter (10, 2, 5, 4, AU) .....	31
1.4.3 External frequency selection (REX, RH, RM, RL) .....	32
1.4.4 Indicator connection and adjustment (FM) .....	34
1.4.5 Control circuit common terminals (SD, 5, SE) .....	36
1.4.6 Signal inputs by contactless switches .....	36
1.5 How to use the input signals (assigned terminals AU, RM, RH, STR) .....	37
1.5.1 Multi-speed setting (RL, RM, RH, REX signals): Pr. 60 to Pr. 63 setting "0, 1, 2, 8" Remote setting (RL, RM, RH signals): Pr. 60 to Pr. 63 setting "0, 1, 2" .....	37
1.5.2 Second function selection (RT signal): Pr. 60 to Pr. 63 setting "3" .....	37
1.5.3 Current input selection "AU signal": Pr. 60 to Pr. 63 setting "4" .....	37
1.5.4 Start self-holding selection (STOP signal): Pr. 60 to Pr. 63 setting "5" .....	38
1.5.5 Output shut-off (MRS signal): Pr. 60 to Pr. 63 setting "6" .....	38

1.5.6	External thermal relay input: Pr. 60 to Pr. 63 setting "7" .....	39
1.5.7	Jog operation (JOG signal): Pr. 60 to Pr. 63 setting "9" .....	39
1.5.8	Reset signal: Pr. 60 to Pr. 63 setting "10" .....	40
1.5.9	PID control valid terminal: Pr. 60 to Pr. 63 setting "14" .....	41
1.5.10	PU operation/external operation switchover: Pr. 60 to Pr. 63 setting "16" .....	41
1.6	Connection to the stand-alone option .....	42
1.6.1	Connection of the brake unit (FR-BU2).....	42
1.6.2	Connection of the brake unit (FR-BU).....	44
1.6.3	Connection of the brake unit (BU type).....	45
1.6.4	Connection of the high power factor converter (FR-HC).....	46
1.6.5	Connection of the power regeneration common converter (FR-CV).....	47
1.7	Handling of the RS-485 connector .....	48
1.7.1	Connection of the parameter unit (FR-PU04) .....	48
1.7.2	Wiring of RS-485 communication .....	48
1.8	Design information .....	52
1.9	Failsafe of the system which uses the inverter .....	53

## **2. FUNCTIONS**

**57**

---



---

2.1	Function (Parameter) list.....	58
2.2	List of parameters classified by purpose of use .....	71
2.3	Explanation of functions (parameters) .....	73
2.3.1	Torque boost (Pr. 0 , Pr. 46 ) .....	73
2.3.2	Maximum and minimum frequency (Pr. 1 , Pr. 2 ) .....	74
2.3.3	Base frequency, base frequency voltage (Pr.3 , Pr.19 , Pr.47 ).....	75
2.3.4	Multi-speed operation (Pr. 4, Pr. 5, Pr. 6, Pr. 24 to Pr. 27, Pr. 80 to Pr. 87)..	77
2.3.5	Acceleration/deceleration time (Pr. 7 , Pr. 8 , Pr. 20 , Pr. 44 , Pr. 45 ) .....	78
2.3.6	Selection and protection of a motor (Pr. 9 , Pr. 71 ) .....	80
2.3.7	DC injection brake (Pr. 10 , Pr. 11 , Pr. 12 ) .....	81
2.3.8	Starting frequency (Pr. 13 ) .....	82
2.3.9	Load pattern selection (Pr. 14 ) .....	83
2.3.10	Jog operation (Pr.15 , Pr.16 ) .....	84
2.3.11	RUN key rotation direction selection (Pr.17 ) .....	84
2.3.12	Stall prevention function and current limit function (Pr. 21 ) .....	85
2.3.13	Stall prevention (Pr. 22 , Pr. 23 , Pr. 28 ) .....	87
2.3.14	Acceleration/deceleration pattern (Pr. 29 ) .....	89
2.3.15	Extended function display selection (Pr. 30 ) .....	90
2.3.16	Frequency jump (Pr. 31 to Pr. 36 ) .....	90
2.3.17	Speed display (Pr. 37 ) .....	91
2.3.18	Biases and gains of the frequency setting voltage (current) (Pr. 38 , Pr. 39 , C2 to C7 ) .....	92

- 2.3.19 Start-time earth (ground) fault detection selection (Pr. 40 ) ..... 96
- 2.4 Output terminal function ..... 96
  - 2.4.1 Up-to-frequency sensitivity (Pr. 41 ) ..... 96
  - 2.4.2 Output frequency detection (Pr. 42 , Pr. 43 )..... 97
- 2.5 Current detection function ..... 98
  - 2.5.1 Output current detection functions (Pr. 48 , Pr. 49 )..... 98
  - 2.5.2 Zero current detection (Pr. 50 , Pr. 51 )..... 99
- 2.6 Display function ..... 100
  - 2.6.1 Monitor display (Pr. 52 , Pr. 54 ) ..... 100
  - 2.6.2 Setting dial function selection (Pr. 53 ) ..... 101
  - 2.6.3 Monitoring reference (Pr. 55 , Pr. 56 ) ..... 102
- 2.7 Restart operation ..... 102
  - 2.7.1 Restart setting (Pr. 57 , Pr. 58 ) ..... 102
- 2.8 Additional function ..... 105
  - 2.8.1 Remote setting function selection (Pr. 59 ) ..... 105
- 2.9 Terminal function selection ..... 109
  - 2.9.1 Input terminal function selection (Pr. 60 , Pr. 61 , Pr. 62 , Pr. 63 ) ..... 109
  - 2.9.2 Output terminal function selection (Pr. 64 , Pr. 65 ) ..... 111
- 2.10 Operation selection function ..... 112
  - 2.10.1 Retry function (Pr. 66 , Pr. 67 , Pr. 68 , Pr. 69 ) ..... 112
  - 2.10.2 PWM carrier frequency (Pr. 70 , Pr. 72 ) ..... 114
  - 2.10.3 Voltage input selection (Pr. 73 ) ..... 115
  - 2.10.4 Input filter time constant (Pr. 74 ) ..... 116
  - 2.10.5 Reset selection/PU stop selection (Pr. 75 ) ..... 116
  - 2.10.6 Cooling fan operation selection (Pr. 76 ) ..... 118
  - 2.10.7 Parameter write disable selection (Pr. 77 ) ..... 119
  - 2.10.8 Reverse rotation prevention selection (Pr. 78 ) ..... 120
  - 2.10.9 Operation mode selection (Pr. 79 ) ..... 120
  - 2.10.10 PID control (Pr. 88 to Pr. 94 ) ..... 124
- 2.11 Auxiliary function ..... 132
  - 2.11.1 Slip compensation (Pr. 95 , Pr. 96 , Pr. 97 ) ..... 132
  - 2.11.2 Automatic torque boost selection (Pr. 98 ) ..... 133
  - 2.11.3 Motor primary resistance (Pr. 99 ) ..... 134
- 2.12 Maintenance function ..... 134
  - 2.12.1 Maintenance output function (H1, H2 ) ..... 134
  - 2.12.2 Output phase failure protection selection (H8 ) ..... 135
- 2.13 Calibration parameters ..... 137
  - 2.13.1 Meter (frequency meter) calibration (C1 ) ..... 137
- 2.14 Clear parameters ..... 140
  - 2.14.1 Parameter clear (CLr ) ..... 140

2.14.2 Alarm history clear (ECL ).....	140
<b>2.15 Communication parameters .....</b>	<b>141</b>
2.15.1 Communication settings (n1 to n7 , n11 ) .....	143
2.15.2 Operation and speed command source (n8 , n9 ) .....	158
2.15.3 Link startup mode selection (n10 ) .....	159
2.15.4 EEPROM write selection (n12 ) .....	161
<b>2.16 Parameter unit (FR-PU04) setting.....</b>	<b>162</b>
2.16.1 PU display language selection (n13 ) .....	162
2.16.2 PU buzzer control (n14 ) .....	162
2.16.3 PU contrast adjustment (n15 ) .....	163
2.16.4 PU main display screen data selection (n16 ) .....	163
2.16.5 Disconnected PU detection/PU setting lock selection (n17 ) .....	164

### **3. PROTECTIVE FUNCTIONS 167**

---

<b>3.1 Errors (Alarms).....</b>	<b>168</b>
3.1.1 Error (alarm) definitions .....	169
3.1.2 To know the operating status at the occurrence of alarm (only when FR-PU04 is used) .....	177
3.1.3 Correspondence between digital and actual characters .....	177
3.1.4 Resetting the inverter .....	177
<b>3.2 Troubleshooting .....</b>	<b>178</b>
3.2.1 Motor remains stopped .....	178
3.2.2 Motor rotates in opposite direction .....	179
3.2.3 Speed greatly differs from the setting .....	179
3.2.4 Acceleration/deceleration is not smooth .....	179
3.2.5 Motor current is large .....	179
3.2.6 Speed does not increase .....	179
3.2.7 Speed varies during operation .....	179
3.2.8 Operation mode is not changed properly .....	180
3.2.9 Operation panel display is not operating .....	180
3.2.10 Parameter write cannot be performed .....	180
3.2.11 Motor produces annoying sound .....	180
<b>3.3 Precautions for maintenance and inspection .....</b>	<b>181</b>
3.3.1 Precautions for maintenance and inspection .....	181
3.3.2 Inspection item .....	181
3.3.3 Periodic inspection .....	181
3.3.4 Insulation resistance test using megger .....	182
3.3.5 Pressure test .....	182
3.3.6 Daily and periodic inspection .....	183
3.3.7 Replacement of parts .....	186
3.3.8 Measurement of main circuit voltages, currents and powers .....	191

<b>4. SPECIFICATIONS</b>	<b>195</b>
4.1 Specification list.....	196
4.1.1 Ratings.....	196
4.1.2 Common specifications .....	198
4.2 Outline dimension drawings .....	200
<b>APPENDIX</b>	<b>205</b>
APPENDIX 1 Parameter instruction code list.....	206
APPENDIX 2 SERIAL number check.....	211

# 1. WIRING

This chapter explains the basic "wiring" for use of this product. Always read the instructions before use.

For description of "installation", refer to the instruction manual (basic).

<b>1.1 Standard connection diagram and terminal specifications .....</b>	<b>2</b>
<b>1.2 Main circuit terminals .....</b>	<b>7</b>
<b>1.3 How to use the control circuit terminals .....</b>	<b>25</b>
<b>1.4 Input terminals .....</b>	<b>28</b>
<b>1.5 How to use the input signals (assigned terminals AU, RM, RH, STR) .....</b>	<b>37</b>
<b>1.6 Connection to the stand-alone option .....</b>	<b>36</b>
<b>1.7 Handling of the RS-485 connector .....</b>	<b>48</b>
<b>1.8 Design information .....</b>	<b>52</b>
<b>1.9 Failsafe of the system which uses the inverter</b>	<b>53</b>

## <Abbreviations>

### •PU

Operation panel and parameter unit (FR-PU04)

### •Inverter

Mitsubishi transistorized inverter FR-F500J series

### •FR-F500J

Mitsubishi transistorized inverter FR-F500J series

### •Pr.

Parameter number

### •Filter pack

FR-BFP

Chapter 1

Chapter 2


Chapter 3

Chapter 4

# 1.1 Standard connection diagram and terminal specifications

## 1.1.1 Standard connection diagram

●With filter pack

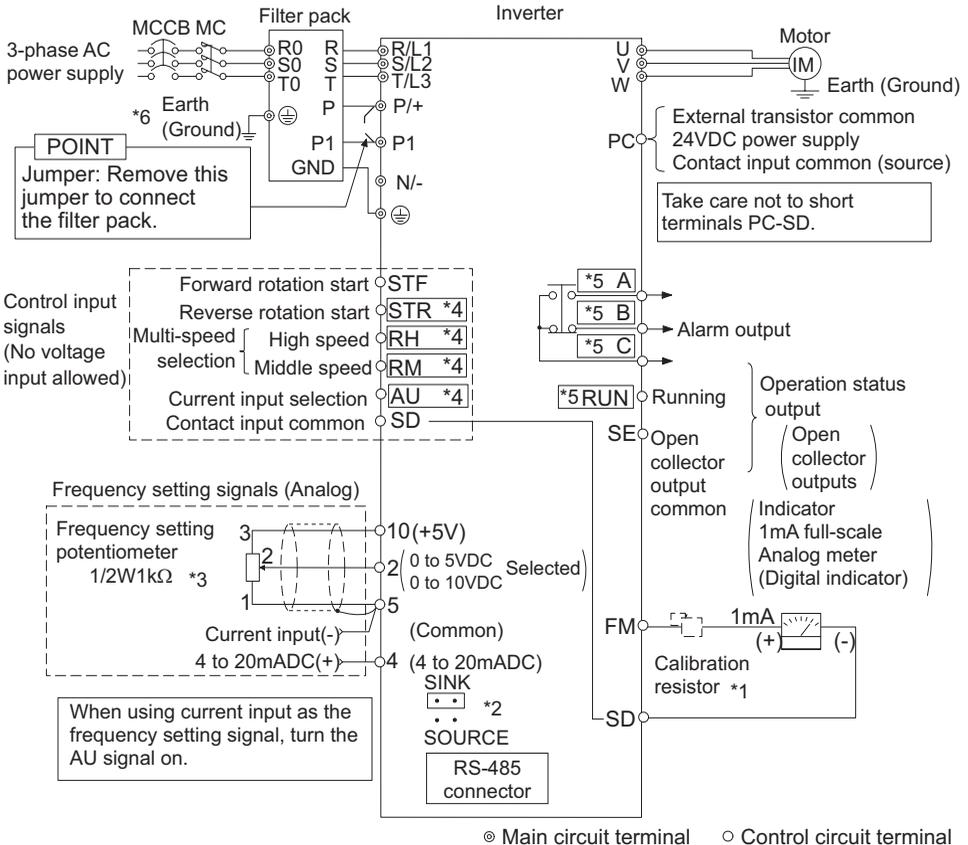


### REMARKS

- Not needed when the setting dial is used for calibration. Used when calibration must be made near the frequency meter for such a reason as a remote frequency meter. However, the frequency meter needle may not deflect to full-scale if the calibration resistor is connected. In this case, use this resistor and setting dial together.
- You can switch the position of sink and source logic. Refer to page 26.
- When the setting potentiometer is used frequently, use a 2W1kΩ potentiometer.
- The terminal functions change with input terminal function selection (Pr. 60 to Pr. 63). (Refer to page 109.) (RES, RL, RM, RH, RT, AU, STOP, MRS, OH, REX, JOG, X14, X16, (STR) signal selection)
- The terminal function changes with the setting of output terminal function selection (Pr. 64, Pr. 65). (Refer to page 111.) (RUN, SU, OL, FU, RY, Y12, Y13, FDN, FUP, RL, Y95, LF, ABC signal selection)
- Connect the GND cable of the filter pack to the earth (ground) terminal of the inverter. Use the earth (ground) terminal of the filter pack to earth (ground). For inverter earthing (grounding), earth (ground) the inverter through the filter pack.

### CAUTION

To prevent a malfunction due to noise, keep the signal cables more than 10cm away from the power cables.

- Without filter pack

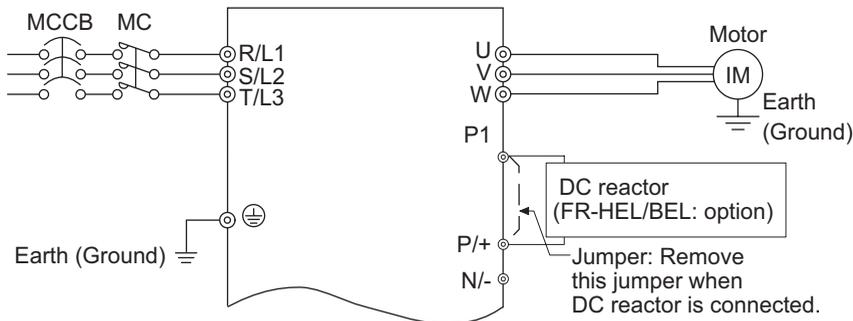

## 1.1.2 Explanation of main circuit terminals

### (1) Main circuit

- Inverter

Terminal Symbol	Terminal Name	Description
R/L1, S/L2, T/L3	AC power input	Connect the R, S, T cables of the filter pack to these terminals. <b>REMARKS</b> For the inverter without filter pack, connect these to the commercial power supply.
U, V, W	Inverter output	Connect to a three-phase squirrel-cage motor.
N/-	DC voltage common	DC voltage common terminal. This is not insulated from the power and inverter output.
P/+, P1	Filter pack connection	Remove the jumper across terminals P-P1 and connect the P and P1 cables of the filter pack. <b>REMARKS</b> For the inverter without filter pack, remove the jumper across terminals P-P1 and connect the optional DC reactor (FR-HEL/BEL).
⊕	Earth (Ground)	For earthing (grounding) the inverter chassis. Connect the GND cable of the filter pack. <b>REMARKS</b> Earth (Ground) the inverter without filter pack.

● Filter pack

Terminal Symbol	Terminal Name	Description
R0, S0, T0	Commercial power supply input	Connect to the commercial power supply.
	Earth (Ground)	For earthing (grounding) the filter pack. Must be earthed (grounded).

Crimping Terminal Symbol	Terminal Name	Cable Color	Description
R, S, T	Inverter power supply	Black	Connect to the R, S, T of the inverter.
P, P1	DC reactor terminal	Red	Remove the jumper across terminals P-P1 and connect to the P and P1 terminals of the inverter.
GND	Inverter earth (ground) connection	Green and yellow stripes	Connect to the earth (ground) terminal of the inverter. (Refer to page 2.)

## (2) Control circuit

Symbol		Terminal Name	Definition	
Contact input	STF	<b>Forward rotation start</b>	Turn on the STF signal to start forward rotation and turn it off to stop.	When the STF and STR signals are turned on simultaneously, the stop command is given.
	STR	<b>Reverse rotation start</b>	Turn on the STR signal to start reverse rotation and turn it off to stop.	
	RH RM	<b>Multi-speed selection</b>	Turn on the RH, RM signals in appropriate combinations to select multiple speeds. The priorities of the speed commands are in order of jog, multi-speed setting (RH, RM, RL, REX) and AU.	The terminal functions change with input terminal function selection (Pr. 60 to Pr.63). (*3)
	AU	<b>Current input selection</b>	Only when the AU signal is turned on, the inverter can be operated with the 4 to 20mADC frequency setting signal. Turning the AU signal on makes voltage input (across terminals 2-5) invalid.	
Input signals	SD (*1, *6)	<b>Contact input common (sink) (initial setting)</b>	Common terminal for contact input terminal (sink logic) and terminal FM.	
		<b>External transistor common (source)</b>	When connecting the transistor output (open collector output), such as a programmable controller, when source logic is selected, connect the external power supply common for transistor output to this terminal to prevent a malfunction caused by undesirable currents.	
		<b>24VDC power supply common</b>	Common output terminal for 24VDC 0.1A power supply (PC terminal). Isolated from terminals 5 and SE.	
	PC (*1)	<b>External transistor common (sink) (initial setting)</b>	When connecting the transistor output (open collector output), such as a programmable controller, when sink logic is selected, connect the external power supply common for transistor output to this terminal to prevent a malfunction caused by undesirable currents.	
		<b>Contact input common (source)</b>	Common terminal for contact input terminal (source logic).	
		<b>24VDC power supply</b>	Can be used as 24VDC 0.1A power supply.	
10	<b>Frequency setting power supply</b>	5VDC, Permissible load current 10mA.		


Symbol		Terminal Name	Definition	
Input signals	Frequency setting	2	<b>Frequency setting (voltage signal)</b>	Inputting 0 to 5VDC (or 0 to 10V) provides the maximum output frequency at 5V (10V) and makes input and output proportional. Switch between 5V and 10V using Pr. 73 "0-5V, 0-10V selection". Input resistance 10kΩ. Maximum permissible input voltage 20V
		4	<b>Frequency setting (current signal)</b>	Input 4 to 20mADC. It is factory set at 0Hz for 4mA and at 60Hz for 20mA. Maximum permissible input current 30mA. Input resistance approximately 250Ω. Turn ON signal AU for current input. Turning the AU signal on makes voltage input invalid. Use any of Pr. 60 to Pr. 63 (input terminal function selection) to set the AU signal.
	5	<b>Frequency setting input common</b>	Frequency setting signal (terminal 2, 4) common terminal. Do not earth (ground).	
Output signals	Open collector	A B C	<b>Alarm output</b>	1 changeover contact output indicates that the inverter protective function has activated and the output stopped. 230VAC 0.3A, 30VDC 0.3A. Alarm: discontinuity across B-C (continuity across A-C), Normal: continuity across B-C (discontinuity across A-C).(*5)
		RUN	<b>Inverter running</b>	Switched low when the inverter output frequency is equal to or higher than the starting frequency (factory set to 0.5Hz variable). Switched high during stop or DC injection brake operation. (*2) Permissible load 24VDC 0.1A (a voltage drop is 3.4V maximum when the signal is on)
	SE	<b>Open collector common</b>	Common terminal for inverter running terminal RUN. (*6)	The function of the terminals changes according to the output terminal function selection (Pr. 64, Pr.65). (*4)
	Indicator	FM	<b>For meter</b>	
Communication	—	<b>RS-485 connector</b>	Using the parameter unit connection cable (FR-CB201 to 205), the parameter unit (FR-PU04) can be connected. Communication operation can be performed using RS-485. For details of RS-485 communication, refer to page 48.	

- \*1. Do not connect terminals SD and PC each other or to the earth (ground). For sink logic (factory setting), terminal SD acts as the common terminal of contact input. For source logic, terminal PC acts as the common terminal of contact input. (Refer to page 26 for switching method.)
- \*2. Low indicates that the open collector output transistor is on (conducts). High indicates that the transistor is off (does not conduct).
- \*3. RL, RM, RH, RT, AU, STOP, MRS, OH, REX, JOG, RES, X14, X16, (STR) signal selection (Refer to page 109.)
- \*4. RUN, SU, OL, FU, RY, Y12, Y13, FDN, FUP, RL, Y95, LF, ABC signal selection (Refer to page 111.)
- \*5. To be compliant with the European Directive (Low Voltage Directive), the operating capacity of relay outputs (A, B, C) should be 30VDC 0.3A.
- \*6. Terminals SD, SE and 5 are isolated from each other. Do not earth (ground). Avoid connecting the terminal SD and 5 and the terminal SE and 5.


## 1.2 Main circuit terminals

### 1.2.1 Terminal block layout


- FR-F520J-0.4K, 0.75K

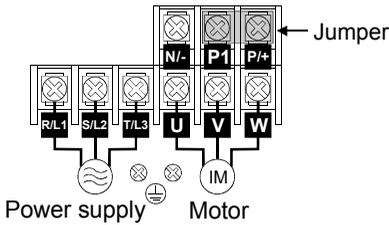


- FR-F520J-1.5K, 2.2K, 3.7K
- FR-F540J-0.4K, 0.75K, 1.5K, 2.2K, 3.7K

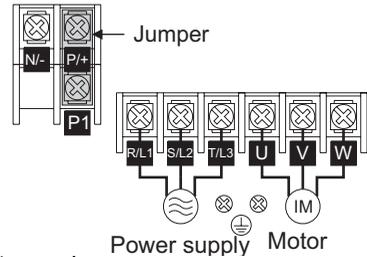


- FR-F520J-5.5K, 7.5K, 11K, 15K
- FR-F540J-5.5K, 7.5K, 11K, 15K

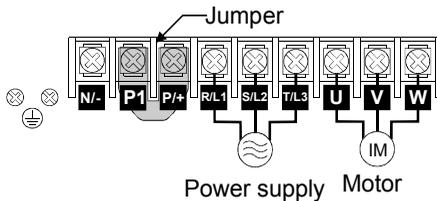

- Filter pack  
FR-BFP-(H)0.4K to (H)15K

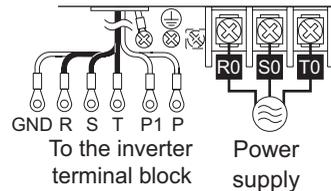

- Connection of the inverter and filter pack  
(For details, refer to the instruction manual (basic).)

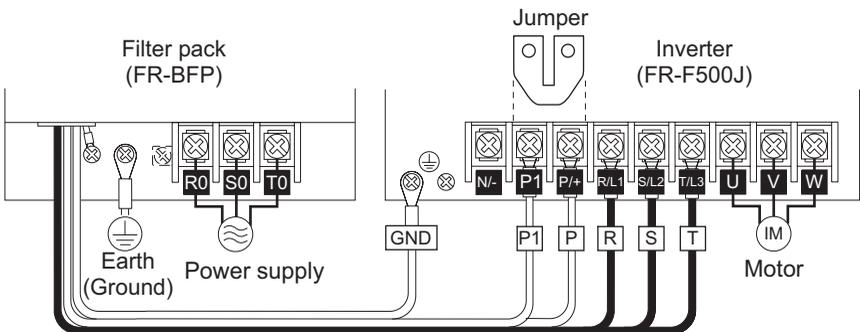

#### CAUTION

- Make sure the power cables are connected to the R0, S0, T0 of the filter pack (FR-BFP) (If using the inverter without filter pack, connect to the R, S, T of the inverter). Never connect the power cable to the U, V, W of the inverter. (Phase need not be matched)
- Connect the motor to U, V, W. At this time, turning on the forward rotation switch (signal) rotates the motor in the counterclockwise direction when viewed from the motor shaft.
- When connecting the filter pack, make sure the jumper across the terminals P1-P of the inverter is removed.

## 1.2.2 Cables, wiring length, and crimping terminals

The following table indicates a selection example for the wiring length of 20m. <200V class>

Applicable Inverter	Terminal Screw size	Tightening Torque N·m	Crimping Terminal		Cable Sizes					
					HIV Cable (mm <sup>2</sup> )		AWG		PVC Cable (mm <sup>2</sup> )	
					R, S, T	U, V, W	R, S, T	U, V, W	R, S, T	U, V, W
FR-F520J-0.4K to 0.75K	M3.5	1.2	2-3.5	2-3.5	2	2	14	14	2.5	2.5
FR-F520J-1.5K, 2.2K	M4	1.5	2-4	2-4	2	2	14	14	2.5	2.5
FR-F520J-3.7K	M4	1.5	5.5-4	5.5-4	3.5	3.5	12	12	4	2.5
FR-F520J-5.5K	M5	2.5	5.5-5	5.5-5	5.5	5.5	10	10	6	6
FR-F520J-7.5K	M5	2.5	14-5	8-5	14	8	6	8	16	10
FR-F520J-11K	M5	2.5	14-5	14-5	14	14	6	6	16	16
FR-F520J-15K	M6	4.4	22-6	22-6	22	22	4	4	25	25

<400V class>

Applicable Inverter	Terminal Screw size	Tightening Torque N·m	Crimping Terminal		Cable Sizes					
					HIV Cable (mm <sup>2</sup> )		AWG		PVC Cable (mm <sup>2</sup> )	
					R, S, T	U, V, W	R, S, T	U, V, W	R, S, T	U, V, W
FR-F540J-0.4K to 3.7K	M4	1.5	2-4	2-4	2	2	14	14	2.5	2.5
FR-F540J-5.5K	M4	1.5	5.5-4	2-4	3.5	2	12	14	4	2.5
FR-F540J-7.5K	M4	1.5	5.5-4	5.5-4	3.5	3.5	12	12	4	4
FR-F540J-11K	M4	1.5	5.5-4	5.5-4	5.5	5.5	10	10	6	6
FR-F540J-15K	M6	4.4	14-6	8-6	14	8	6	8	16	10

\*The terminal screw size of the filter pack (FR-BFP) is the same as that of the inverter.

Wiring length

- FR-F540J-0.4K ..... 50m or less
- FR-F520J-0.4K to 3.7K  
FR-F540J-0.75K to 3.7K ..... 100m or less
- FR-F520J-5.5K to 15K  
FR-F540J-5.5K to 15K ..... 500m or less

### CAUTION

- If the wiring length of the FR-F540J-0.4K or 0.75K is 30m or more, use the carrier frequency of 1kHz.
- When automatic torque boost is selected in Pr. 98 "automatic torque boost selection (motor capacity)", the wiring length must be 30m maximum. (Refer to page 133.)
- If the wiring distance between the inverter and motor is long, the motor torque will decrease due to the voltage drop of the main circuit cable (especially at low-frequency output).  
Use thick cables so that a voltage drop is 2% or less.

### 1.2.3 Wiring instructions

- 1) Use crimping terminals with insulation sleeve to wire the power supply and motor.
- 2) Application of power to the output terminals (U, V, W) of the inverter will damage the inverter. Never perform such wiring.
- 3) After wiring, wire offcuts must not be left in the inverter (filter pack).  
Wire offcuts can cause an alarm, failure or malfunction. Always keep the inverter clean.  
When drilling mounting holes in an enclosure etc., take care not to allow chips and other foreign matter to enter the inverter.
- 4) Use cables of the recommended size to make a voltage drop 2% maximum.  
If the wiring distance is long between the inverter and motor, a main circuit cable voltage drop will cause the motor torque to decrease especially at the output of a low frequency.
- 5) For long distance wiring, the high response current limit function may be reduced or the devices connected to the secondary side may malfunction or become faulty under the influence of a charging current due to the stray capacity of wiring.  
Therefore, note the maximum overall wiring length.
- 6) Electromagnetic wave interference  
The input/output (main circuit) of the inverter includes high frequency components, which may interfere with the communication devices (such as AM radios) used near the inverter. When using the inverter without the filter pack, install a FR-BIF(-H) optional radio noise filter (for use on the input side only) or FR-BSF01 or FR-BLF line noise filter to minimize interference.
- 7) Do not install a power capacitor, surge suppressor or radio noise filter (FR-BIF(-H) option) on the output side of the inverter.  
This will cause the inverter to trip or the capacitor and surge suppressor to be damaged. If any of the above devices are connected, remove them.
- 8) Before starting wiring or other work after the inverter is operated, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous.

## 1.2.4 Selection of peripheral devices

Check the inverter type of the inverter you purchased. Appropriate peripheral devices must be selected according to the capacity.

Refer to the following list and prepare appropriate peripheral devices:

<200V class>


Motor Output (kW)	Inverter Type	Moulded Case Circuit Breaker (MCCB)(*1, *3) or Earth Leakage Circuit Breaker (ELB) (*2, *3)		Magnetic Contactor (MC)
		With filter pack	Without filter pack	
0.4	FR-F520J-0.4K	30AF/5A	30AF/5A	S-N10
0.75	FR-F520J-0.75K	30AF/10A	30AF/10A	S-N10
1.5	FR-F520J-1.5K	30AF/15A	30AF/15A	S-N10
2.2	FR-F520J-2.2K	30AF/15A	30AF/20A	S-N10
3.7	FR-F520J-3.7K	30AF/30A	30AF/30A	S-N20,S-N21
5.5	FR-F520J-5.5K	50AF/40A	50AF/50A	S-N25
7.5	FR-F520J-7.5K	50AF/50A	100AF/60A	S-N35
11	FR-F520J-11K	100AF/75A	100AF/75A	S-N50
15	FR-F520J-15K	100AF/100A	225AF/125A	S-N65

<400V class>

Motor Output (kW)	Inverter Type	Moulded Case Circuit Breaker (MCCB)(*1, *3) or Earth Leakage Circuit Breaker (ELB)(*2, *3)		Magnetic Contactor (MC)
		With filter pack	Without filter pack	
0.4	FR-F540J-0.4K	30AF/5A	30AF/5A	S-N10
0.75	FR-F540J-0.75K	30AF/5A	30AF/5A	S-N10
1.5	FR-F540J-1.5K	30AF/10A	30AF/10A	S-N10
2.2	FR-F540J-2.2K	30AF/10A	30AF/15A	S-N10
3.7	FR-F540J-3.7K	30AF/15A	30AF/20A	S-N20, S-N21
5.5	FR-F540J-5.5K	30AF/20A	30AF/30A	S-N20, S-N21
7.5	FR-F540J-7.5K	30AF/30A	30AF/30A	S-N20, S-N21
11	FR-F540J-11K	50AF/40A	50AF/50A	S-N25
15	FR-F540J-15K	50AF/50A	100AF/60A	S-N35

\*1. • Select the MCCB according to the power supply capacity.

• Install one MCCB per inverter.



\*2. For installations in the United States or Canada, the circuit breaker must be inverse time or instantaneous trip type.

\*3. When the breaker on the inverter primary side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc.

Identify the cause of the trip, then remove the cause and power on the breaker.

## 1.2.5 Leakage current and installation of earth (ground) leakage circuit breaker

Due to static capacitances existing in the inverter I/O wiring and motor, leakage currents flow through them. Since their values depend on the static capacitances, carrier frequency, etc., take the following countermeasures.

### (1) To-earth (ground) leakage currents

Leakage currents may flow not only into the inverter's own line but also into the other line through the earth (ground) cable, etc.

These leakage currents may operate earth (ground) leakage circuit breakers and earth (ground) leakage relays unnecessarily.

#### ● Countermeasures

- If the carrier frequency setting is high, decrease the carrier frequency (Pr. 72) of the inverter.

Note that motor noise increases. Selection of Soft-PWM control (Pr. 70) will make it unoffending. (Factory setting)


- By using earth leakage circuit breakers designed for harmonic and surge suppression in the inverter's own line and other line, operation can be performed with the carrier frequency kept high (with low noise).

#### REMARKS

When the filter pack is provided, leakage current can be reduced by removing the earth (ground) cable for the capacitive filter and securing it with the supplied screw for leakage current countermeasure (plastic) and spacer (plastic). However, the noise reduction effect of the capacitive filter is lost.

(Pull out the earth (ground) cable for the capacitive filter a little to wire.)

<Mounting method>

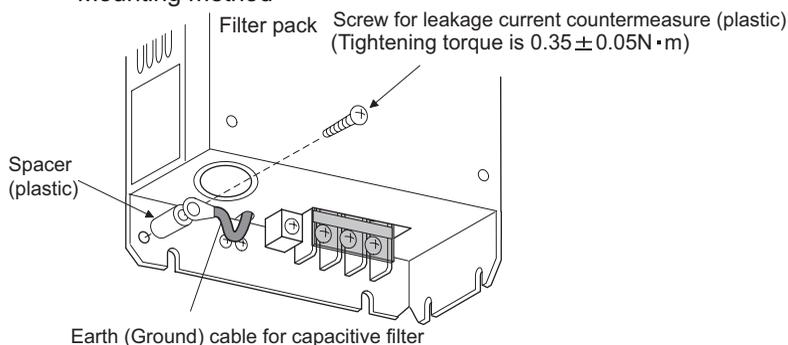


#### CAUTION

**If the earth (ground) cable for the capacitive filter is removed, it is charged while power is on or shortly after power off. Do not touch the earth (ground) cable as you may get an electric shock.**

## (2) Line-to-line leakage currents

Harmonics of leakage currents flowing in static capacities between the inverter output cables may operate the external thermal relay unnecessarily.

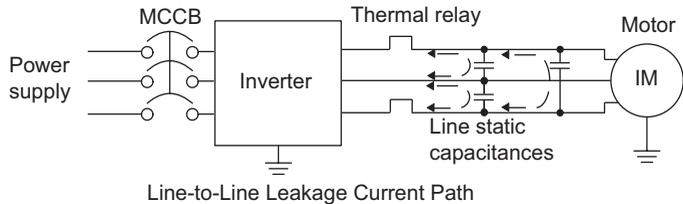

### ● Countermeasures

- Use the electronic thermal relay function of the inverter.
- Decrease the carrier frequency. Note that motor noise increases. Selection of Soft-PWM (Pr. 70) makes it unoffending.

To ensure that the motor is protected against line-to-line leakage currents, it is recommended to use a temperature sensor to directly detect motor temperature.

### ● Installation and selection of moulded case circuit breaker

Install a moulded case circuit breaker (MCCB) on the power receiving side to protect the wiring of the inverter primary side. Select the MCCB according to the power supply side power factor (which depends on the power supply voltage, output frequency and load). Especially for a completely electromagnetic MCCB, one of a slightly large capacity must be selected since its operation characteristic varies with harmonic currents. (Check it in the data of the corresponding breaker.) As an earth (ground) leakage breaker, use the Mitsubishi earth (ground) leakage breaker designed for harmonics and surge suppression. (Refer to page 10 for the recommended models.)

## CAUTION


- Select the MCCB according to the inverter power supply capacity.
- Install one MCCB per inverter.
- The inverter has a protective function based on electronic overcurrent protection (electronic thermal relay function) to protect the motor from overheating. However, when running multiple motors with one inverter or operating a multi-pole motor, provide a thermal relay (OCR) between the inverter and motor. In this case, set the electronic thermal relay function (electronic overcurrent protection) of the inverter to 0A. And set the electronic overcurrent relay, add the line-to-line leakage current to 1.0 times the current value at 50 Hz on the motor rating plate or to 1.1 times the current value at 60 Hz.
- When the FR-BFP (filter pack) is used, leakage current is 4mA.(8mA for 400V class.) (equivalent to one-phase of cable for the three-phase three wire connection)

### (3) Selecting the rated sensitivity current for the earth leakage circuit breaker


When using the earth leakage circuit breaker with the inverter circuit, select its rated sensitivity current as follows, independently of the PWM carrier frequency:

- Breaker for harmonic and surge  
 Rated sensitivity current:  
 $I_{\Delta n} \geq 10 \times (I_{g1} + I_{gn} + I_{g2} + I_{gm})$
  - Standard breaker  
 Rated sensitivity current:  
 $I_{\Delta n} \geq 10 \times \{I_{g1} + I_{gn} + 3 \times (I_{g2} + I_{gm})\}$
- $I_{g1}, I_{g2}$  : Leakage currents of cable path during commercial power supply operation
- $I_{gn}$  : Leakage current of noise filter on inverter input side
- $I_{gm}$  : Leakage current of motor during commercial power supply operation


Example of leakage current per 1km in cable path during commercial power supply operation when the CV cable is routed in metal conduit (200V 60Hz)

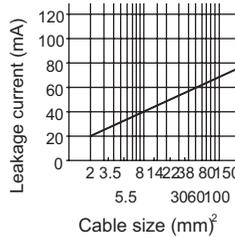

Leakage current example of three-phase induction motor during commercial power supply operation (200V 60Hz)

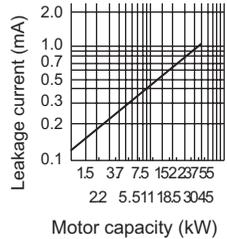

<Example>

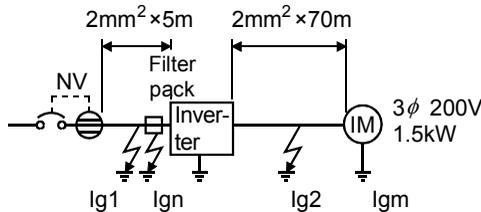

	Breaker for Harmonic and Surge	Standard Breaker
Leakage current ( $I_{g1}$ ) (mA)	$20 \times \frac{5m}{1000m} = 0.10$	
Leakage current ( $I_{gn}$ ) (mA)	0 (without filter pack)	
Leakage current ( $I_{g2}$ ) (mA)	$20 \times \frac{70m}{1000m} = 1.40$	
Motor leakage current ( $I_{gm}$ ) (mA)	0.16	
Total leakage current (mA)	1.66	4.78
Rated sensitivity current (mA) ( $\geq I_g \times 10$ )	30	100

1  
WIRING

---

**CAUTION**

---

- The earth (ground) leakage circuit breaker should be installed to the primary (power supply) side of the inverter.
  - In the  connection neutral point earth (grounded) system, the sensitivity current becomes worse for earth (ground) faults on the inverter secondary side. Earthing (Grounding) must conform to the requirements of national and local safety regulations and electrical codes. (NEC section 250, IEC 536 class 1 and other applicable standards)
  - When the breaker is installed on the secondary side of the inverter, it may be unnecessarily operated by harmonics if the effective value is less than the rating. In this case, do not install the breaker since the eddy current and hysteresis loss increase and the temperature rises.
  - General products indicate the following models: BV-C1, BC-V, NVB, NV-L, NV-G2N, NV-G3NA, NV-2F, earth (ground) leakage relay (except NV-ZHA), NV with AA neutral wire open-phase protection  
The other models are designed for harmonic and surge suppression: NV-C/  
NV-S/MN series, NV30-FA, NV50-FA, BV-C2, earth (ground) leakage alarm breaker (NF-Z), NV-ZHA, NV-H
-

## 1.2.6 Power-off and magnetic contactor (MC)

### (1) Inverter input side magnetic contactor (MC)

On the inverter's input side, it is recommended to provide an MC for the following purposes. (Refer to page 10 for selection)

- 1) To release the inverter from the power supply when the inverter protective function is activated or the drive becomes faulty (e.g. emergency stop operation)
- 2) To prevent any accident due to an automatic restart at restoration of power after an inverter stop made by a power failure
- 3) To rest the inverter for an extended period of time

The control power supply for inverter is always running and consumes a little power. When stopping the inverter for an extended period of time, powering off the inverter will save power slightly.

- 4) To separate the inverter from the power supply to ensure safe maintenance and inspection work


The inverter's input side MC is used for the above purpose, select class JEM1038-AC3 for the inverter input side current when making an emergency stop during normal operation.

#### REMARKS

The MC may be switched on/off to start/stop the inverter. However, since repeated inrush currents at power on will shorten the life of the converter circuit (switching life is about 100,000 times), frequent starts and stops must be avoided. Turn on/off the inverter start controlling terminals (STF, STR) to run/stop the inverter.

As shown on the right, always use the start signal (ON or OFF across terminals STF or STR-SD) to make a start or stop. (Refer to page 28)

- \*1. When the power supply is 400V class, install a step-down transformer.

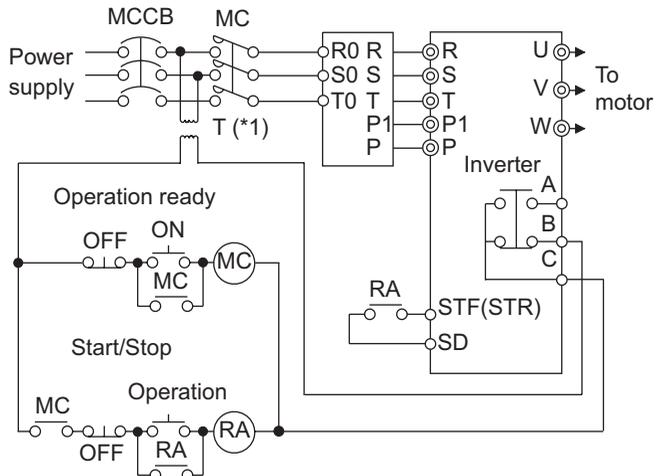


**Inverter Start/Stop Circuit Example  
(with filter pack)**

### (2) Handling of output side magnetic contactor

In principle, do not provide a magnetic contactor between the inverter and motor and switch it from off to on during operation. If it is switched on during inverter operation, a large inrush current may flow, stopping the inverter due to overcurrent shut-off. When an MC is provided for switching to the commercial power supply, for example, switch it on/off after the inverter and motor have stopped.

## 1.2.7 Regarding the installation of the reactor

When the inverter is installed near a large-capacity power transformer (500kVA or more with the wiring length of 10m (32.81feet) or less) or the power capacitor is to be switched, an excessive peak current will flow in the power supply input circuit, damaging the converter circuit. In such a case, always install the reactor (FR-HEL(-H)/FR-BEL(-H) or FR-HAL(-H)/FR-BAL(-H)). Since the filter pack includes a power factor improving DC reactor, a reactor need not be installed separately.

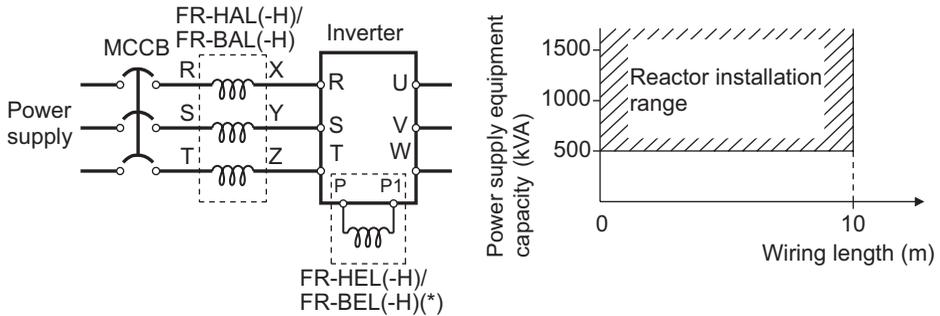

### REMARKS

\*When connecting the FR-HEL(-H)/FR-BEL(-H) (filter pack), remove the jumper across terminals P-P1.

The wiring length between the FR-HEL(-H)/FR-BEL(-H) and the inverter should be 5m maximum and as short as possible.

Use the cables which are equal in size to those of the main circuit. (Refer to page 8)

### CAUTION

- The power factor improving capacitor and surge suppressor on the inverter output side may be overheated or damaged by the high frequency components of the inverter output. Also, since an excessive current flows in the inverter to activate overcurrent protection, do not install a capacitor or surge suppressor. Use a power factor improving reactor for power factor improvement.
- If a surge voltage occurs in the power supply system, this surge energy may flow into the inverter, causing the inverter to display OV1, OV2 or OV3 and come to an alarm stop. In such a case, also install the optional FR-HEL(-H)/FR-BEL(-H) or FR-HAL(-H)/FR-BAL(-H) power factor improving reactor.


## 1.2.8 Regarding noise (EMI) and the installation of a noise filter

Some noise enters the inverter causing it to malfunction and others are generated by the inverter causing the malfunction of peripheral devices. Though the inverter is designed to have high immunity performance, it handles low-level signals, so it requires the following general countermeasures to be taken.

### (1) General countermeasures

- Do not run the power cables (I/O cables) and signal cables of the inverter in parallel with each other and do not bundle them.
- Use twisted shield cables for the detector connecting and control signal cables and connect the sheathes of the shield cables to terminal SD.
- Earth (Ground) the inverter, motor, etc. at one point.
- Capacitances exist between the inverter's I/O wiring, other cables, earth (ground) and motor, through which leakage currents flow to cause the earth leakage circuit breaker, earth (ground) leakage relay and external thermal relay to operate unnecessarily. To prevent this, take appropriate measures, e.g. set the carrier frequency in Pr. 72 to a low value, use an earth (ground) leakage circuit breaker designed for suppression of harmonics and surges, and use the electronic thermal relay function built in the inverter.
- The input and output of the inverter main circuit include high-degree harmonics, which may disturb communication devices (AM radios) and sensors used near the inverter.

<Noise (EMI) reduction examples>

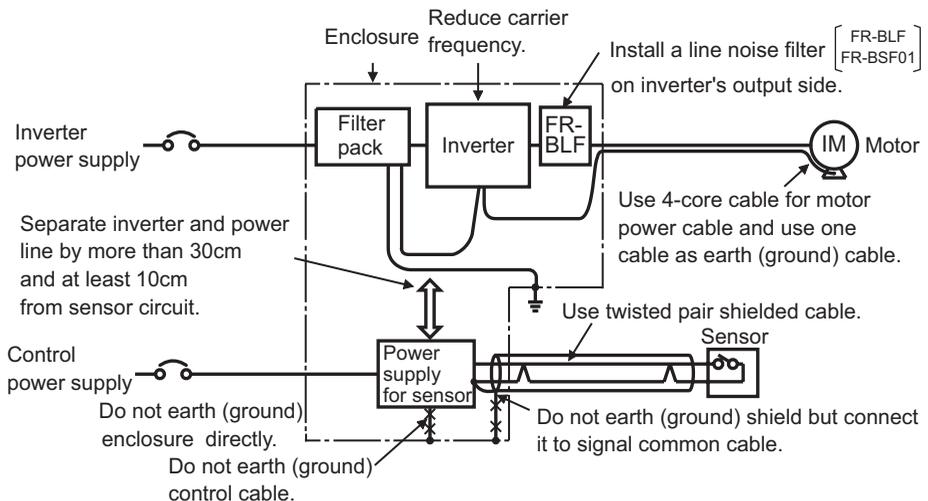

### REMARKS

For the inverter without filter pack, install a line noise filter (FR-BLF, FR-BSF01) or radio noise filter (FR-BIF) on the inverter input side as a noise reduction measure.

### CAUTION

For compliance with the EU, EMC directive, please refer the instruction manual (basic).


## 1.2.9 Earthing (Grounding) precautions

- Leakage currents flow in the inverter (filter pack). To prevent an electric shock, the inverter (filter pack) and motor must be earthed (grounded). Earthing (Grounding) must conform to the requirements of national and local safety regulations and electrical codes.  
(NEC section 250, IEC 536 class 1 and other applicable standards)
- Use the dedicated earth (ground) terminal to earth (ground) the inverter (filter pack). (Do not use the screw in the casing, chassis, etc.)  
Use a tinned\* crimping terminal to connect the earth (ground) cable. When tightening the screw, be careful not to damage the threads.  
\*Plating should not include zinc.
- Use the thickest possible earth (ground) cable. Use the cable whose size is equal to or greater than that indicated in the following table, and minimize the cable length. The earthing (grounding) point should be as near as possible to the inverter.

Motor Capacity	Earth (Ground) Cable Size (Unit: mm <sup>2</sup> )	
	200V class	400V class
2.2kW or less	2 (2.5)	2 (2.5)
3.7kW	3.5 (4)	2 (4)
5.5kW	5.5 (6)	3.5 (4)
7.5kW	14 (16)	3.5 (4)
11kW	14 (16)	5.5 (6)
15kW	22 (25)	14 (16)

For use as a product compliant with the Low Voltage Directive, use PVC cable whose size is indicated within parentheses.

- As a noise reduction technique, use one wire of the four-core cable with the earth (ground) terminal of the motor, and earth (ground) at one point from the filter pack side via the inverter. (Refer to page 2.)

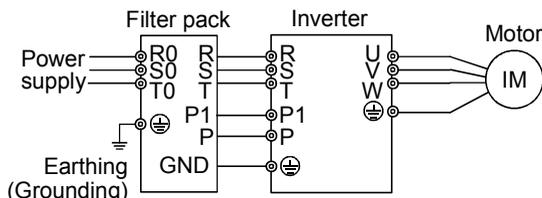

(For the type without filter pack, earth (ground) the motor with the inverter at one point on the inverter side.)

### CAUTION

**When the inverter is run in the low acoustic noise mode, more leakage currents occur than in the non-low acoustic noise mode due to high-speed switching operation. Always earth (ground) the inverter, motor and filter pack before use.**

## 1.2.10 Power supply harmonics

The inverter may generate power supply harmonics from its converter circuit to affect the power generator, power capacitor etc. Power supply harmonics are different from noise and leakage currents in source, frequency band and transmission path. Take the following countermeasure suppression techniques.

- The following table indicates differences between harmonics and noise:


Item	Harmonics	Noise
Frequency	Normally 40th to 50th degrees or less (up to 3kHz or less)	High frequency (several 10kHz to 1GHz order)
Environment	To-electric channel, power impedance	To-space, distance, wiring path
Quantitative understanding	Theoretical calculation possible	Random occurrence, quantitative grasping difficult
Generated amount	Nearly proportional to load capacity	Change with current variation ratio (larger as switching speed increases)
Affected equipment immunity	Specified in standard per equipment	Different depending on maker's equipment specifications
Suppression example	Provide reactor.*	Increase distance.

\*The filter pack (FR-BFP) produces the same effect as when the DC reactor (FR-HEL(-H)/FR-BEL(-H)) is connected.

- Suppression technique

Harmonic currents produced on the power supply side by the inverter change with such conditions as whether there are wiring impedances and a DC reactor (FR-HEL(-H)/FR-BEL(-H) or FR-HAL(-H)/FR-BAL(-H)) and the magnitudes of output frequency and output current on the load side.

For the output frequency and output current, we understand that they should be calculated in the conditions under the rated load at the maximum operating frequency.

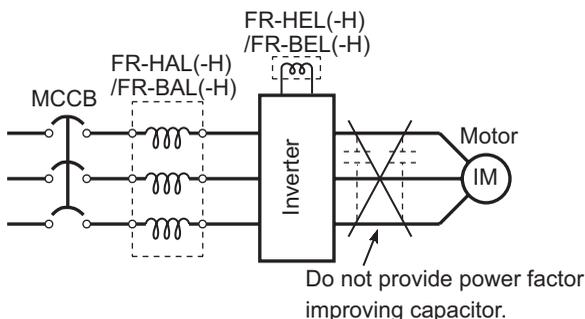

### CAUTION

The power factor improving capacitor and surge suppressor on the inverter output side may be overheated or damaged by the high frequency components of the inverter output. Also, since an excessive current flows in the inverter to activate overcurrent protection, do not provide a capacitor and surge suppressor on the inverter output side when the motor is driven by the inverter. To improve the power factor, insert a reactor on the inverter's primary side or DC circuit. For full information, refer to page 16.

### 1.2.11 Harmonic suppression guideline

Harmonic currents flow from the inverter to a power receiving point via a power transformer. The harmonic suppression guideline was established to protect other consumers from these outgoing harmonic current.

The three-phase 200V input specifications 3.7kW or less are previously covered by "Harmonic suppression guideline for household appliances and general-purpose products" and other models are covered by "Harmonic suppression guideline for consumers who receive high voltage or special high voltage". However, the general-purpose inverter has been excluded from the target products covered by "Harmonic suppression guideline for household appliances and general-purpose products" in January 2004. Later, this guideline was repealed on September 6, 2004. All capacities of all models are now target products of "Harmonic suppression guideline for consumers who receive high voltage or special high voltage" (hereinafter referred to as "Guideline for specific consumers").


"Guideline for specific consumers"

This guideline sets forth the maximum values of harmonic currents outgoing from a high-voltage or especially high-voltage consumer who will install, add or renew harmonic generating equipment. If any of the maximum values is exceeded, this guideline requires that consumer to take certain suppression measures.

**Table 1 Maximum Values of Outgoing Harmonic Currents per 1kW Contract Power**

Received Power Voltage	5th	7th	11th	13th	17th	19th	23rd	Over 23rd
6.6 kV	3.5	2.5	1.6	1.3	1.0	0.9	0.76	0.70
22 kV	1.8	1.3	0.82	0.69	0.53	0.47	0.39	0.36
33 kV	1.2	0.86	0.55	0.46	0.35	0.32	0.26	0.24

**(1) Application of the guideline for specific consumers**

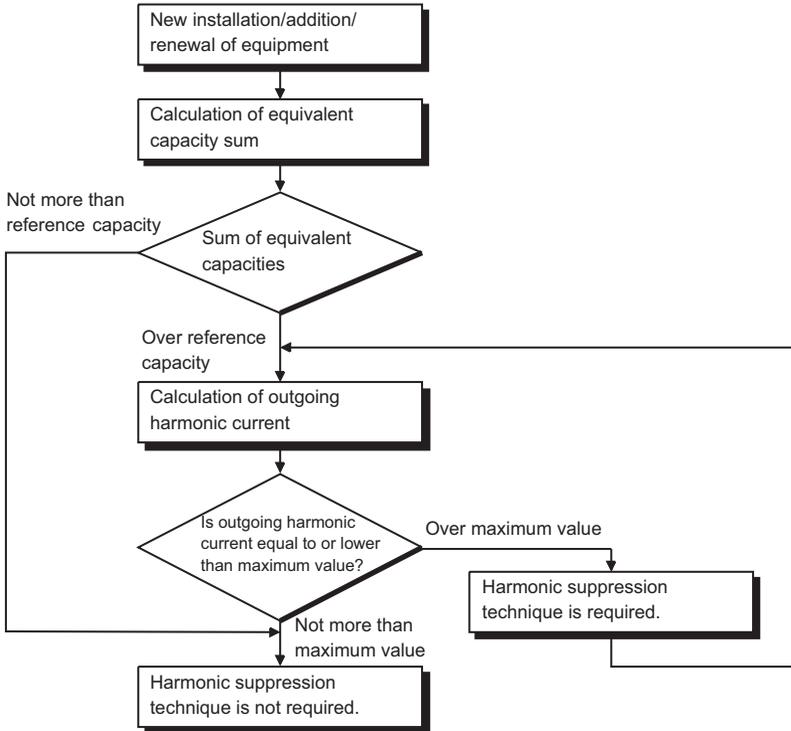

**Table 2 Conversion Factors for FR-F500J Series**

Class	Circuit Type		Conversion Factor (Ki)
3	Three-phase bridge (Capacitor-smoothed)	Without reactor	K31 = 3.4
		With reactor (AC side)	K32 = 1.8
		With reactor (DC side) or filter pack	K33 = 1.8
		With reactors (AC, DC sides)	K34 = 1.4

**Table 3 Equivalent Capacity Limits**

Received Power Voltage	Reference Capacity
6.6kV	50 kVA
22/33 kV	300 kVA
66kV or more	2000 kVA

1  
WIRING

**Table 4 Harmonic Contents (Values of the fundamental current of 100%)**

Reactor	5th	7th	11th	13th	17th	19th	23rd	25th
Not used	65	41	8.5	7.7	4.3	3.1	2.6	1.8
Used (AC side)	38	14.5	7.4	3.4	3.2	1.9	1.7	1.3
Used (DC side) or with filter pack	30	13	8.4	5.0	4.7	3.2	3.0	2.2
Used (AC, DC sides)	28	9.1	7.2	4.1	3.2	2.4	1.6	1.4

1) Calculation of equivalent capacity (P0) of harmonic generating equipment

The "equivalent capacity" is the capacity of a 6-pulse converter converted from the capacity of consumer's harmonic generating equipment and is calculated with the following equation. If the sum of equivalent capacities is higher than the limit in Table 3, harmonics must be calculated with the following procedure:

$$P0 = \sum (Ki \times Pi) \text{ [kVA]}$$

Ki: Conversion factor (refer to Table 2)

Pi: Rated capacity of harmonic generating equipment\* [kVA]

i: Number indicating the conversion circuit type

\* Rated capacity: Determined by the capacity of the applied motor and found in Table 5. It should be noted that the rated capacity used here is used to calculate a generated harmonic amount and is different from the power supply capacity required for actual inverter drive.

2) Calculation of outgoing harmonic current

$$\text{Outgoing harmonic current} = \frac{\text{fundamental wave current (value converted from received power voltage)} \times \text{operation ratio} \times \text{harmonic content}}{30 \text{ minutes}}$$

- Operation ratio: Operation ratio = actual load factor × operation time ratio during 30 minutes
- Harmonic content: Found in Table 4.

**Table 5 Rated Capacities and Outgoing Harmonic Currents for Inverter Drive (with filter pack)**

Applied Motor (kW)	Rated Current [A]	6.6kV Equivalent of Fundamental Wave Current (mA)	Rated Capacity (kVA)	Outgoing Harmonic Current Converted from 6.6kV (with filter pack, 100% operation ratio)							
				5th	7th	11th	13th	17th	19th	23rd	25th
0.4	0.81	49	0.57	14.7	6.37	4.12	2.45	2.30	1.57	1.47	1.08
0.75	1.37	83	0.97	24.9	10.76	6.97	4.15	3.90	2.66	2.49	1.83
1.5	2.75	167	1.95	50.10	21.71	14.03	8.35	7.85	5.34	5.01	3.67
2.2	3.96	240	2.81	72.00	31.20	20.16	12.00	11.28	7.68	7.20	5.28
3.7	6.50	394	4.61	118.2	51.2	33.10	19.70	18.52	12.61	11.82	8.67
5.5	9.55	579	6.77	173.7	75.27	48.64	28.95	27.21	18.53	17.37	12.74
7.5	12.8	776	9.07	232.8	100.9	65.18	38.80	36.47	24.83	23.28	17.07
11	18.5	1121	13.1	336.3	145.7	94.16	56.05	52.69	35.87	33.63	24.66
15	24.9	1509	17.6	452.7	196.2	126.8	75.45	70.92	48.29	45.27	33.20

### 3) Harmonic suppression technique requirement

If the outgoing harmonic current is higher than; maximum value per 1kW (contract power) × contract power, a harmonic suppression technique is required.

### 4) Harmonic suppression techniques

No.	Item	Description
1	Reactor installation (ACL, DCL)	Install a reactor (ACL) in the AC side of the inverter or a reactor (DCL) in its DC side or both to suppress outgoing harmonic currents. (The DC reactor has already been installed in the type with filter pack.)
2	Installation of power factor improving capacitor	When used with a series reactor, the power factor improving capacitor has an effect of absorbing harmonic currents.
3	Transformer multi-phase operation	Use two transformers with a phase angle difference of 30° as in  $\Delta$ , $\Delta$ - $\Delta$ combination to provide an effect corresponding to 12 pulses, reducing low-degree harmonic currents.
4	Passive (AC filter)	A capacitor and a reactor are used together to reduce impedances at specific frequencies, producing a great effect of absorbing harmonic currents.
5	Active filter	This filter detects the current of a circuit generating a harmonic current and generates a harmonic current equivalent to a difference between that current and a fundamental wave current to suppress a harmonic current at a detection point, providing a great effect of absorbing harmonic currents.

## 1.2.12 Inverter-driven 400V class motor

In the PWM type inverter, a surge voltage attributable to wiring constants is generated at the motor terminals. Especially for a 400V class motor, the surge voltage may deteriorate the insulation. When the 400V class motor is driven by the inverter, consider the following measures:

- Measures

It is recommended to take either of the following measures:

### (1) Rectifying the motor insulation

For the 400V class motor, use an insulation-enhanced motor. Specifically

- 1) Specify the "400V class inverter-driven, insulation-enhanced motor".
- 2) For the dedicated motor such as the constant-torque motor and low-vibration motor, use the "inverter-driven, dedicated motor".

---

### CAUTION

---

**When the wiring length between the motor and inverter is 40m or more, take the above countermeasure and also set the long wiring mode in Pr. 70 "Soft-PWM setting". (Refer to page 114 for Pr. 70.)**

---


### (2) Suppressing the surge voltage on the inverter side

On the secondary side of the inverter, connect the optional surge voltage suppression filter (FR-ASF-H).

## 1.3 How to use the control circuit terminals

### 1.3.1 Terminal block layout

In the control circuit of the inverter, the terminals are arranged as shown below:

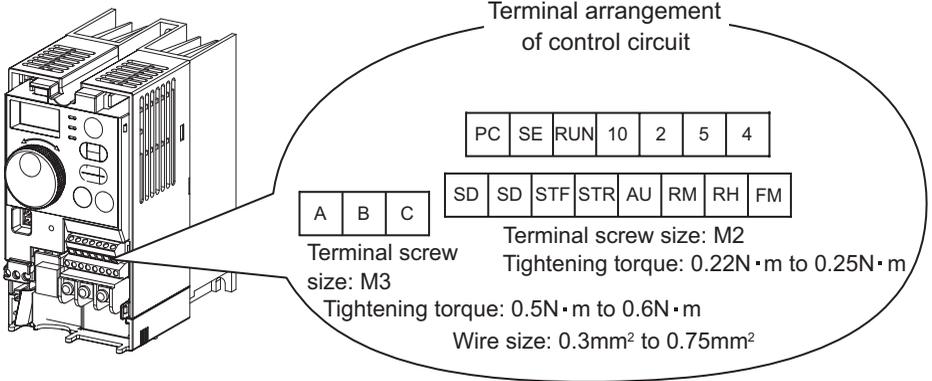

### 1.3.2 Wiring instructions

- 1) Terminals SD, SE and 5 are common to the I/O signals isolated from each other. Do not earth (ground) them.  
Avoid connecting the terminal SD and 5 and the terminal SE and 5.
- 2) Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 200V relay sequence circuit).
- 3) Use two or more parallel micro-signal contacts or twin contacts to prevent contact faults when using contact inputs since the control circuit input signals are micro-currents.


\*Introduced products on bar terminals: (as of September, 2006)

Terminal Screw Size	Wire Size (mm <sup>2</sup> )	Bar Terminal Model		Maker
		With Insulation Sleeve	Without Insulation Sleeve	
<b>M3</b> (terminal A, B, C)	0.3 to 0.5	AI 0,5-6WH	A 0,5-6	Phoenix Contact Co.,Ltd.
	0.5 to 0.75	AI 0,75-6GY	A 0,75-6	
<b>M2</b> (other than the above)	0.3 to 0.5	AI 0,5-6WH	A 0,5-6	

☞ Bar terminal crimping terminal: CRIMPFOX ZA3 (Phoenix Contact Co., Ltd.)

#### CAUTION

When using the bar terminal (without insulation sleeve), use care so that the twisted wires do not come out.




### 1.3.3 Changing the control logic

The input signals are set to sink logic.

To change the control logic, the jumper connector under the setting dial must be moved to the other position.

- Change the jumper connector in the sink logic position to source logic position using tweezers, a pair of long-nose pliers etc. Change the jumper connector position before switching power on.




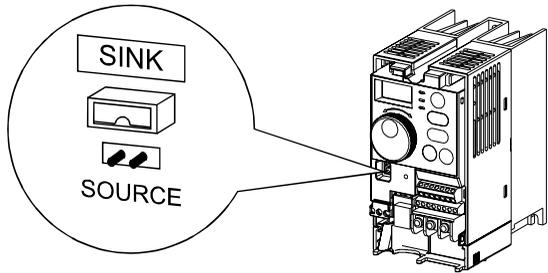


#### CAUTION

- Make sure that the front cover is installed securely.
- The front cover is fitted with the capacity plate and the inverter unit with the rating plate. Since these plates have the same serial numbers, always replace the removed cover onto the original inverter.
- The sink-source logic change-over jumper connector must be fitted in only one of those positions. If it is fitted in both positions at the same time, the inverter may be damaged.

#### 1) Sink logic type and source logic type


- In sink logic, a signal switches on when a current flows from the corresponding signal input terminal. Terminal SD is common to the contact input signals. Terminal SE is common to the open collector output signals.
- In source logic, a signal switches on when a current flows into the corresponding signal input terminal. Terminal PC is common to the contact input signals. Terminal SE is common to the open collector output signals.
- Current flow concerning the input/output signal when sink logic is selected
- Current flow concerning the input/output signal when source logic is selected

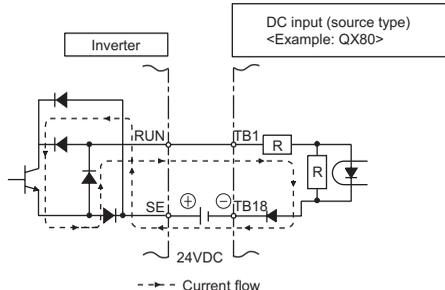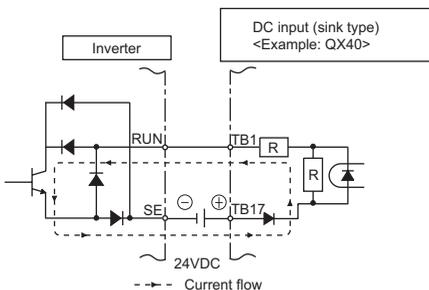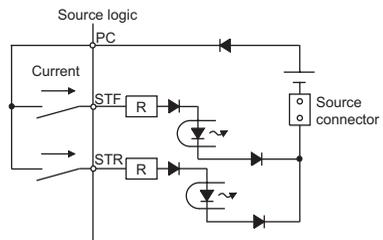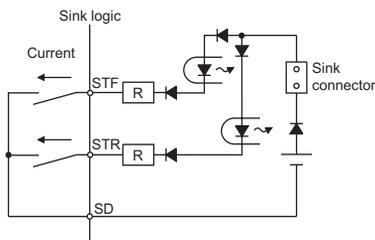

●When using an external power supply for transistor output


• Sink logic type

Use terminal PC as a common terminal, and perform wiring as shown below. (Do not connect terminal SD of the inverter with terminal 0V of the external power supply. When using terminals PC-SD as a 24VDC power supply, do not install an external power supply in parallel with the inverter. Doing so may cause a malfunction in the inverter due to undesirable currents.)

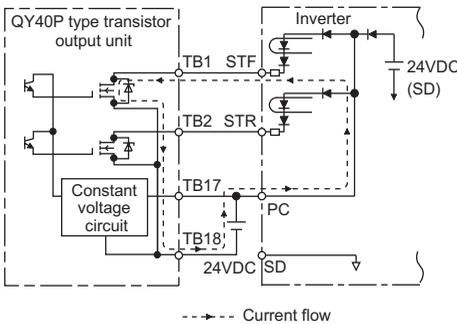

• Source logic type

Use terminal SD as a common terminal, and perform wiring as shown below. (Do not connect terminal PC of the inverter with terminal +24V of the external power supply. When using terminals PC-SD as a 24VDC power supply, do not install an external power supply in parallel with the inverter. Doing so may cause a malfunction in the inverter due to undesirable currents.)

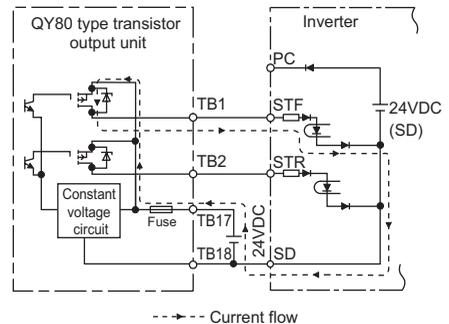

## 1.4 Input terminals



### 1.4.1 Run (start) and stop (STF, STR, STOP)

To start and stop the motor, first switch on the input power supply of the inverter to turn on the magnetic contactor at the operation-ready when there is a magnetic contactor on the input side, then start the motor with the forward or reverse rotation start signal.

#### (1) Two-wire type connection (STF, STR)

A two-wire type connection is shown on the right.

- 1) The forward/reverse rotation signal is used as both the start and stop signals. Switch on either of the forward and reverse rotation signals to start the motor in the corresponding direction. Switch on both or switch off the start signal during operation to decelerate the inverter to a stop.
- 2) The frequency setting signal may either be given by entering 0 to 5VDC (or 0 to 10VDC) across frequency setting input terminals 2-5 or by setting the required values in Pr. 4 to Pr. 6 "multi-speed setting" (high, middle, low speeds). (For multi-speed operation, refer to page 32.)

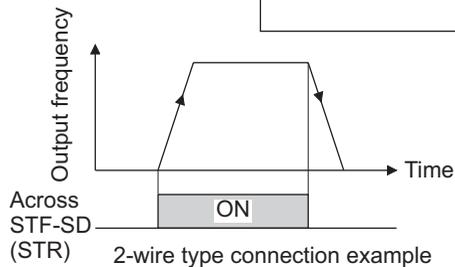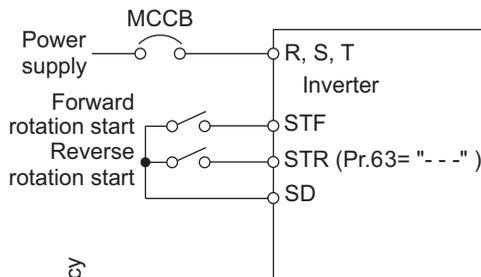


- 3) After the start signal has been input, the inverter starts operating when the frequency setting signal reaches or exceeds the "starting frequency" set in Pr. 13 (factory-set to 0.5Hz).  
If the motor load torque is large or the "torque boost" set in Pr. 0 is small, operation may not be started due to insufficient torque until the inverter output frequency reaches about 3 to 6Hz.  
If the "minimum frequency" set in Pr. 2 (factory setting = 0Hz) is 6Hz, for example, merely entering the start signal causes the running frequency to reach the minimum frequency of 6Hz according to the "acceleration time" set in Pr. 7.
- 4) To stop the motor, operate the DC injection brake for the period of "DC injection brake operation time" set in Pr. 11 (factory setting = 0.5s) at not more than the DC injection brake operation frequency or at not more than 0.5Hz.  
To disable the DC injection brake function, set 0 in either of Pr. 11 "DC injection brake operation time" or Pr. 12 "DC injection brake voltage".  
In this case, the motor is coasted to a stop at not more than the frequency set in Pr. 10 "DC injection brake operation frequency" (0 to 120Hz variable) or at not more than 0.5Hz (when the DC injection brake is not operated).
- 5) If the reverse rotation signal is input during forward rotation or the forward rotation signal is input during reverse rotation, the inverter is decelerated and then switched to the opposite output without going through the stop mode.


### DC Injection Brake and Coasting to Stop Functionality

Operation Mode	External Operation or Combined Operation Pr. 79 = "0", "2", "3"		PU Operation or Combined Operation Pr. 79 = "0", "1", "4"	
	Terminals STF (STR)-SD disconnected (*1)	Set frequency changed to 0Hz	Stop key	Set frequency changed to 0Hz
<b>DC injection brake enabled</b>	DC injection brake operated at not more than "DC injection brake operation frequency" set in Pr. 10	DC injection brake operated at 0.5Hz or less.	DC injection brake operated at not more than "DC injection brake operation frequency" set in Pr. 10	DC injection brake operated at 0.5Hz or less.
<b>DC injection brake disabled</b>	Coasted to a stop at not more than "DC injection brake operation frequency" set in Pr. 10	Coasted to a stop at 0.5Hz or less.	Coasted to a stop at not more than "DC injection brake operation frequency" set in Pr. 10	Coasted to a stop at 0.5Hz or less.

\*1: Also stopped by the . Refer to page 116.

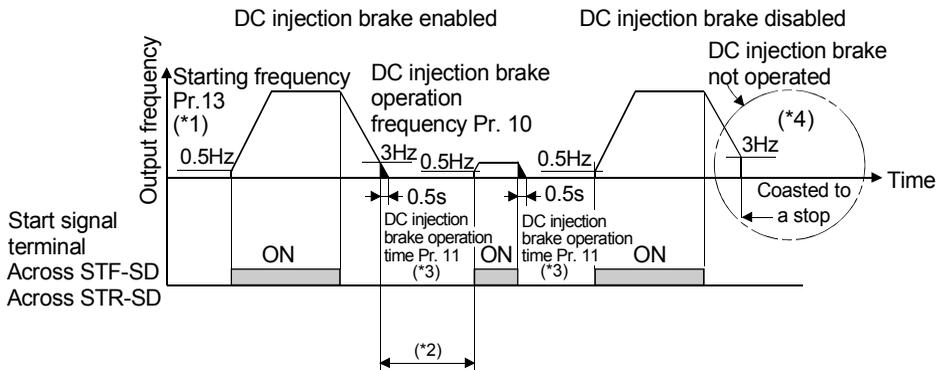

Start/Stop Timing Chart (for two-wire type)

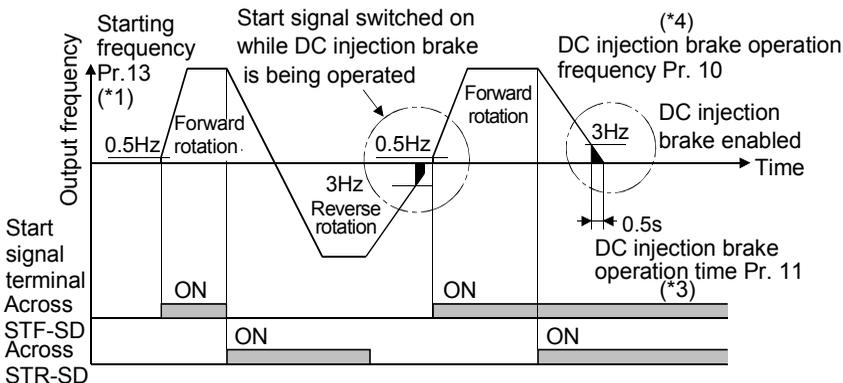

Forward-Reverse Rotation Switch-Over Timing Chart

**REMARKS**

- \*1. The "starting frequency" in Pr. 13 (factory-set to 0.5Hz) may be set between 0 and 60Hz.
- \*2. If the next start signal is given during DC injection brake operation, the DC injection brake is disabled and restart is made.
- \*3. The "DC injection brake operation time" in Pr. 11 (factory-set to 0.5s) may be set between 0 and 10s.
- \*4. The frequency at which the motor is coasted to a stop is not more than the "DC injection brake operation frequency" set in Pr. 10 (factory setting = 3Hz; may be set between 0 and 120Hz) or not more than 0.5Hz.
- \*5. The "starting frequency" in Pr. 13, "DC injection brake operation time" in Pr. 11 and "DC injection brake operation frequency" in Pr. 10 are the factory-set values.

**(2) Three-wire type connection (STF, STR, STOP)**

A three-wire type connection is shown on the right. Assign the start self-holding function (STOP) to any of the input terminals. To make a reverse rotation start, set Pr. 63 to "-" (factory setting).



1) Turning the STOP signal on makes start self-holding function valid. In this case, the forward/reverse rotation signal functions only as a start signal.  
(Note) Assign the stop signal to any of Pr. 60 to Pr. 62 (input terminal function selection).

2) Even if the start signal STF (STR) is turned on once then off, the start signal is kept on and starts the inverter. When changing the direction of rotation, turn the start signal STR (STF) on once and then off.

3) To stop the inverter, turning off the STOP signal once decelerates it to a stop. For the frequency setting signal and the operation of DC injection brake at a stop time, refer to paragraphs 2) to 4) in (1) Two-wire type connection. The right diagram shows 3-wire type connection.

4) When the JOG signal is on, the STOP signal is invalid and the JOG signal has precedence.

5) When the output stop signal MRS is turned on, the inverter output is shutoff. However, self-holding function is not deactivated and the start signal is held.

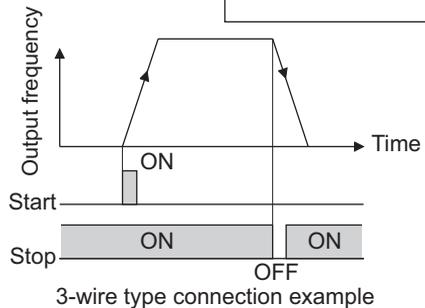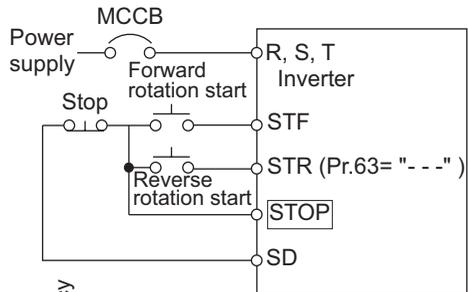


### 1.4.2 Connection of frequency setting potentiometer and output frequency meter (10, 2, 5, 4, AU)

The analog frequency setting input signals that may be entered are voltage and current signals.

For the relationships between the frequency setting input voltages (currents) and output frequencies, refer to the following diagram. The frequency setting input signals are proportional to the output frequencies. Note that when the input signal is less than the starting frequency, the output frequency of the inverter is 0Hz.

If the input signal of 5VDC (or 10V, 20mA) or higher is entered, the output frequency does not exceed the maximum output frequency.

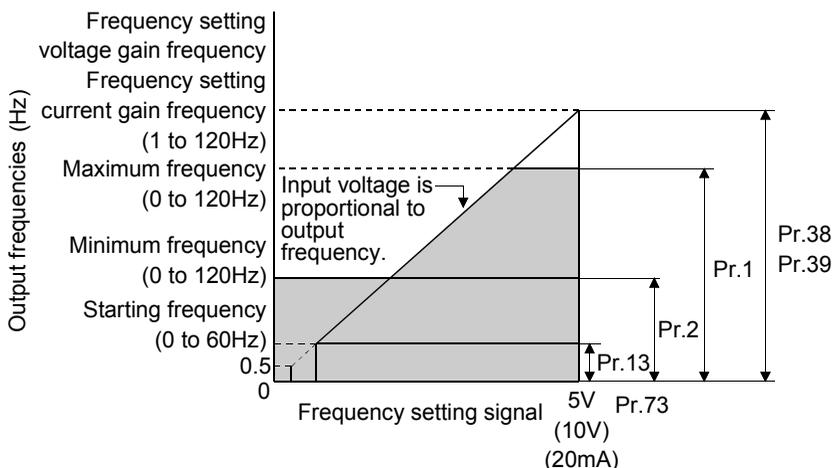

#### Relationships between Frequency Setting Inputs and Output Frequencies

##### REMARKS



For the way to calibrate the output frequency meter, refer to the instruction manual (basic).

#### (1) Voltage input (10, 2, 5)

Enter the frequency setting input signal of 0 to 5VDC (or 0 to 10VDC) across the frequency setting input terminals 2-5. The maximum output frequency is reached when 5V (10V) is input across terminals 2-5.

The power supply used may either be the inverter's built-in power supply or an external power supply. For the built-in power supply, terminals 10-5 provide 5VDC output.

- For operation at 0 to 5VDC, set "0" in Pr. 73 to the 0 to 5VDC input. Use terminal 10 for the built-in power supply.
- For operation at 0 to 10VDC, set "1" in Pr. 73 to the 0 to 10VDC input.

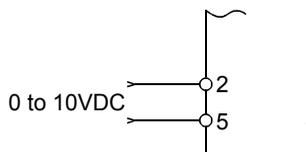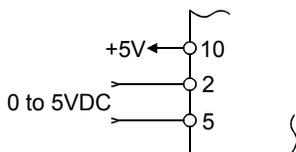


1  
WIRING

## (2) Current input (4, 5, AU)

To automatically perform operation under constant pressure or temperature control using a fan, pump etc., enter the controller output signal of 4 to 20mADC across terminals 4-5.

Terminals AU-SD must be shorted to use the 4 to 20mADC signal for operation. When the multi-speed signal is input, the current input is ignored.

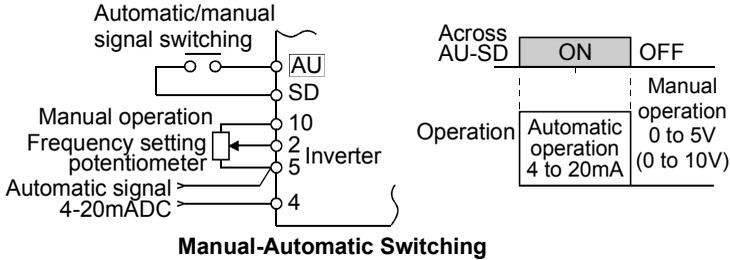


### 1.4.3 External frequency selection (REX, RH, RM, RL)

Up to 15 speeds (\*) may be selected for an external command forward rotation start or up to 7 speeds for an external command reverse rotation start according to the combination of connecting the multi-speed select terminals REX, RH, RM and RL-SD, and multi-speed operation can be performed as shown below by shorting the start signal terminal STF (STR)-SD.

Speeds (frequencies) may be specified as desired from the operation panel or parameter unit as listed below.

#### CAUTION


- \* Change the setting of Pr. 63 "STR terminal function selection" to "8", and assign and use as the 15-speed select signal (REX). Change the setting of Pr. 60 "AU terminal function selection" to "0", and assign and use as the low-speed run command (RL). Has precedence over the main speed setting signal (0 to 5V, 0 to 10V, 4 to 20mADC).

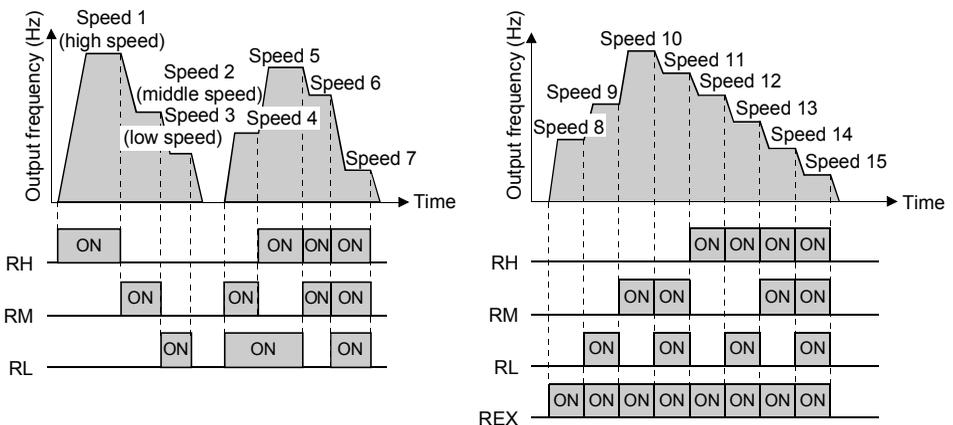

### Multi-Speed Setting

Speed	Terminal Input				Parameter	Set Frequency Range	Remarks	
	REX-SD*	RH-SD	RM-SD	RL-SD*				
Speed 1 (high speed)	OFF	<input type="checkbox"/> ON	OFF	OFF	Pr. 4	0 to 120Hz	_____	
Speed 2 (middle speed)	OFF	OFF	<input type="checkbox"/> ON	OFF	Pr. 5	0 to 120Hz	_____	
Speed 3 (low speed)	OFF	OFF	OFF	<input type="checkbox"/> ON	Pr. 6	0 to 120Hz	_____	
Speed 4	OFF	OFF	<input type="checkbox"/> ON	<input type="checkbox"/> ON	Pr. 24	0 to 120Hz, ---	Pr. 6 setting when Pr. 24="---"	
Speed 5	OFF	<input type="checkbox"/> ON	OFF	<input type="checkbox"/> ON	Pr. 25		Pr. 6 setting when Pr. 25="---"	
Speed 6	OFF	<input type="checkbox"/> ON	<input type="checkbox"/> ON	OFF	Pr. 26		Pr. 5 setting when Pr. 26="---"	
Speed 7	OFF	<input type="checkbox"/> ON	<input type="checkbox"/> ON	<input type="checkbox"/> ON	Pr. 27		Pr. 6 setting when Pr. 27="---"	
Speed 8	<input type="checkbox"/> ON	OFF	OFF	OFF	Pr. 80		0Hz when Pr. 80="---"	
Speed 9	<input type="checkbox"/> ON	OFF	OFF	<input type="checkbox"/> ON	Pr. 81		Pr. 6 setting when Pr. 81="---"	
Speed 10	<input type="checkbox"/> ON	OFF	<input type="checkbox"/> ON	OFF	Pr. 82		Pr. 5 setting when Pr. 82="---"	
Speed 11	<input type="checkbox"/> ON	OFF	<input type="checkbox"/> ON	<input type="checkbox"/> ON	Pr. 83		Pr. 6 setting when Pr. 83="---"	
Speed 12	<input type="checkbox"/> ON	<input type="checkbox"/> ON	OFF	OFF	Pr. 84		Pr. 4 setting when Pr. 84="---"	
Speed 13	<input type="checkbox"/> ON	<input type="checkbox"/> ON	OFF	<input type="checkbox"/> ON	Pr. 85		Pr. 6 setting when Pr. 85="---"	
Speed 14	<input type="checkbox"/> ON	<input type="checkbox"/> ON	<input type="checkbox"/> ON	OFF	Pr. 86		Pr. 5 setting when Pr. 86="---"	
Speed 15	<input type="checkbox"/> ON	<input type="checkbox"/> ON	<input type="checkbox"/> ON	<input type="checkbox"/> ON	Pr. 87		Pr. 6 setting when Pr. 87="---"	
External setting	OFF	OFF	OFF	OFF	Frequency setting potentiometer		0 to max. setting	_____

\*When the RL and REX signals are used (15 speeds), a reverse rotation start under external command and frequency setting using 4 to 20mA current input signal cannot be made.

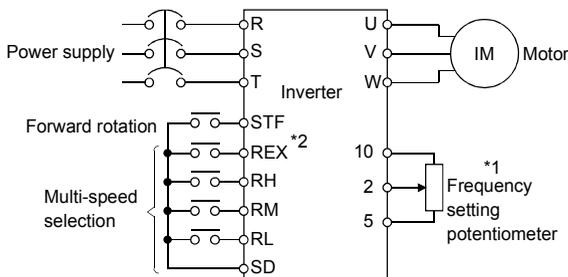

**Multi-Speed Operation Connection Example**

**REMARKS**

- \*1. When the frequency setting potentiometer is connected, the input signal of the frequency setting potentiometer is ignored if the multi-speed select signal is switched on. (This also applies to the 4 to 20mA input signal.)
- \*2. For a reverse rotation start, set Pr. 63 to "---" (factory setting) to make the STR signal of terminal STR valid.


1  
WIRING

## 1.4.4 Indicator connection and adjustment (FM)

The output frequency, etc. of the inverter can be indicated by a DC ammeter of 1mA full-scale deflection and maximum  $300\Omega$  internal resistance or a commercially available digital indicator which is connected across terminals FM-SD.

The indicator can be calibrated from the operation panel or parameter unit. Note that the reading varies according to the wiring distance if the indicator is placed away from the inverter. In this case, connect a calibration resistor in series with the indicator as shown below and adjust until the reading matches the operation panel or parameter unit indication (indicator monitoring mode).

Install the indicator within 200m (50m for the digital indicator) of the inverter and connect them by at least  $0.3\text{mm}^2$  twisted or shielded cables.

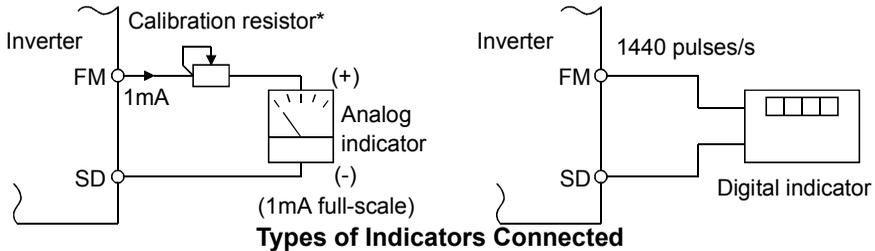

**Types of Indicators Connected**

### REMARKS

\* Not needed when calibration is made using the calibration parameter C1 "FM terminal calibration". This resistor is used when calibration must be made near the frequency meter for such a reason as a remote frequency meter. Note that the needle of the frequency meter may not deflect to full-scale when the calibration resistor is connected. In this case, use both the resistor and calibration parameter "C1".

### CAUTION


•Refer to page 137 for the procedure of indicator adjustment.


## Output waveform of terminal FM

The output signal of terminal FM has a pulse waveform as shown in the table below and the number of its pulses is proportional to the inverter output frequency.

The output voltage (average voltage) is also proportional to the output frequency.

### Terminal FM Output Voltage

	Specifications
<b>Output waveform</b>	Calibration parameter C1 (Pr. 900) 
<b>Number of output pulses (pulses/second)</b>	Max. 2400 pulses/s Set a full-scale value which achieves 1440 pulses/s. Pr. 55: frequency monitoring reference Pr. 56: current monitoring reference
<b>Output voltage</b>	0 to 8VDC max. (*1) (Approx. 5V at 1440 pulses/s)

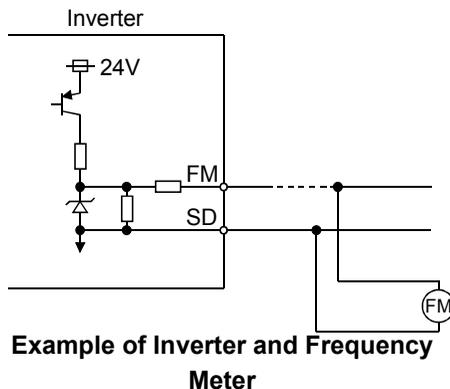

\*1. 0.5V or less when a DC ammeter of 300Ω or less internal resistance is connected to measure the output voltage.

### Adjustment

#### • Analog meter

To adjust the reading of an analog indicator (ammeter), turn the calibration resistor to change the current.

When using the operation panel or parameter unit for adjustment, change the pulse width of the output waveform (calibration parameter "C1") (adjust the current through the adjustment of the output voltage) to adjust the reading. (For details, refer to page 137.)

### REMARKS

It is not recommended to use a voltage type indicator because it is easily affected by a voltage drop, induction noise, etc. and may not provide correct reading if the wiring distance is long.

• **Digital indicator**

Since the digital indicator counts and displays the number of pulses, adjust it from the operation panel or parameter unit.

The inverter output, at which the reference pulses of 1440 pulses/s are output, can be set in Pr. 55 when frequency monitoring is used as reference, or in Pr. 56 when current monitoring is used as reference.

- [Example] 1. To set the output across FM-SD to 1440 pulses/s at the inverter output frequency of 120Hz, set "120" (Hz) in Pr. 55. (Factory setting: 60Hz)
2. To set the output across FM-SD to 1440 pulses/s at the inverter output current of 15A, set "15" (A) in Pr. 56. (Factory setting: rated inverter current)

**1.4.5 Control circuit common terminals (SD, 5, SE)**

Terminals SD, 5, and SE are all common terminals (0V) for I/O signals and are isolated from each other.


Terminal SD is a common terminal for the contact input terminals (STF, STR, RH, RM, AU) and frequency output signal (FM).

Terminal 5 is a common terminal for the frequency setting analog input signals. It should be protected from external noise using a shielded or twisted cable.

Terminal SE is a common terminal for the open collector output terminal (RUN).

**1.4.6 Signal inputs by contactless switches**

If a transistor is used instead of a contacted switch as shown on the right, the input signals of the inverter can control terminals STF, STR, RH, RM, AU.

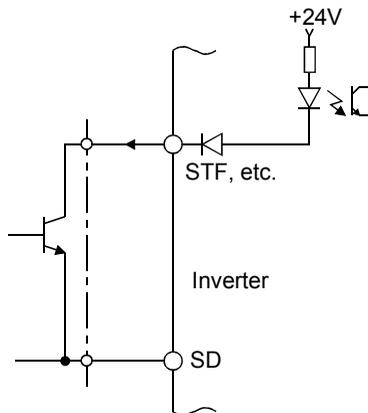

External signal input using transistor

**REMARKS**

1. When using an external transistor connected to an external power supply, use terminal PC to prevent malfunctions due to undesirable currents. (Refer to page 26.)
2. Note that an SSR (solid-state relay) has a relatively large leakage current at OFF time and it may be accidentally input to the inverter.

## 1.5 How to use the input signals (assigned terminals AU, RM, RH, STR)

These terminals can be changed in function by setting Pr. 60 to Pr. 63.

Pr. 60 "AU terminal function selection"	Page 109
Pr. 61 "RM terminal function selection"	
Pr. 62 "RH terminal function selection"	
Pr. 63 "STR terminal function selection"	

### 1.5.1 Multi-speed setting (RL, RM, RH, REX signals):

Pr. 60 to Pr. 63 setting "0, 1, 2, 8"

#### Remote setting (RL, RM, RH signals):

Pr. 60 to Pr. 63 setting "0, 1, 2"

- By entering frequency commands into the RL, RM, RH and REX signals and turning on/off the corresponding signals, you can perform multi-speed operation (15 speeds). (For details, refer to page 32.)
- If the operation panel is away from the enclosure, you can perform continuous variable-speed operation with signal contacts, without using analog signals. (For details, refer to page 105.)

### 1.5.2 Second function selection (RT signal): Pr. 60 to Pr. 63 setting "3"


Pr. 44 "second acceleration/deceleration time"

Pr. 45 "second deceleration time"

Pr. 46 "second torque boost"

Pr. 47 "second V/F (base frequency)"


To set any of the above functions, turn on this "RT signal".

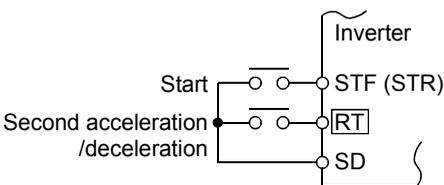

### 1.5.3 Current input selection "AU signal": Pr. 60 to Pr. 63 setting "4"

When a fan, pump etc. is used to perform operation of constant- pressure/ temperature control, automatic operation can be performed by entering the 4-20mADC output signal of a regulator into across terminals 4-5.

When the 4-20mADC signal is used to perform operation, always short the AU signal.

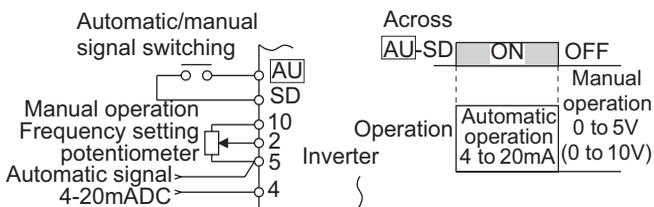

1 WIRING


#### REMARKS

The current input is ignored if the multi-speed signal is input.

### 1.5.4 Start self-holding selection (STOP signal): Pr. 60 to Pr. 63 setting "5"

This connection example is used when you want to self-hold the start signal (forward rotation, reverse rotation).

\* Connected to the STOP signal to avoid forward or reverse rotation if forward or reverse rotation and stop are turned on simultaneously.

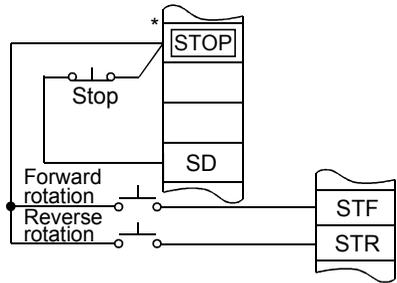

(Wiring example for sink logic)

### 1.5.5 Output shut-off (MRS signal): Pr. 60 to Pr. 63 setting "6"

Short the output stop terminal MRS-SD during inverter output to cause the inverter to immediately stop the output. Open terminals MRS-SD to resume operation in about 10ms. Terminal MRS may be used as described below:

#### (1) To stop the motor by mechanical brake (e.g. electromagnetic brake)


Terminals MRS-SD must be shorted when mechanical brake is operated and be opened before the motor that has stopped restarts.

#### (2) To provide interlock to disable operation by the inverter

After MRS-SD have been shorted, the inverter cannot be operated if the start signal is given to the inverter.


#### (3) To coast the motor to stop

The motor is decelerated according to the preset deceleration time and is stopped by operating the DC injection brake at 3Hz or less. By using terminal MRS, the motor is coasted to a stop.

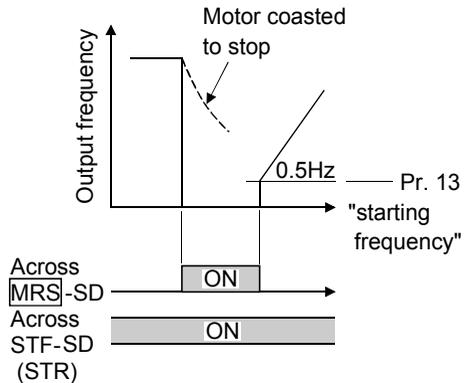

### 1.5.6 External thermal relay input: Pr. 60 to Pr. 63 setting "7"

When the external thermal relay or built-in thermal relay of the motor (thermal relay protector, etc.) is actuated to protect the motor from overheating, the inverter output can be shutdown and the corresponding alarm signal can be outputted to hold at the stop status. Even if the thermal relay contact resets, the motor cannot be restarted unless the reset terminals RES-SD are shorted for more than 0.1s and then opened or a power-on reset is made. The function may therefore be used as an external emergency stop signal input.

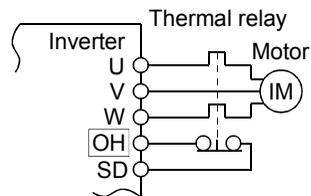


### 1.5.7 Jog operation (JOG signal): Pr. 60 to Pr. 63 setting "9"

#### (1) Jog operation using external signals

Jog operation can be started/stopped by shorting the jog mode select terminals JOG-SD and shorting/opening the start signal terminals STF or STR-SD. The jog frequency and jog acceleration/deceleration time are set in Pr. 15 (factory setting 5Hz, variable between 0 and 120Hz) and Pr. 16 (factory setting 0.5s, variable between 0 and 999s), respectively, and their settings can be changed from the operation panel or parameter unit.

The JOG signal has precedence over the multi-speed signal. (External)

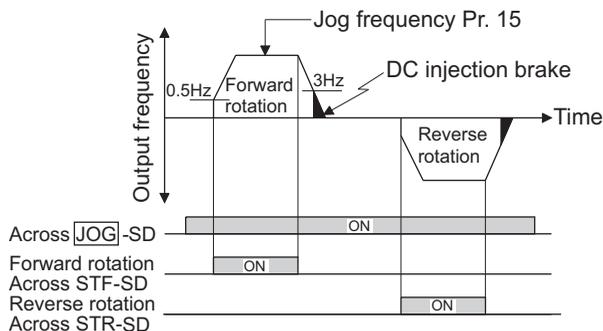

1  
WIRING

### 1.5.8 Reset signal: Pr. 60 to Pr. 63 setting "10"


Used to reset the alarm stop state established when the inverter's protective function is activated. The reset signal immediately sets the control circuit to the initial (cold) status, e.g. initializes the electronic thermal relay function protection circuit. It shuts off the inverter output at the same time. During reset, the inverter output is kept shut off. To give this reset input, short terminals RES-SD for more than 0.1s. When the shorting time is long, the operation panel or parameter unit displays the initial screen, which is not a fault.

After opening terminals RES-SD (about 1s), operation is enabled.

The reset terminal is used to reset the inverter alarm stop state. If the reset terminal is shorted, then opened while the inverter is running, the motor may be restarted during coasting (refer to the timing chart below) and the output may be shut off due to overcurrent or overvoltage.

Setting either "1" or "15" in reset selection Pr. 75 allows the accidental input of the reset signal during operation to be ignored.

(For details, refer to page 116.)

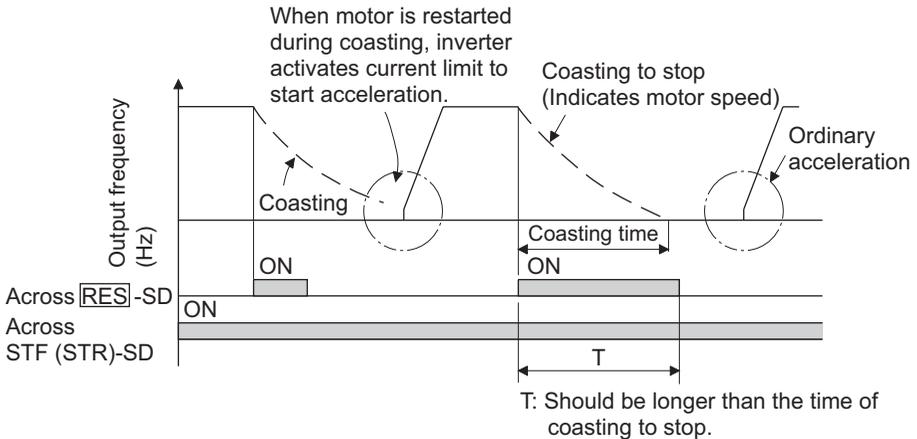

#### CAUTION

Frequent resetting will make electronic thermal relay function invalid.

### 1.5.9 PID control valid terminal: Pr. 60 to Pr. 63 setting "14"

To exercise PID control, turn on the X14 signal. When this signal is off, ordinary inverter operation is performed. For more information, refer to page 124.

#### ◆Related parameters◆

Pr. 88 "PID action selection", Pr. 89 "PID proportional band", Pr. 90 "PID integral time", Pr. 91 "PID upper limit", Pr. 92 "PID lower limit", Pr. 93 "PID action set point for PU operation", Pr. 94 "PID differential time" (Refer to page 124.)

### 1.5.10 PU operation/external operation switchover: Pr. 60 to Pr. 63 setting "16"

You can change the operation mode.

With "8" set in Pr. 79 "operation mode selection", turning on the X16 signal shifts the operation mode to the external operation mode and turning off the X16 signal shifts it to the PU operation mode. For details, refer to page 120.

#### ◆Related parameters◆


Pr. 79 "operation mode selection" (Refer to page 120.)



**CAUTION**

- Set "1" in Pr. 0 "Brake mode selection" of the FR-BU2 to use GRZG type discharging resistor.
- Do not remove a jumper across terminal P/+ and P1 except when connecting a DC reactor.

**(2) Connection example with the FR-BR(-H) type resistor**

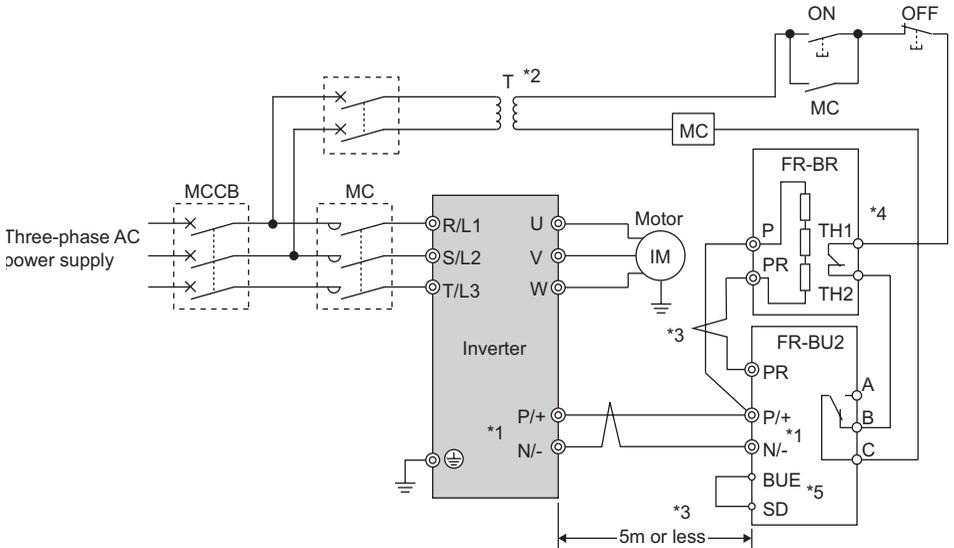


- \*1. Connect the inverter terminals (P/+, N/-) and brake unit (FR-BU2) terminals so that their terminal names match with each other. (Incorrect connection will damage the inverter and brake unit.)
- \*2. When the power supply is 400V class, install a step-down transformer.
- \*3. The wiring distance between the inverter, brake unit (FR-BU2) and resistor unit (FR-BR) should be within 5m. Even when the wiring is twisted, the cable length must not exceed 10m.
- \*4. Normal: across TH1-TH2...close, Alarm: across TH1-TH2...open
- \*5. A jumper is connected across BUE and SD in the initial status.

**CAUTION**

- Do not remove a jumper across terminal P/+ and P1 except when connecting a DC reactor.

## 1.6.2 Connection of the brake unit (FR-BU)

When connecting the brake unit (FR-BU(H)) to improve the brake capability at deceleration, make connection as shown below.

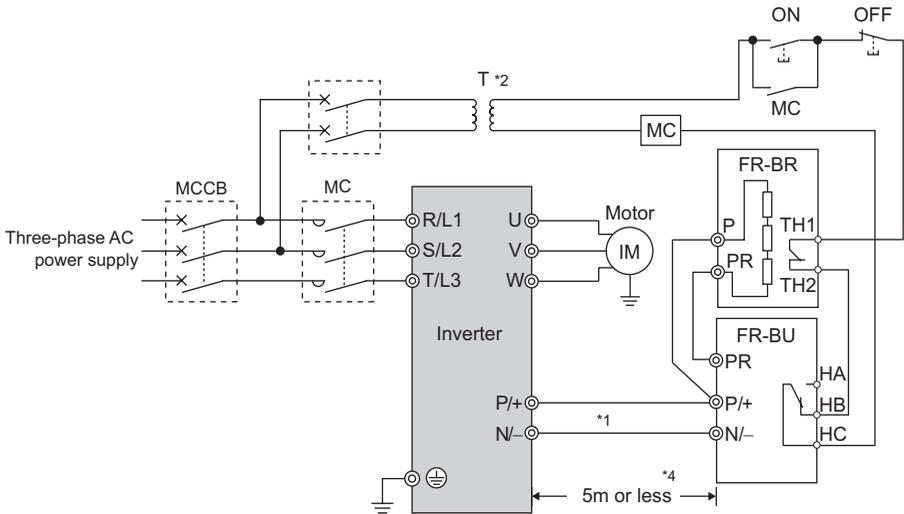


- \*1. Connect the inverter terminals (P/+, N/-) and brake unit (FR-BU (H)) terminals so that their terminal signals match with each other. (Incorrect connection will damage the inverter.)
- \*2. When the power supply is 400V class, install a step-down transformer.
- \*3. The wiring distance between the inverter, brake unit (FR-BU) and resistor unit (FR-BR) should be within 5m. If twisted wires are used, the distance should be within 10m.

### CAUTION

- If the transistors in the brake unit should become faulty, the resistor can be unusually hot, causing a fire. Therefore, install a magnetic contactor on the inverter's input side to configure a circuit so that a current is shut off in case of fault.
- Do not remove a jumper across terminal P/+ and P1 except when connecting a DC reactor.

### 1.6.3 Connection of the brake unit (BU type)

Connect the brake unit (BU type) correctly as shown below. Incorrect connection will damage the inverter. Remove the jumper across terminals HB-PC and terminals TB-HC of the brake unit and fit it to across terminals PC-TB.

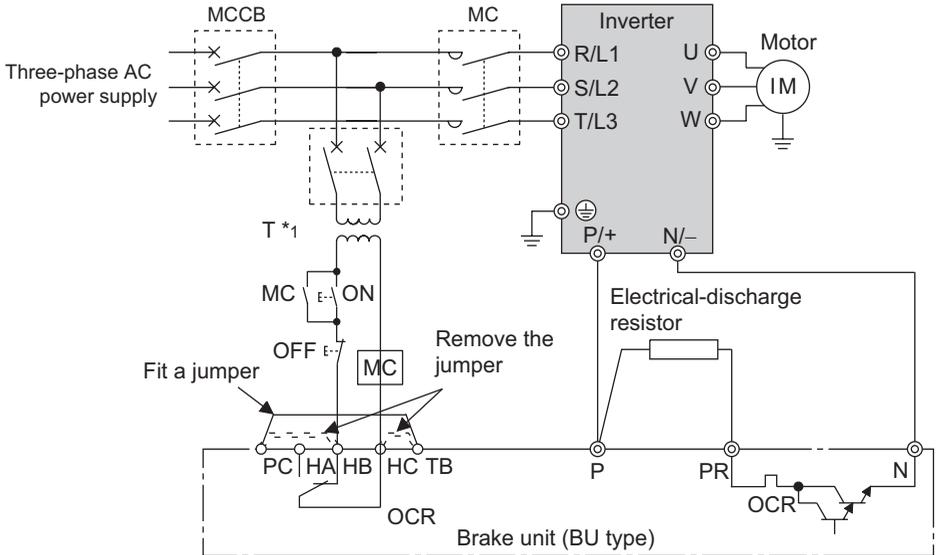


\*1. When the power supply is 400V class, install a step-down transformer.

#### CAUTION

- The wiring distance between the inverter, brake unit and resistor unit should be within 2m. If twisted wires are used, the distance should be within 5m.
- If the transistors in the brake unit should become faulty, the resistor can be unusually hot, causing a fire. Therefore, install a magnetic contactor on the inverter's power supply side to configure a circuit so that a current is shut off in case of fault.
- Do not remove a jumper across terminal P/+ and P1 except when connecting a DC reactor.

### 1.6.4 Connection of the high power factor converter (FR-HC)

When connecting the high power factor converter (FR-HC) to suppress power supply harmonics, perform wiring securely as shown below. Incorrect connection will damage the high power factor converter and inverter.

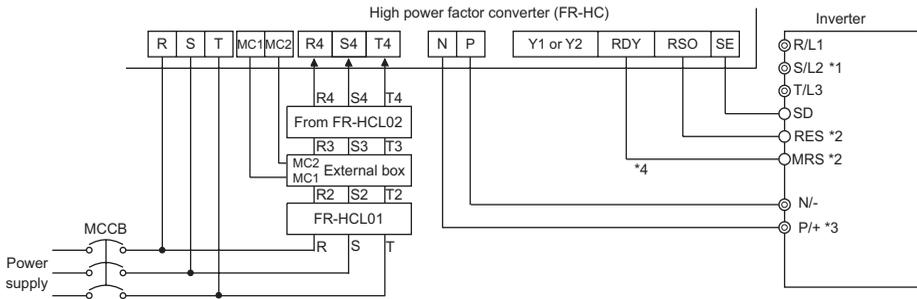


- \*1. The power input terminals R, S, T must be open. Incorrect connection will damage the inverter.
- \*2. Use Pr. 60 to Pr. 63 (input terminal function selection) to assign the terminals used for the RES and MRS signals.
- \*3. Do not insert MCCB between terminals P-N (P - P, N - N). Opposite polarity of terminals N, P will damage the inverter.
- \*4. Be sure to connect terminal RDY of the FR-HC to the MRS signal assigned terminal of the inverter, and connect terminal SE of the FR-HC to terminal SD of the inverter. Without proper connecting, FR-HC will be damaged.

#### CAUTION

- Use sink logic (factory setting) when the FR-HC is connected. The FR-HC cannot be connected when source logic is selected.
- The voltage phases of terminals R, S, T and terminals R4, S4, T4 must be matched before connection.
- Do not connect the filter pack.
- Do not remove a jumper across terminal P and P1 except when connecting a DC reactor.

## 1.6.5 Connection of the power regeneration common converter (FR-CV)

When connecting the power regeneration common converter (FR-CV), connect the inverter terminals (P/+, N/-) and power regeneration common converter (FR-CV) terminals as shown below so that their symbols match with each other.

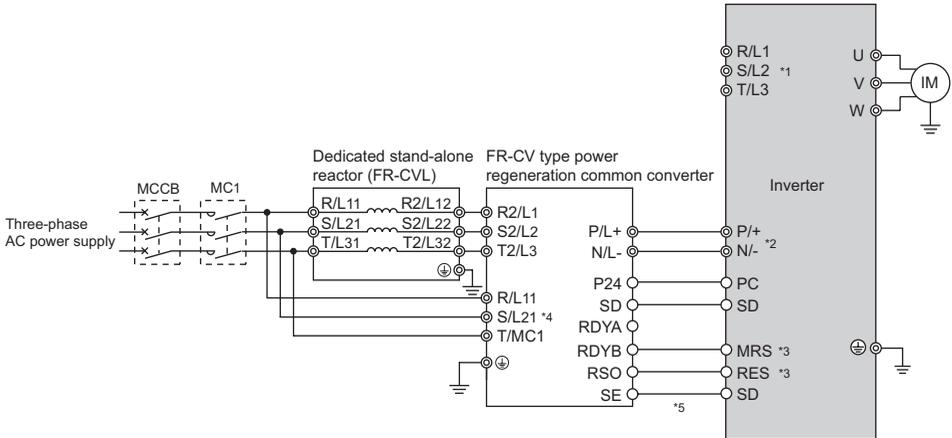


- \*1. Always keep the power input terminals R/L1, S/L2, T/L3 open. Incorrect connection will damage the inverter.
- \*2. Do not insert an MCCB between the terminals P/+–N/- (between P/L+–P/+, between N/L–N/-). Opposite polarity of terminals N/-, P/+ will damage the inverter.
- \*3. Use Pr. 60 to Pr. 63 (input terminal function selection) to assign the terminals used for the MRS, RES signal.
- \*4. Always connect the power supply and terminals R/L11, S/L21, T/MC1. Operating the inverter without connecting them will damage the power regeneration common converter.
- \*5. Be sure to connect terminal RDYB of the FR-CV to the MRS signal assigned terminal of the inverter, and connect terminal SE of the FR-CV to terminal SD of the inverter. Without proper connecting, FR-CV will be damaged.

### CAUTION

- The voltage phases of terminals R/L11, S/L21, T/MC1 and terminals R2/L1, S2/L2, T2/L3 must be matched.
- Use sink logic (factory setting) when the FR-CV is connected. The FR-CV cannot be connected when source logic is selected.
- Do not remove a jumper across terminal P/+ and P1.
- Do not connect the filter pack.

## 1.7 Handling of the RS-485 connector

<RS-485 connector pin layout>  
View A of the inverter (receptacle side)

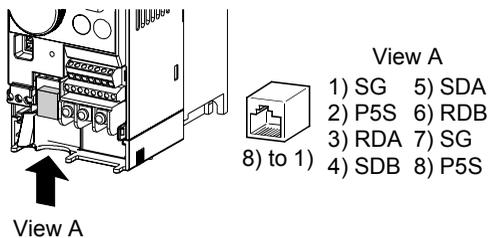

### CAUTION

1. Do not plug the connector to a computer LAN port, fax modem socket, telephone modular connector etc. The product could be damaged due to differences in electrical specifications.
2. Pins 2 and 8 (P5S) are provided for the parameter unit power supply. Do not use them for any other purpose or when making parallel connection by RS-485 communication.
3. Refer to page 143 for the communication parameters.

### 1.7.1 Connection of the parameter unit (FR-PU04)

When connecting the parameter unit to the RS-485 connector, use the optional parameter unit connection cable (FR-CB2□□).

### CAUTION

When the parameter unit is used, the operation other than the stop key (STOP/RESET) of the operation panel is disabled.

☞ Refer to page 162 for the parameters related to parameter unit setting.

### 1.7.2 Wiring of RS-485 communication

Use the RS-485 connector to perform communication operation from a personal computer etc.


When the RS-485 connector is connected with a personal, FA or other computer by a communication cable, a user program can run and monitor the inverter or read and write to the parameters. For parameter setting, refer to page 141.

- Conforming standard: EIA-485 (RS-485)
- Transmission format: Multidrop link
- Communication speed: Max. 19200bps
- Overall extension: 500m

☞ Refer to page 141 for the setting related to RS-485 communication operation.

<System configuration examples>

(1) Connection of a computer to the inverter (1:1 connection)

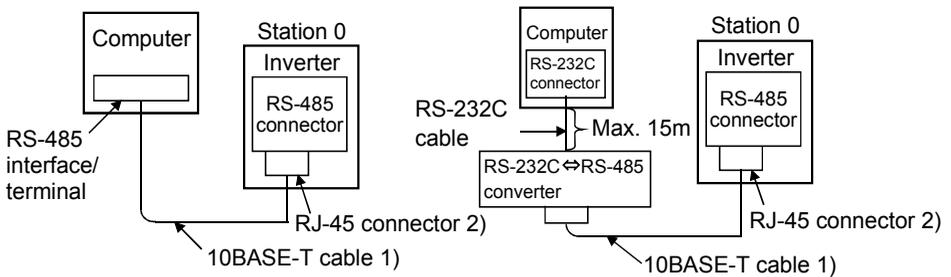


**REMARKS**

Refer to the following when fabricating the cable on the user side.  
 Example of product available on the market (as of September, 2006)

	Product	Model	Maker
1)	10BASE-T cable	SGLPEV-T 0.5mm × 4P * Do not use pins No. 2, 8 (P5S).	Mitsubishi Cable Industries, Ltd.
2)	RJ-45 connector	5-554720-3	Tyco Electronics Corporation

## (2) Combination of computer and multiple inverters (1:n connection)

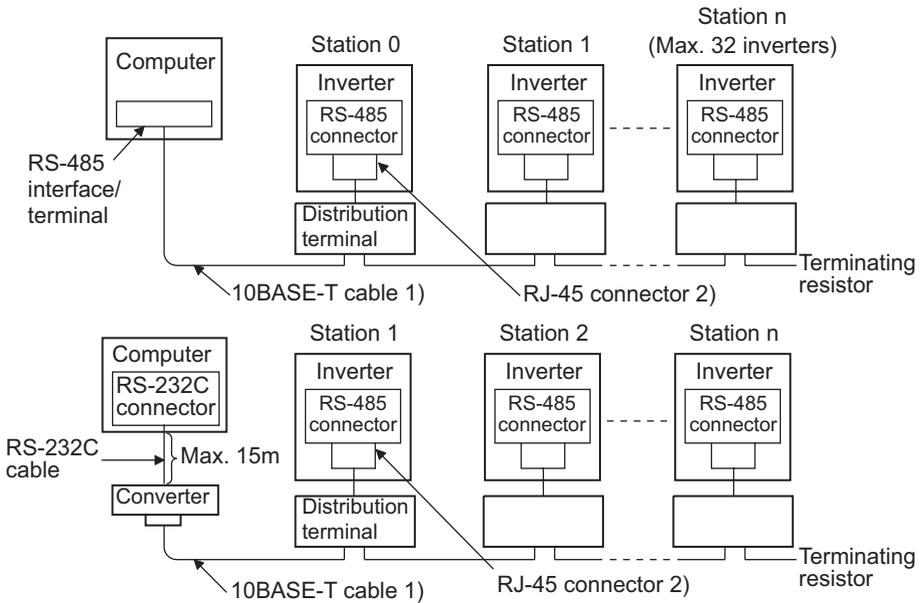

### REMARKS


Refer to the following when fabricating the cable on the user side.  
 Example of product available on the market (as of September, 2006)

	Product	Model	Maker
1)	10BASE-T cable	SGLPEV-T 0.5mm × 4P*	Mitsubishi Cable Industries, Ltd.
2)	RJ-45 connector	5-554720-3	Tyco Electronics Corporation


\* Do not use pins No. 2, 8 (P5S) of the 10BASE-T cable.

### <Wiring methods>

#### 1) Wiring of one RS-485 computer and one inverter

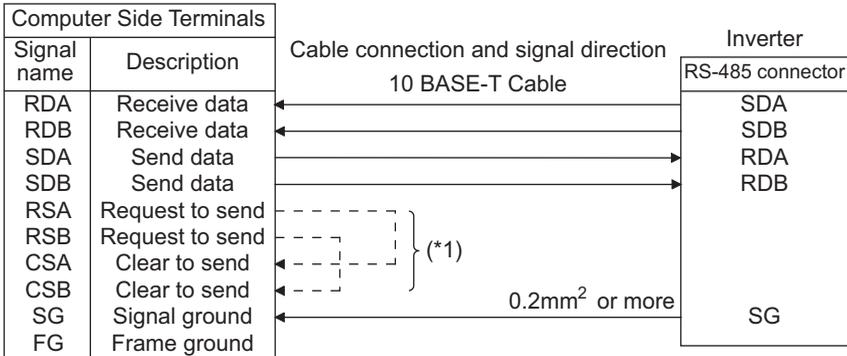

#### 2) Wiring of one RS-485 computer and "n" inverters (several inverters)

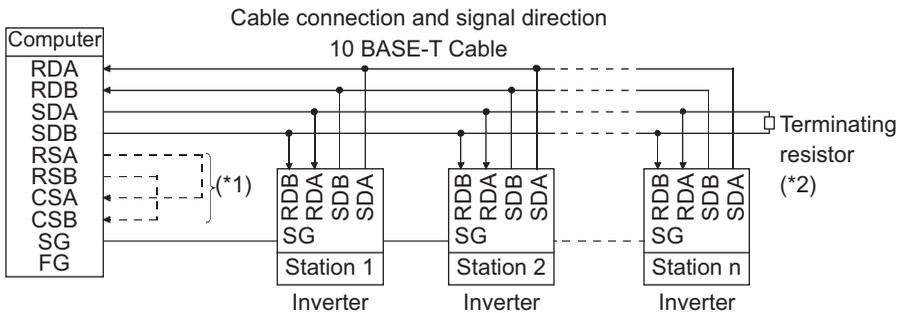

### REMARKS

- \*1. Make connection in accordance with the instruction manual of the computer to be used with. Fully check the terminal numbers of the computer since they change with the model.
- \*2. The inverters may be affected by reflection depending on the transmission speed or transmission distance. If this reflection hinders communication, provide a terminating resistor. When the RS-485 connector is used for connection, a terminating resistor cannot be fitted, so use a distributor. Connect the terminating resistor to only the inverter remotest from the computer. (Terminating resistor: 100Ω)

## 1.8 Design information


- 1) Provide electrical and mechanical interlocks for MC1 and MC2 which are used for bypass operation.

When the wiring is incorrect and if there is a bypass operation circuit as shown below, the inverter will be damaged by leakage current from the power supply due to arcs generated at the time of switch-over or chattering caused by a sequence error.

- 2) If the machine must not be restarted when power is restored after a power failure, provide a magnetic contactor in the inverter's primary side and also make up a sequence which will not switch on the start signal.

If the start signal (start switch) remains on after a power failure, the inverter will automatically restart as soon as the power is restored.

- 3) Use two or more parallel micro-signal contacts or twin contacts to prevent a contact fault when using contact inputs since the control circuit input signals are micro-currents.
- 4) Do not apply a large voltage to the contact input terminals (e.g. STF) to the control circuit.
- 5) Always apply a voltage to the alarm output terminals (A, B, C) via a relay coil, lamp etc.
- 6) Make sure that the specifications and rating match the system requirements.

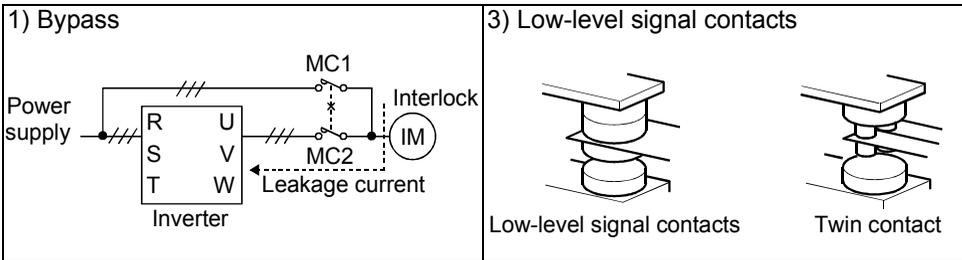

## 1.9 Failsafe of the system which uses the inverter

When a fault occurs, the inverter trips to output a fault signal. However, a fault output signal may not be output at an inverter fault occurrence when the detection circuit or output circuit fails, etc. Although Mitsubishi assures best quality products, provide an interlock which uses inverter status output signals to prevent accidents such as damage to machine when the inverter fails for some reason and at the same time consider the system configuration where failsafe from outside the inverter, without using the inverter, is enabled even if the inverter fails.

(1) Interlock method which uses the inverter status output signals


By combining the inverter status output signals to provide an interlock as shown below, an inverter alarm can be detected.

No	Interlock Method	Check Method	Used Signals	Refer to Page
1)	Inverter protective function operation	Operation check of an alarm contact Circuit error detection by negative logic	Fault output signal (ABC signal)	111
2)	Inverter running status	Operation ready signal check	Operation ready signal (RY signal)	111
3)	Inverter running status	Logic check of the start signal and running signal	Start signal (STF signal, STR signal) Running signal (RUN signal)	109, 111
4)	Inverter running status	Logic check of the start signal and output current	Start signal (STF signal, STR signal) Output current detection signal (Y12 signal)	109, 111

1) Check by the output of the inverter fault signal

When the fault occurs and trips the inverter, the fault output signal (ABC signal) is output (ABC signal is assigned to terminal ABC in the initial setting).

Check that the inverter functions properly. In addition, negative logic can be set (on when the inverter is normal, off when the fault occurs).

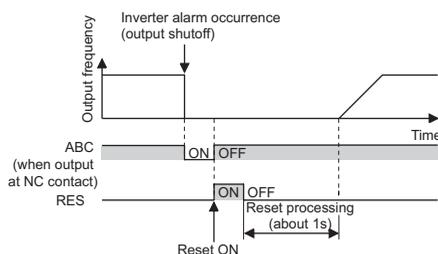


1  
WIRING

2) Checking the inverter operating status by the inverter operation ready completion signal

Operation ready signal (RY signal) is output when the inverter power is on and the inverter becomes operative.

Check if the RY signal is output after powering on the inverter.

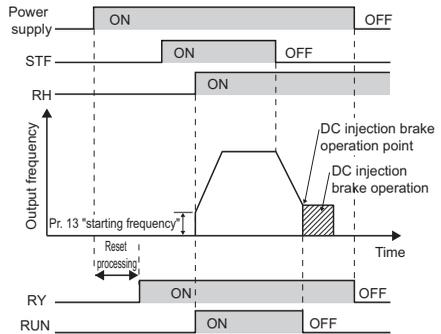

3) Checking the inverter operating status by the start signal input to the inverter and inverter running signal.

The inverter running signal (RUN signal) is output when the inverter is running (RUN signal is assigned to terminal RUN in the initial setting).

Check if RUN signal is output when inputting the start signal to the inverter (forward signal is STF signal and reverse signal is STR signal). For logic check, note that RUN signal is output for the period from the inverter decelerates until output to the motor is stopped, configure a sequence considering the inverter deceleration time.

4) Checking the motor operating status by the start signal input to the inverter and inverter output current detection signal.

The output current detection signal (Y12 signal) is output when the inverter operates and currents flows in the motor. Check if Y12 signal is output when inputting the start signal to the inverter (forward signal is STF signal and reverse signal is STR signal). Note that the current level at which Y12 signal is output is set to 120% of the inverter rated current in the initial setting, it is necessary to adjust the level to around 20% using no load current of the motor as reference with Pr.48 "Output current detection level".

For logic check, as same as the inverter running signal (RUN signal), the inverter outputs for the period from the inverter decelerates until output to the motor is stopped, configure a sequence considering the inverter deceleration time.

Output signal	Pr. 64, Pr. 65 Setting
ABC	99
RY	11
RUN	0
Y12	12

- When using various signals, assign functions to Pr. 64, Pr. 65 (output terminal function selection) referring to the table on the left.

**CAUTION**

• Changing the terminal assignment using Pr. 64, Pr. 65 (output terminal function selection) may affect the other functions. Make setting after confirming the function of each terminal.

(2) Backup method outside the inverter

Even if the interlock is provided by the inverter status signal, enough failsafe is not ensured depending on the failure status of the inverter itself. For example, even if the interlock is provided using the inverter fault output signal, start signal and RUN signal output, there is a case where a fault output signal is not output and RUN signal is kept output even if an inverter fault occurs.


Provide a speed detector to detect the motor speed and current detector to detect the motor current and consider the backup system such as checking up as below according to the level of importance of the system.

1) Start signal and actual operation check

Check the motor running and motor current while the start signal is input to the inverter by comparing the start signal to the inverter and detected speed of the speed detector or detected current of the current detector. Note that the motor current runs as the motor is running for the period until the motor stops since the inverter starts decelerating even if the start signal turns off. For the logic check, configure a sequence considering the inverter deceleration time. In addition, it is recommended to check the three-phase current when using the current detector.

2) Command speed and actual operation check

Check if there is no gap between the actual speed and commanded speed by comparing the inverter speed command and detected speed of the speed detector.

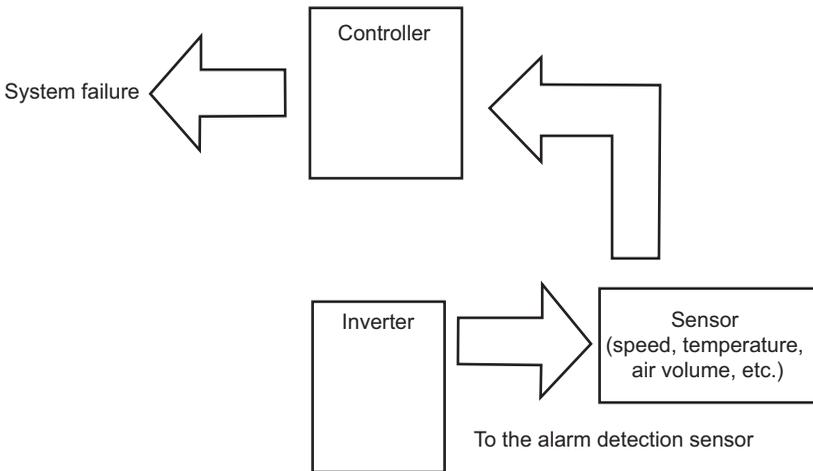

# MEMO

# 2. FUNCTIONS

This chapter explains the "functions" for use of this product. For simple variable-speed operation of the inverter, the factory settings of the parameters may be used as they are. Set the necessary parameters to meet the load and operational specifications. Refer to the instruction manual (basic) for the operation procedures. Always read the instructions before using the functions.

2.1	Function (Parameter) list .....	58
2.2	List of parameters classified by purpose of use .....	71
2.3	Explanation of functions (parameters) .....	73
2.4	Output terminal function.....	96
2.5	Current detection function .....	98
2.6	Display function.....	100
2.7	Restart operation .....	102
2.8	Additional function .....	105
2.9	Terminal function selection .....	109
2.10	Operation selection function.....	112
2.11	Auxiliary function .....	132
2.12	Maintenance function.....	134
2.13	Calibration parameters .....	137
2.14	Clear parameters .....	140
2.15	Communication parameters .....	141
2.16	Parameter unit (FR-PU04) setting .....	162

---

## CAUTION

---

As the contact input terminals AU, RM, RH, STR, open collector output terminal RUN and contact output terminals A, B, C can be changed in functions by parameter setting, their signal names used for the corresponding functions are used in this chapter (with the exception of the connection diagram). Note that they are not terminal names.

---

## REMARKS

Parameter copy  
Use of the parameter unit (FR-PU04) allows the parameter values to be copied to another FR-F500J series inverter. After batch-reading the parameters of the copy source inverter, you can connect the parameter unit to the copy destination inverter and batch-write the parameters.  
For the operation procedure, refer to the instruction manual of the parameter unit (FR-PU04).

Chapter 1

Chapter 2

Chapter 3

Chapter 4

## 2.1 Function (Parameter) list

### CAUTION

 indicates that the setting can be changed during operation if Pr. 77 "parameter write disable selection" has been set to "0" (factory setting). (Note that the Pr. 53, Pr. 70 and Pr. 72 values can be changed only during PU operation.)

Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
0	<i>P 0</i>	Torque boost	0 to 15%	0.1%	6%/5%/4%/3%/2% (*1)	73	
1	<i>P 1</i>	Maximum frequency	0 to 120Hz	0.1Hz	60Hz	74	
2	<i>P 2</i>	Minimum frequency	0 to 120Hz	0.1Hz	0Hz	74	
3	<i>P 3</i>	Base frequency	0 to 120Hz	0.1Hz	60Hz	75	
4	<i>P 4</i>	Multi-speed setting (high speed)	0 to 120Hz	0.1Hz	60Hz	77	
5	<i>P 5</i>	Multi-speed setting (middle speed)	0 to 120Hz	0.1Hz	30Hz	77	
6	<i>P 6</i>	Multi-speed setting (low speed)	0 to 120Hz	0.1Hz	10Hz	77	
7	<i>P 7</i>	Acceleration time	0 to 999s	0.1s	5s/15s (*2)	78	
8	<i>P 8</i>	Deceleration time	0 to 999s	0.1s	10s/30s (*2)	78	
9	<i>P 9</i>	Electronic thermal O/L relay	0 to 100A	0.1A	Rated inverter current	80	
30	<i>P30</i>	Extended function display selection	0, 1	1	0	90	
79	<i>P79</i>	Operation mode selection	0 to 4, 7, 8	1	0	120	

\*1. The factory setting varies according to the inverter capacity.

<200V class>

0.4K to 3.7K: 6%, 5.5K, 7.5K: 4%, 11K, 15K : 3%

<400V class>

0.4K, 0.75K: 6%, 1.5K, 2.2K: 5%, 3.7K: 4%, 5.5K, 7.5K: 3%, 11K, 15K: 2%

\*2. The factory setting varies according to the inverter capacity.

Pr. 7 - - - - - 7.5K or less: 5s, 11K or more: 15s

Pr. 8 - - - - - 7.5K or less: 10s, 11K or more: 30s

The extended function parameters are made valid by setting "1" in Pr. 30 "extended function display selection". (For more detailed information on the way to set Pr. 30, refer to the instruction manual (basic).)

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Parameters 0 to 9 are basic function parameters.								
Standard operation functions	10	P10	DC injection brake operation frequency	0 to 120Hz	0.1Hz	3Hz	81	
	11	P11	DC injection brake operation time	0 to 10s	0.1s	0.5s	81	
	12	P12	DC injection brake voltage	0 to 15%	0.1%	4%/2% (*3)	81	
	13	P13	Starting frequency	0 to 60Hz	0.1Hz	0.5Hz	82	
	14	P14	Load pattern selection	0: For constant-torque loads, 1: For reduced-torque loads, 2: For vertical lift loads, 3: For vertical lift loads	1	1	83	
	15	P15	Jog frequency	0 to 120Hz	0.1Hz	5Hz	84	
	16	P16	Jog acceleration/ deceleration time	0 to 999s	0.1s	0.5s	84	
	17	P17	RUN key rotation direction selection	0: Forward rotation, 1: Reverse rotation	1	0	84	
	19	P19	Base frequency voltage	0 to 800V, 888, ---	1V	---	75	
	20	P20	Acceleration/ deceleration reference frequency	1 to 120Hz	0.1Hz	60Hz	78	
	21	P21	Stall prevention function selection	0 to 31, 100	1	0	85	
	22	P22	Stall prevention operation level	0 to 150%	1%	120%	87	
	23	P23	Stall prevention operation level compensation factor at double speed	0 to 200%, ---	1%	---	87	

\*3 The factory setting varies according to the inverter capacity.

0.4K to 7.5K .....4%

11K, 15K.....2%

**Function (Parameter) list**

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting	
Standard operation functions	24	P24	Multi-speed setting (speed 4)	0 to 120Hz, ---	0.1Hz	---	77		
	25	P25	Multi-speed setting (speed 5)	0 to 120Hz, ---	0.1Hz	---	77		
	26	P26	Multi-speed setting (speed 6)	0 to 120Hz, ---	0.1Hz	---	77		
	27	P27	Multi-speed setting (speed 7)	0 to 120Hz, ---	0.1Hz	---	77		
	28	P28	Stall prevention operation reduction starting frequency	0 to 120Hz	0.1Hz	60Hz	87		
	29	P29	Acceleration/ deceleration pattern	0: Linear acceleration/ deceleration, 1: S-pattern acceleration/ deceleration A, 2: S-pattern acceleration/ deceleration B	1	0	89		
	Parameter 30 is basic function parameter.								
	31	P31	Frequency jump 1A	0 to 120Hz, ---	0.1Hz	---	90		
	32	P32	Frequency jump 1B	0 to 120Hz, ---	0.1Hz	---	90		
	33	P33	Frequency jump 2A	0 to 120Hz, ---	0.1Hz	---	90		
	34	P34	Frequency jump 2B	0 to 120Hz, ---	0.1Hz	---	90		
	35	P35	Frequency jump 3A	0 to 120Hz, ---	0.1Hz	---	90		
	36	P36	Frequency jump 3B	0 to 120Hz, ---	0.1Hz	---	90		
	37	P37	Speed display	0, 0.1 to 999	0.1	0	91		
38	P38	Frequency setting voltage gain frequency	1 to 120Hz	0.1Hz	60Hz	92			
39	P39	Frequency setting current gain frequency	1 to 120Hz	0.1Hz	60Hz	92			
40	P40	Start-time earth (ground) fault detection selection	0: Not detected 1: Detected	1	0	96			

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Output terminal functions	41	P41	Up-to-frequency sensitivity	0 to 100%	1%	10%	96	
	42	P42	Output frequency detection	0 to 120Hz	0.1Hz	6Hz	97	
	43	P43	Output frequency detection for reverse rotation	0 to 120Hz, ---	0.1Hz	---	97	
Second functions	44	P44	Second acceleration/ deceleration time	0 to 999s	0.1s	5s	78	
	45	P45	Second deceleration time	0 to 999s, ---	0.1s	---	78	
	46	P46	Second torque boost	0 to 15%, ---	0.1%	---	73	
	47	P47	Second V/F (base frequency)	0 to 120Hz, ---	0.1Hz	---	75	
Current detection	48	P48	Output current detection level	0 to 150%	1%	120%	98	
	49	P49	Output current detection signal delay time	0 to 10s	0.1s	0s	98	
	50	P50	Zero current detection level	0 to 150%	1%	5%	99	
	51	P51	Zero current detection period	0.05 to 1s	0.01s	0.5s	99	

**Function (Parameter) list**

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Display functions	52	P52	Operation panel display data selection	0: Output frequency, 1: Output current, 100:Set frequency during stop/output frequency during operation	1	0	100	
	53	P53	Frequency setting operation selection	0: Setting dial frequency setting mode 1: Setting dial potentiometer mode	1	0	101	
	54	P54	FM terminal function selection	0: Output frequency monitor 1: Output current monitor	1	0	100	
	55	P55	Frequency monitoring reference	0 to 120Hz	0.1Hz	60Hz	102	
	56	P56	Current monitoring reference	0 to 100A	0.1A	Rated inverter current	102	
Automatic restart functions	57	P57	Restart coasting time	0 to 5s, ---	0.1s	---	102	
	58	P58	Restart cushion time	0 to 60s	0.1s	1s	102	
Additional function	59	P59	Remote setting function selection	0: Without remote setting function 1: With remote setting function With frequency setting storage function 2: With remote setting function Without frequency setting storage function	1	0	105	

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Terminal function selection	60	P60	AU terminal function selection	0: RL, 1: RM, 2: RH, 3: RT, 4: AU, 5: STOP, 6: MRS, 7: OH, 8: REX, 9: JOG, 10: RES, 14: X14, 16: X16, ---: STR (The STR signal can be assigned to the STR terminal only.)	1	4	109	
	61	P61	RM terminal function selection		1	1	109	
	62	P62	RH terminal function selection		1	2	109	
	63	P63	STR terminal function selection		1	---	109	
	64	P64	RUN terminal function selection	0:RUN, 1:SU, 3:OL, 4:FU, 11:RY, 12:Y12, 13:Y13, 14:FDN, 15:FUP, 16:RL, 95:Y95 98:LF, 99:ABC	1	0	111	
	65	P65	A, B, C terminal function selection		1	99	111	
Operation selection functions	66	P66	Retry selection	0: OC1 to 3, OV1 to 3, THM, THT, GF, OHT, OLT, PE, OPT 1: OC1 to 3, 2: OV1 to 3, 3: OC1 to 3, OV1 to 3	1	0	112	
	67	P67	Number of retries at alarm occurrence	0: No retry 1 to 10: Without alarm output during retry operation 101 to 110: With alarm output during retry operation	1	0	112	
	68	P68	Retry waiting time	0.1 to 360s	0.1s	1s	112	
	69	P69	Retry count display erase	0: Cumulative count erase	1	0	112	

**Function (Parameter) list**

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting															
Operation selection functions	70	P70	Soft-PWM setting	<table border="1"> <tr> <td></td> <td>Soft-PWM</td> <td>Long wiring mode</td> </tr> <tr> <td>0</td> <td>Absence</td> <td>Absence</td> </tr> <tr> <td>1</td> <td>Presence</td> <td>Absence</td> </tr> <tr> <td>10</td> <td>Absence</td> <td>Presence</td> </tr> <tr> <td>11</td> <td>Presence</td> <td>Presence</td> </tr> </table>		Soft-PWM	Long wiring mode	0	Absence	Absence	1	Presence	Absence	10	Absence	Presence	11	Presence	Presence	1	11	114	
		Soft-PWM	Long wiring mode																				
	0	Absence	Absence																				
	1	Presence	Absence																				
	10	Absence	Presence																				
11	Presence	Presence																					
71	P71	Applied motor	0:Thermal characteristic for Mitsubishi standard motor 1:Thermal characteristic for Mitsubishi constant-torque motor		1	0	80																
72	P72	PWM frequency selection	0 to 15		1	1	114																
73	P73	0-5V/0-10V selection	0: For 0 to 5VDC input 1: For 0 to 10VDC input		1	0	115																
74	P74	Input filter time constant	0: 2-step moving average processing 1 to 8: Exponential average value of 2n at the setting of n		1	1	116																

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Operation selection functions	75	P75	Reset selection/PU stop selection	0: Reset normally enabled/PU stop key disabled 1: Enabled at alarm occurrence only/PU stop key disabled 14: Reset normally enabled/normally decelerated to stop 15: Enabled at alarm occurrence only/normally decelerated to stop	1	14	116	
	76	P76	Cooling fan operation selection	0: Operation started at power on 1: Cooling fan ON/OFF control	1	0	118	
	77	P77	Parameter write disable selection	0: Write is enabled only during a stop 1: Write disabled (except some parameters) 2: Write during operation enabled	1	0	119	
	78	P78	Reverse rotation prevention selection	0: Both forward rotation and reverse rotation enabled, 1: Reverse rotation disabled, 2: Forward rotation disabled	1	0	120	
Parameter 79 is basic function parameter.								
Multi-speed operation function	80	P80	Multi-speed setting (speed 8)	0 to 120Hz, ---	0.1Hz	---	77	
	81	P81	Multi-speed setting (speed 9)	0 to 120Hz, ---	0.1Hz	---	77	
	82	P82	Multi-speed setting (speed 10)	0 to 120Hz, ---	0.1Hz	---	77	
	83	P83	Multi-speed setting (speed 11)	0 to 120Hz, ---	0.1Hz	---	77	

**Function (Parameter) list**

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Multi-speed operation function	84	P84	Multi-speed setting (speed 12)	0 to 120Hz, ---	0.1Hz	---	77	
	85	P85	Multi-speed setting (speed 13)	0 to 120Hz, ---	0.1Hz	---	77	
	86	P86	Multi-speed setting (speed 14)	0 to 120Hz, ---	0.1Hz	---	77	
	87	P87	Multi-speed setting (speed 15)	0 to 120Hz, ---	0.1Hz	---	77	
PID control	88	P88	PID action selection	20: PID reverse action, 21: PID forward action	1	20	124	
	89	P89	PID proportional band	0.1 to 999%, ---	0.1%	100%	124	
	90	P90	PID integral time	0.1 to 999s, ---	0.1s	1s	124	
	91	P91	PID upper limit	0 to 100%, ---	0.1%	---	124	
	92	P92	PID lower limit	0 to 100%, ---	0.1%	---	124	
	93	P93	PID action set point for PU operation	0 to 100%	0.01%	0%	124	
	94	P94	PID differential time	0.01 to 10s, ---	0.01s	---	124	
Slip compensation	95	P95	Rated motor slip	0 to 50%, ---	0.01%	---	132	
	96	P96	Slip compensation time constant	0.01 to 10s	0.01s	0.5s	132	
	97	P97	Constant-power range slip compensation selection	0, ---	1	---	132	
Automatic torque boost	98	P98	Automatic torque boost selection (Motor capacity)	0.2 to 15kW, ---	0.01kW	---	133	
	99	P99	Motor primary resistance	0 to 50Ω, ---	0.01Ω	---	134	

## ● Additional parameters

Function	Parameters	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Maintenance function	H1 (503)	<i>H 1</i>	Maintenance timer	0 to 999	1 (1000h)	0	134	
	H2 (504)	<i>H 2</i>	Maintenance timer alarm output set time	0 to 999, - - -	1 (1000h)	87 (87000h)	134	
	H8 (251)	<i>H 8</i>	Output phase failure protection selection	0, 1	1	0	135	

● Communication Parameters

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Communication Parameters	n1 (331)	n 1	Communication station number	0 to 31: Specify the station number of the inverter.	1	0	143	
	n2 (332)	n 2	Communication speed	48: 4800bps, 96: 9600bps, 192: 19200bps	1	192	143	
	n3 (333)	n 3	Stop bit length	0, 1: (Data length 8), 10, 11: (Data length 7)	1	1	143	
	n4 (334)	n 4	Parity check presence/absence	0: Absent, 1: With odd parity check, 2: With even parity check	1	2	143	
	n5 (335)	n 5	Number of communication retries	0 to 10, ---	1	1	143	
	n6 (336)	n 6	Communication check time interval	0 to 999s, ---	0.1s	0s	143	
	n7 (337)	n 7	Waiting time setting	0 to 150ms, ---	1	---	143	
	n8 (338)	n 8	Operation command source	0: Command source is computer, 1: Command source is external terminal	1	0	158	
	n9 (339)	n 9	Speed command source	0: Command source is computer, 1: Command source is external terminal	1	0	158	
	n10 (340)	n 10	Link startup mode selection	0: As set in Pr. 79. 1: Started in computer link operation mode.	1	0	159	
	n11 (341)	n 11	CR/LF selection	0: Without CR/LF, 1: With CR, without LF 2: With CR/LF	1	1	143	
	n12 (342)	n 12	EEPROM write selection	0: Write to RAM and EEPROM 1: Write to RAM only	1	0	161	

## ● PU parameters

When the parameter unit (FR-PU04) is used, operation from the operation panel is not accepted. (The stop key () is valid)

Function	Parameter	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
PU parameters	n13 (145)		PU display language selection	0: Japanese, 1: English, 2: German, 3: French, 4: Spanish, 5: Italian, 6: Swedish, 7: Finnish	1	0	162	
	n14 (990)		PU buzzer control	0: Without sound, 1: With sound	1	1	162	
	n15 (991)		PU contrast adjustment	 0 (Light) 63 (Dark)	1	58	163	
	n16 (992)		PU main display screen data selection	0: Selectable between output frequency and output current 100: (during stop): Set frequency, output current (during operation): Output frequency, output current	1	0	163	
	n17 (993)		Disconnected PU detection/PU setting lock	0: Without disconnected PU error, 1: Error at disconnected PU, 10: Without disconnected PU error (PU operation disable)	1	0	164	

● Calibration parameters

Function	Parameters	Indication	Name	Setting Range	Minimum Setting Increments	Factory Setting	Refer To:	Customer Setting
Calibration parameters	C1 (900)	$\llcorner 1$	FM terminal calibration	—	—	—	137	
	C2 (902)	$\llcorner 2$	Frequency setting voltage bias frequency	0 to 60Hz	0.1Hz	0Hz	92	
	C3 (902)	$\llcorner 3$	Frequency setting voltage bias	0 to 300%	0.1%	0% (*4)	92	
	C4 (903)	$\llcorner 4$	Frequency setting voltage gain	0 to 300%	0.1%	96% (*4)	92	
	C5 (904)	$\llcorner 5$	Frequency setting current bias frequency	0 to 60Hz	0.1Hz	0Hz	92	
	C6 (904)	$\llcorner 6$	Frequency setting current bias	0 to 300%	0.1%	20% (*4)	92	
	C7 (905)	$\llcorner 7$	Frequency setting current gain	0 to 300%	0.1%	100% (*4)	92	
	C8 (269)	$\llcorner 8$	Parameter for manufacturer setting. Do not set.					
Clear parameters	CLr	$\llcorner \llcorner r$	Parameter clear	0: Not executed 1: Parameter clear 10: All clear	1	0	140	
	ECL	$\llcorner \llcorner \llcorner$	Alarm history clear	0: Not cleared, 1: Alarm history clear	1	0	140	

\*4. Factory settings may differ because of calibration parameters.

**REMARKS**

1. The parameter number in parentheses is the one for use with the parameter unit (FR-PU04).
2. Set "9999" when setting a value "- -" using the parameter unit (FR-PU04).
3. The decimal places of a value 100 or more (3 digits or more) cannot be displayed.

## 2.2 List of parameters classified by purpose of use

Set the parameters according to the operating conditions. The following list indicates purpose of use and corresponding parameters.

Purpose of Use		Parameter Numbers
		Parameter numbers which must be set
Related to operation	Use of extended function parameters	Pr. 30
	Operation mode selection	Pr. 53, Pr. 79 (Communication parameters n10, n17)
	Acceleration/deceleration time/pattern adjustment	Pr. 7, Pr. 8, Pr. 16, Pr. 20, Pr. 29, Pr. 44, Pr. 45
	Selection of output characteristics optimum for load characteristics	Pr. 3, Pr. 14, Pr. 19, Pr. 44, Pr. 45
	Output frequency restriction (limit)	Pr. 1, Pr. 2
	Operation over 60Hz	Pr. 1, Pr. 38, Pr. 39, calibration parameter C4, C7
	Adjustment of frequency setting signals and outputs	Pr. 38, Pr. 39, Pr. 73, calibration parameter C2 to C7
	Motor output torque adjustment	Pr. 0, Pr. 98
	Brake operation adjustment	Pr. 10, Pr. 11, Pr. 12
	Multi-speed operation	Pr. 1, Pr. 2, Pr. 4, Pr. 5, Pr. 6, Pr. 24, Pr. 25, Pr. 26, Pr. 27, Pr. 80, Pr. 81, Pr. 82, Pr. 83, Pr. 84, Pr. 85, Pr. 86, Pr. 87
	Jog operation	Pr. 15, Pr. 16
	Frequency jump operation	Pr. 31, Pr. 32, Pr. 33, Pr. 34, Pr. 35, Pr. 36
	Automatic restart after instantaneous power failure operation	Pr. 57, Pr. 58
	Slip compensation setting	Pr. 95 to Pr. 97
	Setting of output characteristics matching the motor	Pr. 3, Pr. 19, Pr. 71
Related to application operation	Electromagnetic brake operation timing	Pr. 42, Pr. 64, Pr. 65
	Sub-motor operation	Pr. 0, Pr. 3, Pr. 7, Pr. 8, Pr. 44, Pr. 45, Pr. 46, Pr. 47
	Operation in communication with personal computer	Communication parameters n1 to n12
	Operation under PID control	Pr. 60 to Pr. 65, Pr. 73, Pr. 79, Pr. 88 to Pr. 94
	Noise reduction	Pr. 70, Pr. 72

**List of parameters classified by purpose of use \**


Purpose of Use		Parameter Numbers
		Parameter numbers which must be set
Related to monitoring	Frequency meter calibration	Pr. 54, Pr. 55, Pr. 56, calibration parameter C1
	Display of monitor on operation panel or parameter unit (FR-PU04)	Pr. 52, communication parameter n16
	Display of speed, etc.	Pr. 37, Pr. 52
Related to incorrect operation prevention	Function write prevention	Pr. 77
	Reverse rotation prevention	(Pr. 17), Pr. 78
	Current detection	Pr. 48 to Pr. 51, Pr. 64, Pr. 65
	Motor stall prevention	Pr. 21, Pr. 22, Pr. 23, Pr. 28
Others	Input terminal function assignment	Pr. 60 to Pr. 63
	Output terminal function assignment	Pr. 64, Pr. 65
	Increased cooling fan life	Pr. 76
	Motor protection from overheat	Pr. 9, Pr. 71
	Automatic restart operation at alarm stop	Pr. 66 to Pr. 69
	Setting of earth (ground) fault overcurrent protection	Pr. 40
	Inverter reset selection	Pr. 75
	Maintenance timer output	Additional parameters H1, H2
Output phase failure protection selection	Maintenance parameter H8	

## 2.3 Explanation of functions (parameters)

### 2.3.1 Torque boost (Pr. 0 **Pr. 0**, Pr. 46 **Pr. 46**)

Increase the setting value when the distance between the inverter and motor is long or when the motor torque in the low speed range is insufficient (when stall prevention is activated), etc.

- Motor torque in the low-frequency range can be adjusted to the load to increase the starting motor torque.

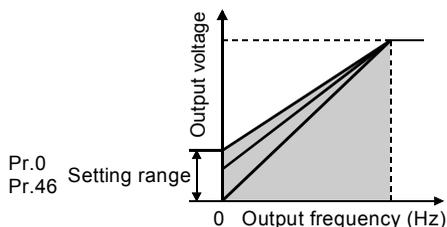

Parameter	Name	Factory Setting	Setting Range	Remarks
0	Torque boost	6%/5%/4%/3%/2%(*)	0 to 15%	*1 The factory setting varies according to the inverter capacity. (Refer to the following table for details.)
46	Second torque boost	---	0 to 15%, ---	---: Function invalid. Setting is enabled when Pr. 30 = "1".

#### <Setting>

- Assuming that the base frequency voltage is 100%, set the 0Hz voltage in %.
- Use the RT signal to switch between two different torque boosts. (Turn on the RT signal to make Pr. 46 valid(\*).)

#### REMARKS

- \* The RT signal acts as the second function selection signal and makes the other second functions valid.
- When using an inverter-dedicated motor (constant-torque motor), make setting as indicated below.
- (If the factory set Pr. 71 value is changed to the setting for use with a constant-torque motor, the Pr. 0 setting changes to the corresponding value in the following table.)

#### <200V class>

Inverter Capacity	Factory Setting	Constant-torque Motor Setting
0.4K, 0.75K	6%	6% (no change)
1.5K to 3.7K		4%
5.5K, 7.5K	4%	3%
11K, 15K	3%	2%

#### <400V class>

Inverter Capacity	Factory Setting	Constant-torque Motor Setting
0.4K, 0.75K	6%	6% (no change)
1.5K	5%	4%
2.2K		3%
3.7K	4%	3%
5.5K, 7.5K	3%	2%
11K, 15K	2%	2% (no change)

#### CAUTION


- Selecting automatic torque boost control makes this parameter setting invalid.
- A too large setting may cause the motor to overheat or result in an overcurrent trip. The guideline is about 10% at the greatest.

#### ◆ Related parameters ◆

- RT signal (second function "Pr. 46") setting ⇒ Pr. 60 to Pr. 63 "input terminal function selection" (refer to page 109)
- Constant-torque motor setting ⇒ Pr. 71 "applied motor" (refer to page 80)
- Automatic torque boost control selection ⇒ Pr. 98 "automatic torque boost selection (motor capacity)" (refer to page 133)

## 2.3.2 Maximum and minimum frequency (Pr. 1 P 1, Pr. 2 P 2)

You can clamp the upper and lower limits of the output frequency.

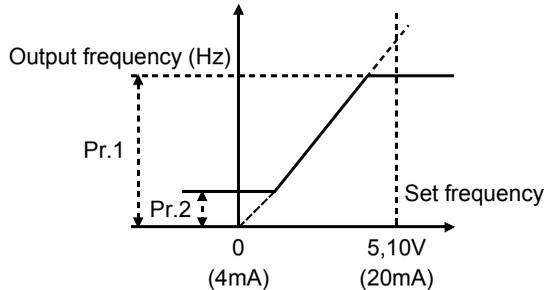

Parameter	Name	Factory Setting	Setting Range
1	Maximum frequency	60Hz	0 to 120Hz
2	Minimum frequency	0Hz	0 to 120Hz

### <Setting>

- Use Pr. 1 to set the upper limit of the output frequency. If the frequency of the frequency command entered is higher than the setting, the output frequency is clamped at the maximum frequency.
- Use Pr. 2 to set the lower limit of the output frequency.

### REMARKS

When using the potentiometer (frequency setting potentiometer) connected across terminals 2-5 to perform operation above 60Hz, change the Pr. 1 and Pr. 38 (Pr. 39 when using the potentiometer across terminals 4-5) values.

## ⚠ CAUTION

- ⚠ If the Pr. 2 setting is higher than the Pr. 13 "starting frequency" value, note that the motor will run at the frequency set in Pr. 2 according to the acceleration time setting by merely switching the start signal on, without entry of the command frequency.


### ◆ Related parameters ◆

- Starting frequency setting ⇒ Pr. 13 "starting frequency" (refer to page 82)
- Maximum frequency setting using external potentiometer
  - ⇒ Pr. 30 "extended function display selection" (refer to page 90),
  - Pr. 38 "frequency setting voltage gain frequency",
  - Pr. 39 "frequency setting current gain frequency" (refer to page 92)

### 2.3.3 Base frequency, base frequency voltage

(Pr.3 P.3, Pr.19 P.19, Pr.47 P.47)

Used to adjust the inverter outputs (voltage, frequency) to the motor rating.

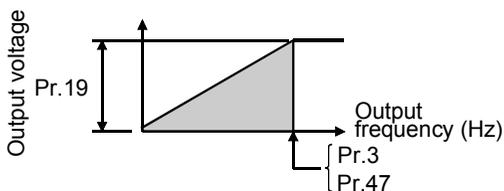

Parameter	Name	Factory Setting	Setting Range	Remarks
3	Base frequency	60Hz	0 to 120Hz	---
19	Base frequency voltage	---	0 to 800V, 888, ---	888: 95% of power supply voltage ---: Same as power supply voltage Setting is enabled when Pr. 30 = "1".
47	Second V/F (base frequency)	---	0 to 120Hz, ---	---: Function invalid Setting is enabled when Pr. 30 = "1".

#### <Setting>

- In Pr. 3 and Pr. 47, set the base frequency (motor's rated frequency). Use the RT signal to switch between these two different base frequencies. (Turn on the RT signal to make Pr. 47 valid.) (\*)  
When running the standard motor, generally set the "base frequency" to the rated frequency of the motor. When running the motor using electronic bypass operation, set the base frequency to the same value as the power supply frequency.  
If only "50Hz" is given on the motor rating plate as the frequency, always set the "base frequency" to "50Hz". If it remains at "60Hz", the voltage may become too low and torque shortage occurs, resulting in an overload trip. Special care must be taken when "1" is set in Pr. 14 "load pattern selection".  
If "50Hz/60Hz" is given on the motor rating plate as the frequency, always set the "base frequency" to "60Hz". When running the motor using commercial power supply-inverter switch-over operation, set the base frequency to the same value as the power supply frequency.
- Set the base voltage (e.g. rated voltage of motor) in Pr. 19.

---

---

**CAUTION**

---

---

1. Set 60Hz in Pr. 3 "base frequency" when using a Mitsubishi constant-torque motor.
  2. When automatic torque boost is selected, Pr. 47 is invalid. When automatic torque boost is selected, setting "- -" or "888" in Pr. 19 uses the rated output voltage.
- 
- 

**REMARKS**

\* The RT signal serves as the second function selection signal and makes the other second functions valid.


**◆ Related parameters ◆**

- When rated motor frequency is "50Hz" ⇒ Pr. 14 "load pattern selection" (refer to page 83)
- RT signal (second function "Pr. 47") setting ⇒ Pr. 60 to Pr. 63 (input terminal function selection)  
(refer to page 109)
- Motor setting ⇒ Pr. 71 "applied motor" (refer to page 80)
- Automatic torque boost selection ⇒ Pr. 98 "automatic torque boost selection (motor capacity)"  
(refer to page 133)

### 2.3.4 Multi-speed operation (Pr. 4 P 4, Pr. 5 P 5, Pr. 6 P 6, Pr. 24 P 24 to Pr. 27 P 27, Pr. 80 P 80 to Pr. 87 P 87)

Used to switch between the predetermined running speeds.

- Any speed can be selected by merely switching on/off the corresponding contact signals (RH, RM, RL, REX signals).
- By using these functions with Pr. 1 "maximum frequency" and Pr. 2 "minimum frequency", up to 17 speeds can be set.
- This function is valid in the external operation mode or in the combined operation mode which is available when Pr. 79 = "3" or "4".

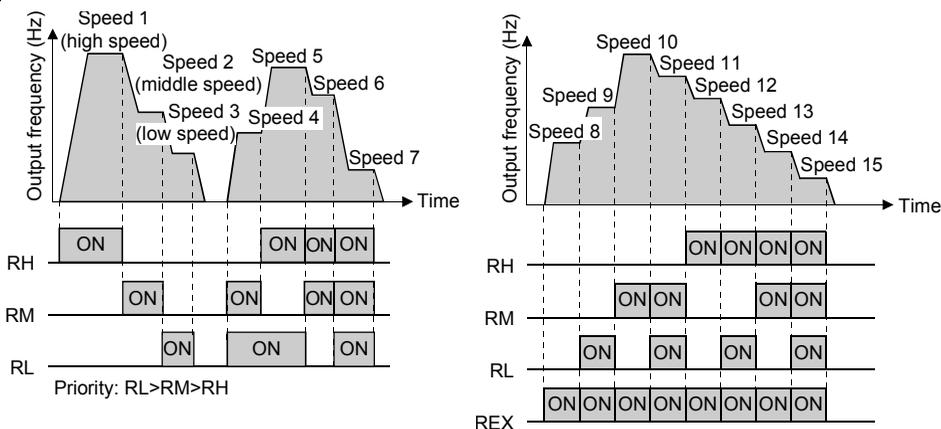

Parameter	Name	Factory Setting	Setting Range	Remarks
4	Multi-speed setting (high speed)	60Hz	0 to 120Hz	---
5	Multi-speed setting (middle speed)	30Hz	0 to 120Hz	---
6	Multi-speed setting (low speed)	10Hz	0 to 120Hz	---
24 to 27	Multi-speed setting (speeds 4 to 7)	---	0 to 120Hz, ---	"---" = no setting. Setting enabled when Pr. 30 = "1".
80 to 87	Multi-speed setting (speeds 8 to 15)	---	0 to 120Hz, ---	"---" = no setting. Setting enabled when Pr. 30 = "1".

#### <Setting>

- Set the running frequencies in the corresponding parameters. Each speed (frequency) can be set as desired between 0 and 120Hz during inverter operation. When the parameter of any multi-speed setting is read, turn the to change the setting. In this case, press the () to store the frequency. (This is also enabled in the external mode.) The setting is reflected by pressing the ().
  - Assign the terminals used for signals RH, RM, RL and REX using Pr. 60 to Pr. 63. (Changing the terminal assignment using Pr. 60 to Pr. 63 (output terminal function selection) may affect the other functions. Check the functions of the corresponding terminals before making setting.)

FUNCTIONS 2

**CAUTION**

1. The multi-speed settings override the main speeds (across terminals 2-5, 4-5, setting dial). When the multi-speed settings and setting dial are used in the combined operation mode (Pr. 79 = 3), the multi-speed settings have precedence.
2. The multi-speeds can also be set in the PU or external operation mode.
3. For 3-speed setting, if two or three speeds are simultaneously selected, priority is given to the set frequency of the lower signal.
4. Pr. 24 to Pr. 27 and Pr. 80 to Pr. 87 settings have no priority between them.
5. The parameter values can be changed during operation.
6. When using this function with the jog signal, the jog signal has precedence.

**REMARKS**


The frequency-set external terminals have the following priority:  
Jog > multi-speed operation > AU (terminal 4) > terminal 2

◆ Related parameters ◆

- Maximum, minimum frequency setting ⇒ Pr. 1 "maximum frequency", Pr. 2 "minimum frequency" (refer to page 74)
- Assignment of signals RH, RM, RL, REX to terminals ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (refer to page 109)
- External operation mode setting ⇒ Pr. 79 "operation mode selection" (refer to page 120)
- Computer link mode ⇒ Pr. 79 "operation mode selection" (refer to page 120), communication parameter n10 "link startup mode selection" (refer to page 159)
- Speed command source ⇒ Communication parameter n9 "speed command source" (refer to page 158)

**2.3.5 Acceleration/deceleration time (Pr. 7 P7, Pr. 8 P8, Pr. 20 P20, Pr. 44 P44, Pr. 45 P45)**

Used to set motor acceleration/deceleration time.  
Set a larger value for a slower speed increase/decrease or a smaller value for a faster speed increase/decrease.

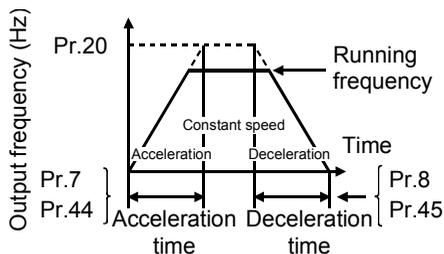

Parameter	Name	Factory Setting	Setting Range	Remarks
7	Acceleration time	10s/30s	0 to 999s	7.5K or less: 5s, 11K or more: 15s
8	Deceleration time	5s	0 to 999s	7.5K or less: 10s, 11K or more: 30s
20	Acceleration/deceleration reference frequency	60Hz	1 to 120Hz	Setting is enabled when Pr. 30 = "1".
44	Second acceleration/deceleration time	5s	0 to 999s	Setting is enabled when Pr. 30 = "1".
45	Second deceleration time	---	0 to 999s, ---	---: acceleration time= deceleration time. Setting is enabled when Pr. 30 = "1".

## <Setting>

- Use Pr. 7 and Pr. 44 to set the acceleration time required to reach the frequency set in Pr. 20 from 0Hz.
- Use Pr. 8 and Pr. 45 to set the deceleration time required to reach 0Hz from the frequency set in Pr. 20.
- Pr. 44 and Pr. 45 are valid when the RT signal is on. (When the RT signal is on, the other second functions (Pr. 44, Pr. 45, Pr. 46, Pr. 47) are also selected.)
- Set "-" in Pr. 45 to make the deceleration time equal to the acceleration time (Pr. 44).

### CAUTION

1. In S-shaped acceleration/deceleration pattern A (refer to page 89), the set time is the period required to reach the base frequency set in Pr. 3.

- Acceleration/deceleration time formula when the set frequency is the base frequency or higher

$$t = \frac{4}{9} \times \frac{T}{(\text{Pr.3})^2} \times f^2 + \frac{5}{9} T$$

T: Acceleration/deceleration time setting (s)

f: Set frequency (Hz)

- Guideline for acceleration/deceleration time at the base frequency of 60Hz (0Hz to set frequency)

Frequency setting (Hz)	60	120
Acceleration/ deceleration time (s)		
5	5	12
15	15	35

- If the Pr. 20 setting is changed, the settings of calibration functions Pr. 38 and Pr. 39 (frequency setting signal gains) remain unchanged.  
To adjust the gains, adjust calibration functions Pr. 38 and Pr. 39.
- When the setting of Pr. 7, Pr. 8, Pr. 44 or Pr. 45 is "0", the acceleration/deceleration time is 0.04s.
- If the acceleration/deceleration time is set to the shortest value, the actual motor acceleration/deceleration time cannot be made shorter than the shortest acceleration/deceleration time which is determined by the mechanical system's J (moment of inertia) and motor torque.

### ◆ Related parameters ◆

- Base frequency setting ⇒ Pr. 3 "base frequency" (refer to page 75)
- Acceleration/deceleration pattern, S-pattern acceleration/deceleration A ⇒ Pr. 29 "acceleration/deceleration pattern" (refer to page 89)
- Calibration function ⇒ Pr. 38 "frequency setting voltage gain frequency"  
Pr. 39 "frequency setting current gain frequency" (refer to page 92)
- RT signal setting ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (refer to page 109)
- Jog acceleration/deceleration time ⇒ Pr. 16 "jog acceleration/deceleration time" (refer to page 84)

### 2.3.6 Selection and protection of a motor (Pr. 9 P. 9, Pr. 71 P. 1)

Set the motor used and protect the motor from overheat.

This feature provides the optimum protective characteristics, including reduced motor cooling capability, at low speed.

#### POINT

- When using the Mitsubishi constant-torque motor  
Set "1" in Pr. 71 for V/F control or automatic torque boost control.  
The electronic thermal relay function is set to the thermal characteristic of the constant-torque motor.
- When you selected the Mitsubishi constant-torque motor, the values of the following parameters are automatically changed. (only when the setting values of those parameters are at factory setting)  
Pr. 0 "torque boost", Pr. 12 "DC injection brake voltage"

Parameter	Name	Factory Setting	Setting Range	Remarks
9	Electronic thermal O/L relay	Rated inverter current(*)	0 to 100A	
71	Applied motor	0	0, 1	Setting is enabled when Pr. 30 = "1"

- \* 0.75K or less is set to 85% of the rated inverter current.

#### <Setting>

- Refer to the following list and set Pr. 71 according to the motor used.

Pr. 71 Setting	Thermal Characteristic of the Electronic Thermal Relay Function
0	Thermal characteristics of a standard motor
1	Thermal characteristics of a Mitsubishi constant-torque motor (This provides a 100% continuous torque characteristic in the low-speed range.)

- Set the rated current [A] of the motor in Pr. 9. (Normally set the rated current at 50Hz.)
- Setting "0" in Pr. 9 disables electronic thermal relay function (motor protective function). (The protective function of the inverter is activated.)

#### CAUTION

- When two or more motors are connected to the inverter, they cannot be protected by the electronic thermal relay function. Install an external thermal relay to each motor.
- When a difference between the inverter and motor capacities is large and the setting becomes less than half amount of the rated inverter current, the protective characteristics of the electronic thermal relay function will be deteriorated. In this case, use an external thermal relay.
- A special motor cannot be protected by the electronic thermal relay function. Use an external thermal relay.

## ⚠ CAUTION


- ⚠ Set this parameter correctly according to the motor used.  
Incorrect setting may cause the motor to overheat and burn.

#### ◆ Related parameters ◆

- Automatic torque boost ⇒ Pr. 98 "automatic torque boost selection (Motor capacity)" (refer to page 133)
- Pr. 0 "torque boost" ⇒ refer to page 73
- Pr. 12 "DC injection brake voltage" ⇒ refer to page 81

### 2.3.7 DC injection brake (Pr. 10 P10, Pr. 11 P11, Pr. 12 P12)

Braking torque and timing to stop the motor can be adjusted with settings of DC injection brake voltage (torque) at a stop, operation time, and frequency at an operation start.

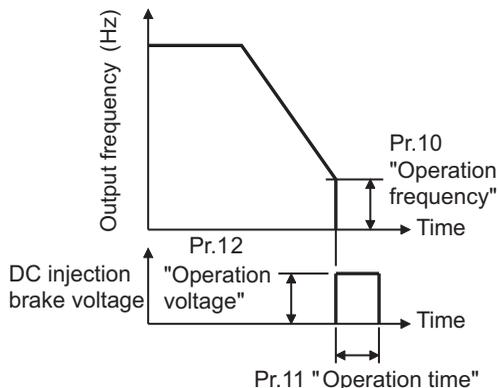

Parameter	Name	Factory Setting	Setting Range	Remarks
10	DC injection brake operation frequency	3Hz	0 to 120Hz	Setting is enabled when Pr. 30 = "1".
11	DC injection brake operation time	0.5s	0 to 10s	(When Pr. 11 is set to "0s" or Pr. 12 is set to "0%", DC injection brake is not operated.)
12	DC injection brake voltage	4%/2%(*)	0 to 15%	

\* The factory setting varies according to the inverter capacity. (7.5K or less/11K or more)

#### CAUTION

•A too large setting of Pr.12 "DC injection brake voltage" activates protection function of electronic thermal relay function and can cause the inverter life to be shorter.

#### <Setting>

- Use Pr. 10 to set the frequency at which the DC injection brake operation is started.
- Use Pr. 11 to set the period during when the brake is operated.
- Use Pr. 12 to set the percentage of the power supply voltage.
- When using an inverter dedicated motor (constant-torque motor), set the following value. (If the Pr. 71 value is changed to the setting for use with a constant-torque motor without changing the Pr. 12 value from the factory setting, the Pr. 12 setting is automatically changed to the following.)

Inverter Capacity	Factory Setting	Constant-torque Motor Setting
0.4K to 3.7K	4%	4% (no change)
5.5K, 7.5K	4%	2%
11K, 15K	2%	2% (no change)

## CAUTION

⚠ Install a mechanical brake. No holding torque is provided.


#### ◆ Related parameters ◆

- Pr. 71 "applied motor" ⇒ refer to page 80

### 2.3.8 Starting frequency (Pr. 13 **P13**)

The starting frequency at which the start signal is turned on can be set in the range 0 to 60Hz.

Frequency which is output by the inverter first at a start and gives great influence to the starting torque. About 1 to 3Hz for vertical lift applications, or up to 5Hz to the maximum. For other than vertical lift applications, factory setting of about 0.5Hz is recommended.

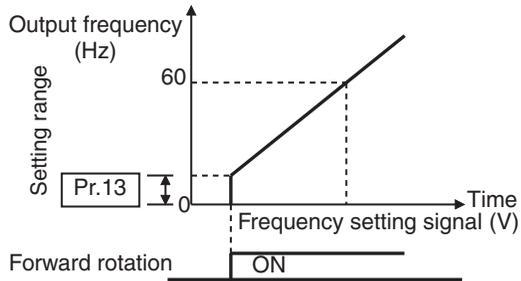

Parameter	Name	Factory Setting	Setting Range	Remarks
13	Starting frequency	0.5Hz	0 to 60Hz	Setting is enabled when Pr. 30 = "1".

#### CAUTION

The inverter will not start if the frequency setting signal is less than the value set in Pr. 13 "starting frequency".

For example, when 5Hz is set in Pr. 13, the motor will not start running until the frequency setting signal reaches 5Hz.

## ! CAUTION


! Note that when Pr. 13 is set to any value equal to or less than Pr. 2 "minimum frequency", simply turning on the start signal will run the motor at the preset frequency even if the command frequency is not input.

#### ◆ Related parameters ◆

- Minimum frequency setting ⇒ Pr. 2 "minimum frequency" (refer to page 74)

### 2.3.9 Load pattern selection (Pr. 14 **P14**)

You can select the optimum output characteristic (V/F characteristic) for the application and load characteristics.

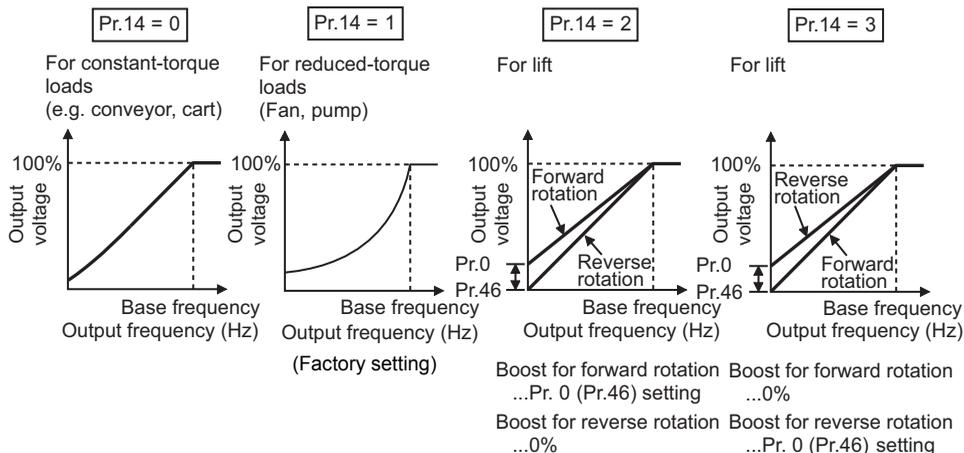

Parameter	Name	Factory Setting	Setting Range	Remarks
14	Load pattern selection	1	0, 1, 2, 3	0: For constant-torque loads 1: For reduced-torque loads 2: For vertical lift loads 3: For vertical lift loads Setting is enabled when Pr. 30 = "1".

#### CAUTION

- When automatic torque boost control is selected, this parameter setting is ignored.
- Pr. 46 "second torque boost" is made valid when the RT signal turns on. The RT signal acts as the second function selection signal and makes the other second functions valid.

#### ◆ Related parameters ◆

- Automatic torque boost ⇒ Pr. 98 "automatic torque boost selection (motor capacity)" (refer to page 133)
- Boost setting ⇒ Pr. 0 "torque boost", Pr. 46 "second torque boost" (refer to page 73)
- Assignment of RT signal to terminal when second torque boost is used ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (refer to page 109)


### 2.3.10 Jog operation (Pr.15 P 15, Pr.16 P 16)

To start/stop jog operation in the external operation mode, choose the jog operation function in input terminal function selection, turn on the jog signal, and turn on/off the start signal (STF, STR).

You can choose the jog operation mode from the parameter unit (FR-PU04) and perform jog operation

using the  FWD or  REV.

(Can be read as the basic parameters when the FR-PU04 is connected.)

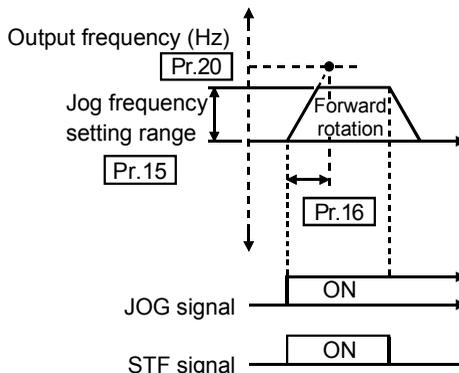

● Set the frequency and acceleration/deceleration time for jog operation.

Parameter	Name	Factory Setting	Setting Range	Remarks
15	Jog frequency	5Hz	0 to 120Hz	
16	Jog acceleration/deceleration time	0.5s	0 to 999s	Setting is enabled when Pr. 30 = "1".

#### CAUTION

- In S-shaped acceleration/deceleration pattern A, the acceleration/deceleration time is the period of time required to reach Pr. 3 "base frequency", not Pr. 20 "acceleration/deceleration reference frequency".
- The acceleration time and deceleration time cannot be set separately for jog operation.
- The Pr. 15 "Jog frequency" value should be equal to or higher than the Pr. 13 "starting frequency" setting.
- Assign the jog signal using any of Pr. 60 to Pr. 63 (input terminal function selection).
- Select PU operation mode to perform PU JOG operation. (Refer to page 120.)

#### ◆ Related parameters ◆

- Assignment of jog signal to terminal ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (refer to page 109)
- Acceleration/deceleration pattern S-shaped acceleration/deceleration A ⇒ Pr. 29 "acceleration/deceleration pattern" (refer to page 89)

### 2.3.11 RUN key rotation direction selection (Pr.17 P 17)

Used to choose the direction of rotation by operating the  key of the operation panel.

Parameter	Name	Factory Setting	Setting Range	Remarks
17	RUN key rotation direction selection	0	0, 1	0: Forward rotation 1: Reverse rotation Setting is enabled when Pr. 30 = "1".

➡ Refer to  (page 75)

➡ Refer to ,  (page 78)

### 2.3.12 Stall prevention function and current limit function (Pr. 21 P21)

You can make setting to prevent stall caused by overcurrent and/or to prevent the inverter from resulting in an overcurrent trip (to disable fast-response current limit that limits the current) when an excessive current flows due to sudden load fluctuation or ON-OFF on the output side of a running inverter.

- Stall prevention  
If the current exceeds the stall prevention operation level (Pr.22), the output frequency of the inverter is automatically varied to reduce the current.
- High response current limit  
If the current exceeds the limit value, the output of the inverter is shut off to prevent an overcurrent.

Parameter	Name	Factory Setting	Setting Range	Remarks
21	Stall prevention function selection	0	0 to 31, 100	Setting is enabled when Pr. 30 = "1".

Pr. 21 Setting	High Response Current Limit ○: Activated ●: Not activated	Stall Prevention Operation Selection ○: Activated ●: Not activated			OL Signal Output ○: Operation continued ●: Operation not continued (*1)
		Acceleration	Constant speed	Deceleration	
0	○	○	○	○	○
1	●	○	○	○	○
2	○	●	○	○	○
3	●	●	○	○	○
4	○	○	●	○	○
5	●	●	●	○	○
6	○	●	●	○	○
7	●	●	●	○	○
8	○	○	○	●	○
9	●	○	○	●	○
10	○	●	○	●	○
11	●	●	○	●	○
12	○	○	●	●	○
13	●	○	●	●	○
14	○	●	●	●	○
15	●	●	●	●	— (*2)
16	○	○	○	○	●
17	●	○	○	○	●
18	○	●	○	○	●
19	●	●	○	○	●
20	○	○	●	○	●
21	●	○	●	○	●
22	○	●	●	○	●
23	●	●	●	○	●
24	○	○	○	●	●
25	●	○	○	●	●
26	○	●	○	●	●
27	●	○	○	●	●
28	○	○	●	●	●
29	●	○	●	●	●
30	○	●	●	●	●
31	●	●	●	●	— (*2)
100	Driving	○	○	○	○
	Regenerative	●	●	●	— (*2)

\*1 When "Operation not continued for OL signal output" is selected, the "OLT" alarm code (stopped by stall prevention) is displayed and operation stopped.

(Alarm stop display "OLF")

\*2 Since both fast response current limit and stall prevention are not activated, OL signal and OLT are not output.

2  
FUNCTIONS

---

---

**CAUTION**

---

---

- If the load is heavy or the acceleration/deceleration time is short, the stall prevention may be activated and the motor not stopped in the preset acceleration/deceleration time. Therefore, set optimum values to the Pr. 21 and stall prevention operation level.
  - When the fast response current limit has been set in Pr. 21 (factory setting), torque will not be provided at the Pr. 22 setting of 140% or higher. At this time, make setting so that the fast response current limit is not activated.
  - In vertical lift applications, make setting so that the fast response current limit is not activated. Torque may not be produced, causing a drop due to gravity.
- 
- 

 **CAUTION**

 Always perform test operation.

Stall prevention operation performed during acceleration may increase the acceleration time.

Stall prevention operation performed during constant speed may cause sudden speed changes.


Stall prevention operation performed during deceleration may increase the deceleration time, increasing the deceleration distance.

### 2.3.13 Stall prevention (Pr. 22 **P22**, Pr. 23 **P23**, Pr. 28 **P28**)

Set the output current level (% value to the rated inverter output current) at which the output frequency will be adjusted to prevent the inverter from stopping due to overcurrent etc.

- During high-speed operation above the rated motor frequency, acceleration may not be made because the motor current does not increase. To improve the operating characteristics of the motor in this case, the stall prevention level can be reduced in the high frequency range. This function is effective for performing operation up to the high speed range on a centrifugal separator etc. Normally, set 60Hz in Pr. 28 "stall prevention operation reduction starting frequency" and 100% in Pr. 23.

Parameter	Name	Factory Setting	Setting Range	Remarks
22	Stall prevention operation level	120%	0 to 150%	—
23	Stall prevention operation level compensation factor at double speed	---	0 to 200%, ---	---: Pr. 22 equally
28	Stall prevention operation reduction starting frequency	60Hz	0 to 120Hz	—

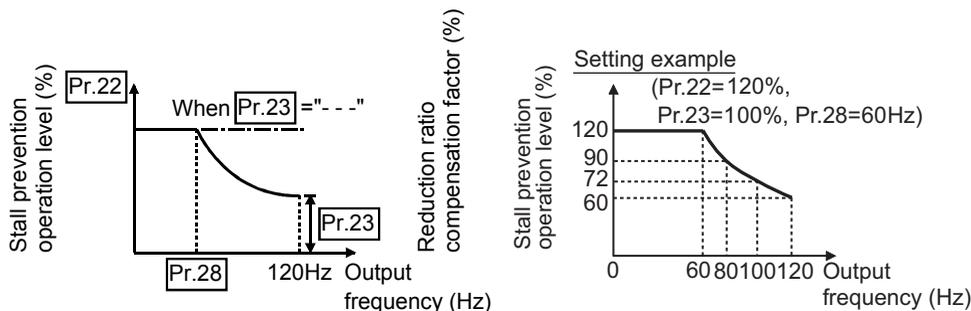

#### <Setting>

- Generally, set 120% (factory setting) in Pr. 22 "stall prevention operation level". Setting "0" in Pr. 22 disables stall prevention operation.
- To reduce the stall prevention operation level in the high frequency range, set the reduction starting frequency in Pr. 28 "stall prevention operation reduction starting frequency" and the reduction ratio compensation factor in Pr. 23.

Formula for stall prevention operation level

$$\text{Stall prevention operation level (\%)} = A + B \times \left[ \frac{\text{Pr. 22-A}}{\text{Pr. 22-B}} \right] \times \left[ \frac{\text{Pr. 23-100}}{100} \right]$$

$$\text{where, } A = \frac{\text{Pr. 28 (Hz)} \times \text{Pr. 22 (\%)}}{\text{output frequency (Hz)}}, \quad B = \frac{\text{Pr. 28 (Hz)} \times \text{Pr. 22 (\%)}}{120\text{Hz}}$$

- By setting " - - - " (factory setting) in Pr. 23, the stall prevention operation level is constant at the Pr. 22 setting up to 120Hz.

**REMARKS**

When the fast response current limit is set in Pr. 21 "stall prevention function selection" (factory setting), do not set any value above 140% in Pr. 22. The torque will not be developed by doing so.

If the Pr. 22 value is set to higher than 140%, make setting in Pr. 21 to disable the high response current limit.

In vertical lift applications, make setting so the fast response current limit is not activated. Torque may not be produced, causing a drop due to gravity.

 **CAUTION**

 **Do not set a small value as the stall prevention operation current. Otherwise, torque generated will reduce.**

 **Test operation must be performed.**

**Stall prevention operation during acceleration may increase the acceleration time.**


**Stall prevention operation during constant speed may change the speed suddenly.**

**Stall prevention operation during deceleration may increase the deceleration time, increasing the deceleration distance.**

**P24** to **P27** ➡ Refer to **P 4** to **P 6** (page 77)

### 2.3.14 Acceleration/deceleration pattern (Pr. 29 **Pr. 29**)

Set the acceleration/deceleration pattern.

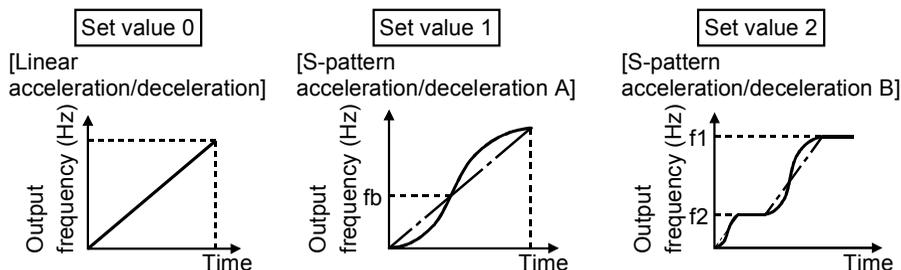

Parameter	Name	Factory Setting	Setting Range	Remarks
29	Acceleration/deceleration pattern	0	0, 1, 2	Setting is enabled when Pr. 30 = "1".

#### <Setting>

Pr. 29 Setting	Function	Description
0	Linear acceleration/deceleration	Acceleration is made to the set frequency linearly. (Factory setting)
1	S-pattern acceleration/deceleration A (*)	For machine tool spindle applications, etc. Used when acceleration/deceleration must be made in a short time to a high-speed range of not lower than the base frequency. Acceleration/deceleration is made in a pattern where $f_b$ (base frequency) acts as the inflection point of an S shape, and you can set the acceleration/deceleration time which matches the motor torque reduction in the constant-output operation range of not lower than the base frequency.
2	S-pattern acceleration/deceleration B	For prevention of load shifting in conveyor and other applications. Since acceleration/deceleration is always made in an S shape from $f_2$ (current frequency) to $f_1$ (target frequency), this function eases shock produced at acceleration/deceleration and is effective for load collapse prevention, etc.

#### CAUTION

\* As the acceleration/deceleration time, set the time taken to reach the Pr. 3 "base frequency" value, not the Pr. 20 "acceleration/deceleration reference frequency" value.

#### ◆ Related parameters ◆

- Base frequency (acceleration/deceleration time setting) setting ⇒ Pr. 3 "base frequency" (refer to page 75)
- Pr. 20 "acceleration / deceleration reference frequency" ⇒ refer to page 78
- For setting of "1" (S-pattern acceleration/deceleration A)  
⇒ Pr. 44 "second acceleration/deceleration time", Pr. 45 "second deceleration time" (refer to page 78)

### 2.3.15 Extended function display selection (Pr. 30 **P30**)

Used to display the extended function parameters.


- Refer to page 58 for the extended function parameter list.
- Refer to the instruction manual (basic) for the parameter setting method.

Parameter	Name	Factory Setting	Setting Range	Remarks
30	Extended function display selection	0	0, 1	0: Without display, 1: With display

### 2.3.16 Frequency jump (Pr. 31 **P31** to Pr. 36 **P36**)

When it is desired to avoid resonance attributable to the natural frequency of a mechanical system, these parameters allow resonant frequencies to be jumped. Up to three areas may be set, with the jump frequencies set to either the top or bottom point of each area.


The value set to 1A, 2A or 3A is a jump point and operation is performed at this frequency.

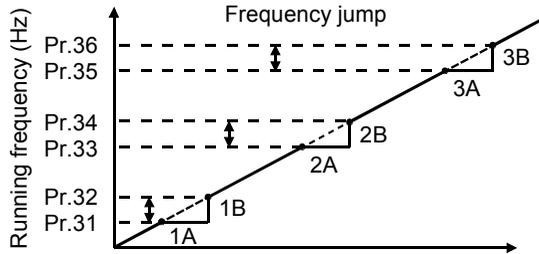


Parameter	Name	Factory Setting	Setting Range	Remarks
31	Frequency jump 1A	---	0 to 120Hz,---	• - - -: Function invalid • Setting is enabled when Pr. 30 = "1"
32	Frequency jump 1B	---	0 to 120Hz,---	
33	Frequency jump 2A	---	0 to 120Hz,---	
34	Frequency jump 2B	---	0 to 120Hz,---	
35	Frequency jump 3A	---	0 to 120Hz,---	
36	Frequency jump 3B	---	0 to 120Hz,---	

#### <Setting>

- To fix the frequency at 30Hz between Pr. 33 and Pr. 34 (30Hz and 35Hz), set 30Hz in Pr. 33 and 35Hz in Pr. 34.



- To jump to 35Hz between 30 and 35Hz, set 35Hz in Pr. 33 and 30Hz in Pr. 34.



#### CAUTION

During acceleration/deceleration, the running frequency within the set area is valid.

#### REMARKS

Write disable error "E-1" occurs if the frequency jump setting ranges overlap.

### 2.3.17 Speed display (Pr. 37 )

You can change the output frequency indication or set frequency of the operation panel and parameter unit (FR-PU04) to the motor speed or machine speed.

Parameter	Name	Factory Setting	Setting Range	Remarks	
37	Speed display	0	0, 0.1 to 999	0:Output frequency	Setting is enabled when Pr. 30 = "1".

#### <Setting>

- To display the machine speed, set in Pr. 37 the machine speed for 60Hz operation.

#### CAUTION

- The motor speed is converted from the output frequency and does not match the actual speed.
- When you want to change the monitor (PU main display) of the operation panel, refer to Pr. 52 "operation panel display data selection" and communication parameter n16 "PU main display screen data selection".
- Since the operation panel indication is 3 digits, make a setting so that the monitor value does not exceed "999". If the Pr. 1 value is higher than 60Hz and Pr. 1 value × Pr. 37 value > 60Hz × 999

 (write error) occurs when Pr. 1 or Pr. 37 is written.

#### REMARKS

When the speed is set in Pr. 37 (Pr. 37 ≠ 0), the speed is monitored and displayed in the monitor/frequency setting mode.

At this time, setting can be made in the minimum setting (display) increments of 0.01r/min. Due to the limitations on the resolution of the set frequency, the indication in the second decimal place may differ from the setting.

## CAUTION

-  Make sure that the running speed setting is correct. Otherwise, the motor might run at extremely high speed, damaging the machine.



#### ◆ Related parameters ◆

- To choose running speed monitor display ⇒ Pr. 52 "operation panel display data selection" (refer to page 100)
- FR-PU04 display switching ⇒ Communication parameter n16 "PU main display screen data selection" (refer to page 163)

### 2.3.18 Biases and gains of the frequency setting voltage (current)

(Pr. 38 **P38**, Pr. 39 **P39**, C2 **C2** to C7 **C7**)

You can set the magnitude (slope) of the output frequency as desired in relation to the external frequency setting signal (0 to 5V, 0 to 10V or 4 to 20mADC). The "bias" and "gain" functions are used to adjust the relationship between the input signal entered from outside the inverter to set the output frequency, e.g. 0 to 5V, 0 to 10V or 4 to 20mADC, and the output frequency.

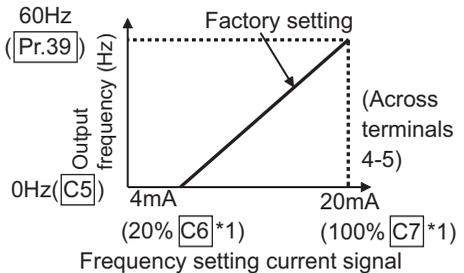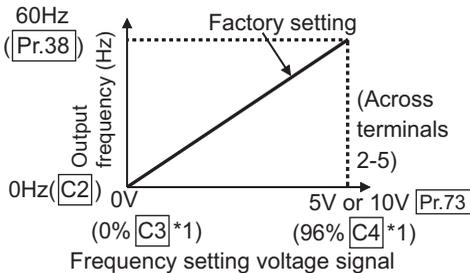

Parameter	Name	Factory Setting	Setting Range	Remarks
38	Frequency setting voltage gain frequency	60Hz	1 to 120Hz	Setting is enabled when Pr. 30 = "1".
39	Frequency setting current gain frequency	60Hz	1 to 120Hz	
C2 (902) *2	Frequency setting voltage bias frequency	0Hz	0 to 60Hz	
C3 (902) *2	Frequency setting voltage bias	0% *1	0 to 300%	
C4 (903) *2	Frequency setting voltage gain	96% *1	0 to 300%	
C5 (904) *2	Frequency setting current bias frequency	0Hz	0 to 60Hz	
C6 (904) *2	Frequency setting current bias	20% *1	0 to 300%	
C7 (905) *2	Frequency setting current gain	100% *1	0 to 300%	

\*1. Factory settings may differ because of calibration parameters.

\*2. The parameter number in parentheses is the one for use with the parameter unit (FR-PU04).

#### POINT

- Bias setting for 0-5VDC (0-10VDC) input ➡ Use calibration parameters C2, C3 for setting.
  - Gain setting for 0-5VDC (0-10VDC) input ➡ Use Pr. 38, calibration parameter C4 for setting.
  - Bias setting for 4-20mADC input ➡ Use calibration parameters C5, C6 for setting.
  - Gain setting for 4-20mADC input ➡ Use Pr. 39, calibration parameter C7 for setting.
- (For 4 to 20mADC input, turn on the AU signal.)

## <Setting>

- (1) How to change the highest frequency
- (2) Adjusting the deviation of the highest frequency from the Pr. 38 (Pr. 39) setting.
  - (2-1) Make adjustment with a voltage applied directly across terminals 2-5 (with a current flowing across terminals 4-5)
  - (2-2) Make adjustment at any point without a voltage applied across terminals 2-5 (without a current flowing across terminals 4-5)

**Changingexample** When you want to use the 0 to 5VDC input frequency setting potentiometer to change the 5V frequency from 60Hz(factory setting) to 50Hz

### POINT

- Pr. 38 is an extended function parameter. Pr. 30 must be set to "1".
- Change Pr. 38 "frequency setting voltage gain frequency" to 50Hz.

## (1) How to change the highest frequency

Operation	Display
<p>1. Confirm the RUN indication and operation mode indication.</p> <ul style="list-style-type: none"> <li>●The inverter must be at a stop.</li> <li>●The inverter must be in the PU operation mode. (Press the .)</li> </ul>	
<p>2. Press the  to choose the parameter setting mode.</p>	 ⇒ 
<p>3. Turn the  until the parameter number 38 "frequency setting voltage gain frequency" appears.</p> <ul style="list-style-type: none"> <li>●Pr. 30 must be set to "1". (For the Pr. 30 setting method, refer to the instruction manual (basic).)</li> </ul>	 ⇒ 
<p>4. Pressing the  shows the currently set value. (60Hz)</p>	 ⇒ 
<p>5. Turn the  to change the set value to "50.0". (50Hz)</p>	 ⇒ 
<p>6. Press the  to set the value.</p>	 ⇒ 

**Flicker ... Parameter setting complete!!**

- By turning the , you can read another parameter.
- Press the  to show the setting again.
- Press the  twice to show the next parameter.

### ? The monitor/frequency setting indication cannot be changed to just 50Hz ... Why?

- ☞ The calibration parameter C4 "frequency setting voltage gain" value must be set. (Refer to next page (2).)

### REMARKS

To change the value to more than 60Hz, Pr. 1 "maximum frequency" must be set to more than 60Hz.

**Changing example** Changing the calibration parameter C4 "frequency setting voltage gain" value

**POINT**

The calibration parameter C4 is an extended function parameter. Pr. 30 must be set to "1".

**(2) Adjusting a deviation of the highest frequency from the Pr. 38 (Pr. 39) setting.**  
**(2)-1 Making adjustment with a voltage applied directly across terminals 2-5 (with a current flowing across terminals 4-5)**

**Operation**

**Display**

1. Confirm the RUN indication and operation mode indication.



- The inverter must be at a stop.
- The inverter must be in the PU operation mode.

(Press the )

2. Press the to choose the parameter setting mode.



(The parameter number read previously appears.)

3. Turn the to show "┌ . .".



- Pr. 30 must be set to "1".
- (For the Pr. 30 setting method, refer to the instruction manual (basic).)

4. Press the to show "┌ -".



When adjusting Pr. 38

5. Turn the until the calibration parameter C4 "frequency setting voltage gain" appears.



6. Press the to show the analog voltage value (%).



(Analog voltage value (%) across terminals 2-5)

7. Apply a 5V voltage.

(Turn the external potentiometer connected to across terminals 2-5 to the maximum (any position).)



\*The value is nearly 100 (%) in the maximum position of the potentiometer.

**CAUTION**

After performing operation in step 7, do not touch the until completion of calibration.

8. Press the to set the value.



**Flicker ... Parameter setting complete!!**  
 (Adjustment complete)

\*The value is nearly 100 (%) in the maximum position of the potentiometer.

- By turning the , you can read another parameter.
- Press the to return to the ┌ - indication (step 4).
- Press the twice to show the next parameter (┌ ┌ r).

? The frequency meter (indicator) connected to across terminals FM-SD does not indicate just 50Hz ... Why?

☞ The calibration parameter C1 "FM terminal calibration" value must be set. (For the setting method, refer to the instruction manual (basic).)

? When write is performed, an error (┌ r 3) is displayed.

☞ The gain and bias frequency settings are too close.

## (2)-2 Making adjustment at any point with a voltage not applied across terminals 2-5 (without a current flowing across terminals 4-5)

### Operation

### Display

1. Confirm the RUN indication and operation mode indication.

- The inverter must be at a stop.
- The inverter must be in the PU operation mode.

(Press the )



2. Press the  to choose the parameter setting mode.



(The parameter number read previously appears.)

3. Turn the  to show "└ . .".

- Pr. 30 must be set to "1".  
(For the Pr. 30 setting method, refer to the instruction manual (basic).)



4. Press the  to show "└ -".



When adjusting Pr. 38

5. Turn the  until the calibration parameter C4 "frequency setting voltage gain" appears.



6. Press the  to show the analog voltage value (%).

(The maximum value can be displayed by merely turning the  clockwise or counterclockwise in this status by one pulse's worth of turns (there is tactile feedback because of the notch type).)



(Current operation Analog voltage value (%))

7. Turn the  to the maximum value (100%) or any point.



\*The value is 100 (%) in the maximum position of the potentiometer.

8. Press the  to set the value.



**Flicker ... Parameter setting complete!!**

\*The value is 100 (%) in the maximum position of the potentiometer.

- Turn the  to read another parameter.
- Press the  to return to the └ - indication (step 4).
- Press the  twice to show the next parameter (└ L r).

### REMARKS

For the way to change the output frequency setting of the frequency setting potentiometer, refer to the instruction manual (basic).

### 2.3.19 Start-time earth (ground) fault detection selection (Pr. 40 **P40**)

You can choose whether to make earth (ground) fault detection at start valid or invalid. Earth (Ground) fault detection is executed only right after the start signal is input to the inverter.

Protective function will not activate if an earth (ground) fault occurs during operation.

Parameter	Name	Factory Setting	Setting Range	Remarks
40	Start-time earth (ground) fault detection selection	0	0, 1	0: Earth (Ground) fault detection for protection is not executed. 1: Earth (Ground) fault detection for protection is executed. Setting is enabled when Pr. 30 = "1".

#### CAUTION

1. If an earth (ground) fault is detected with "1" set in Pr. 40, alarm output "CF" is detected and the output is shut off.
2. If the motor capacity is less than 0.1kW, earth (ground) fault protection may not be provided.


#### REMARKS

When an earth (ground) fault is detected with "1" set in Pr. 40, an approximate 20ms delay occurs at every start.

## 2.4 Output terminal function

### 2.4.1 Up-to-frequency sensitivity (Pr. 41 **P41**)

The ON range of the up-to-frequency signal (SU) output when the output frequency reaches the running frequency can be adjusted between 0 and  $\pm 100\%$  of the running frequency. This parameter can be used to ensure that the running frequency has been reached to provide the operation start signal etc. for related equipment.

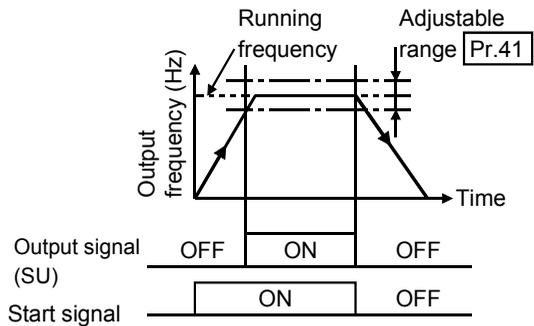

Parameter	Name	Factory Setting	Setting Range	Remarks
41	Up-to-frequency sensitivity	10%	0 to 100%	Setting is enabled when Pr. 30 = "1".

Use Pr. 64 or Pr. 65 (output terminal function selection) to assign the terminal used for SU signal output.

#### CAUTION


Using Pr. 64 or Pr. 65 to change the terminal assignment may affect the other functions. Please make setting after confirming the function of each terminal. (Refer to page 111.)

#### ◆ Related parameters ◆

- Assignment of SU signal to terminal  $\Rightarrow$  Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (refer to page 111)

## 2.4.2 Output frequency detection (Pr. 42 P42, Pr. 43 P43)

The output frequency detection signal (FU) is output when the output frequency reaches or exceeds the setting. This function can be used for electromagnetic brake operation, open signal, etc. You can also set the frequency detection used exclusively for reverse rotation.

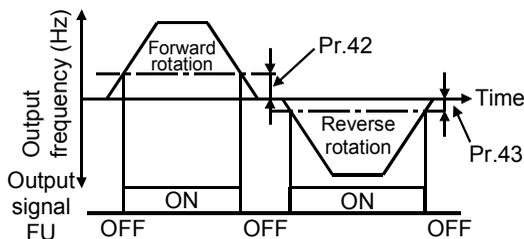

This function is effective for switching the timing of electromagnetic brake operation between forward rotation (rise) and reverse rotation (fall) during vertical lift operation, etc.

Parameter	Name	Factory Setting	Setting Range	Remarks	
42	Output frequency detection	6Hz	0 to 120Hz	—	Setting is enabled when Pr. 30 = "1".
43	Output frequency detection for reverse rotation	---	0 to 120Hz, ---	---: Same as Pr. 42 setting	

### <Setting>

Refer to the above chart and set the corresponding parameters.

- When Pr. 43 "output frequency detection for reverse rotation"  $\neq$  " - - ", the Pr.42 setting applies to forward rotation and the Pr.43 setting applies to reverse rotation.
- Use Pr. 64 or Pr. 65 (output terminal function selection) to assign the terminal used for FU signal output.

### CAUTION

Using Pr. 64 or Pr. 65 to change the terminal assignment may affect the other functions. Make setting after confirming the function of each terminal.

#### ◆ Related parameters ◆

- Assignment of FU signal to terminal  $\Rightarrow$  Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (refer to page 111)

P44, P45  $\Rightarrow$  Refer to P 7, P 8 (page 78).

P46  $\Rightarrow$  Refer to P 0 (page 73).


P47  $\Rightarrow$  Refer to P 3 (page 75).

## 2.5 Current detection function

### 2.5.1 Output current detection functions

(Pr. 48 **P48**, Pr. 49 **P49**)

If the output remains higher than the Pr. 48 setting during inverter operation for longer than the time set in Pr. 49, the output current detection signal (Y12) is output from the inverter's open collector output terminal.

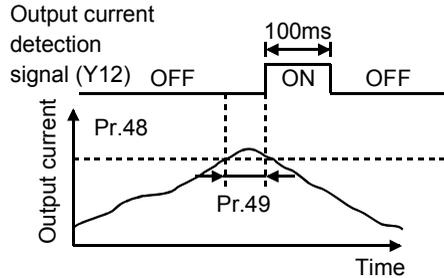

Parameter	Name	Factory Setting	Setting Range	Remarks
48	Output current detection level	120%	0 to 150%	Setting is enabled when Pr. 30 = "1"
49	Output current detection signal delay time	0s	0 to 10s	

#### <Setting>

Parameter Number	Description
48	Set the output current detection level. 100% is the rated inverter current.
49	Set the output current detection period. Set the time from when the output current has risen above the Pr. 48 setting until the output current detection signal (Y12) is output.

Use Pr. 64 or Pr. 65 (output terminal function selection) to assign the terminal used for Y12 signal output.

#### CAUTION


- Once turned ON, when the output current has risen above the preset detection level, the output current detection signal is held for at least 100ms (approximately).
- Using Pr. 64 or Pr. 65 (output terminal function selection) to change terminal assignment may affect the other functions. Make setting after confirming the function of each terminal.

#### ◆ Related parameters ◆

- Assignment of Y12 signal to terminal ⇒ Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (refer to page 111)

## 2.5.2 Zero current detection (Pr. 50 **PS0**, Pr. 51 **PS1**)

When the inverter's output current falls to "0[A]", torque will not be generated. This may cause a gravity drop when the inverter is used in vertical lift application.

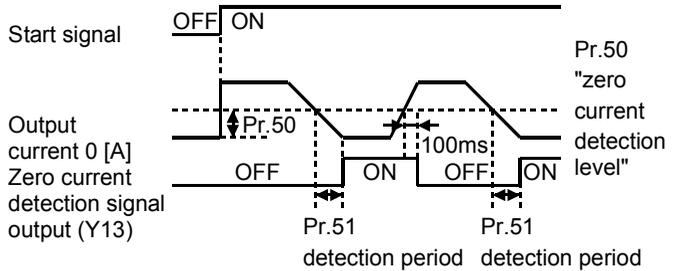

To prevent this, the output current "zero" signal can be output from the inverter to close the mechanical brake when the output current has fallen to "0[A]".

Parameter	Name	Factory Setting	Setting Range	Remarks
50	Zero current detection level	5%	0 to 150%	Setting is enabled when
51	Zero current detection period	0.5s	0.05 to 1s	Pr. 30 = "1"

### POINT

If the output is lower than the Pr. 50 setting for longer than the time set in Pr. 51 during inverter operation, the zero current detection (Y13) signal is output from the inverter's open collector output terminal.

### <Setting>

Parameter	Description
50	Set the zero current detection level. Set the level of zero current detection in terms of the percentage of the rated inverter current from the output current value of 0 [A].
51	Set the zero current detection period. Set a period of time from when the output current falls to or below the Pr. 50 setting to when the zero current detection signal (Y13) is output.

Use Pr. 64 or Pr. 65 (output terminal function selection) to assign the terminal used for Y13 signal output.

### CAUTION

- If the current falls below the preset detection level but the timing condition is not satisfied, the zero current detection signal is held on for about 100ms.
- Changing the terminal functions using Pr. 64 and Pr. 65 may affect the other functions. Please make setting after confirming the function of each terminal.

### ◆ Related parameters ◆

- Assignment of Y13 signal to terminal ⇒ Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (refer to page 111)

## 2.6 Display function

### 2.6.1 Monitor display (Pr. 52 ~~P52~~, Pr. 54 ~~P54~~)

You can choose the display of the operation panel "monitor/frequency setting screen".

Parameter	Name	Factory Setting	Setting Range	Remarks
52	Operation panel display data selection	0	0, 1, 100	Setting is enabled when Pr. 30 = "1"
54	FM terminal function selection	0	0, 1	

#### POINT

- You can also use the **SET** to change the display. (Refer to the instruction manual (basic) for the operation procedure.)
- The pulse train output terminal FM is available for signal output. (Make selection using the Pr. 54 "FM terminal function selection" value.)

#### <Setting>

Types of Monitor	Unit	Parameter Setting		Full-Scale Value of FM Level Meter
		Pr. 52	Pr. 54	
		Operation panel LED	FM terminal	
Output frequency	Hz	0/100	0	Pr. 55 "frequency monitoring reference"
Output current	A	1	1	Pr. 56 "current monitoring reference"

When "100" is set in Pr. 52, the monitored values during stop and during operation differ as indicated below.

Pr. 52		
0	100	
During running/stop	During stop	During running
Output frequency	Set frequency	Output frequency

#### REMARKS

- During an error, its definition appears.
- During reset, the values displayed are the same as during a stop.
- For selection of the parameter unit (FR-PU04) monitor display, refer to the communication parameter n16 "PU main display screen data selection". (Page 163)

#### CAUTION

**The unit displayed on the operation panel is only A and other units are not displayed.**

#### ◆ Related parameters ◆

- Speed display ⇒ Pr. 37 "speed display" (refer to page 91)
- Adjustment of FM level meter full-scale value ⇒ Calibration parameter C1 "FM terminal calibration" (refer to page 137)
- Monitoring reference ⇒ Pr. 55 "frequency monitoring reference", Pr. 56 "current monitoring reference" (refer to page 102)

## 2.6.2 Setting dial function selection (Pr. 53 **P53**)

You can use the dial like a potentiometer to perform operation.

Parameter	Name	Factory Setting	Setting Range	Remarks
53	Frequency setting operation selection	0	0, 1	0: Setting dial frequency setting mode 1: Setting dial potentiometer mode Setting is enabled when Pr. 30 = "1"

### Using the setting dial like a potentiometer to perform operation

#### POINT

- Set "1" (extended function parameter valid) in Pr. 30 "extended function display selection".
- Set "1" (setting dial potentiometer mode) in Pr. 53 "frequency setting operation selection".

**Operation example** Changing the frequency from 0Hz to 60Hz during operation

————— Operation —————      ——— Display ———

- Mode/monitor check
  - Choose monitor/frequency monitor. (MODE)
  - The inverter must be in the PU operation mode.  
(Press the )
  - Pr. 30 must be set to "1".
  - Pr. 53 must be set to "1".
- Press the  to start the inverter.  → 
- Turn the  clockwise until "60.0" appears. The flickering frequency is the set frequency. You need not press the .  →  Flickers for 3s.


#### REMARKS

- If flickering "60.0" turns to "0.0", the Pr. 53 "frequency setting operation selection" setting may not be "1".
- Independently of whether the inverter is running or at a stop, the frequency can be set by merely turning the dial.
- When the frequency is changed, it will be stored as the set frequency after 10s.

**P54** ➡ Refer to **P52** (page 100).

## 2.6.3 Monitoring reference (Pr. 55 **P55**, Pr. 56 **P56**)

Set the frequency or current which is referenced when the output frequency or output current is selected for the terminal FM.

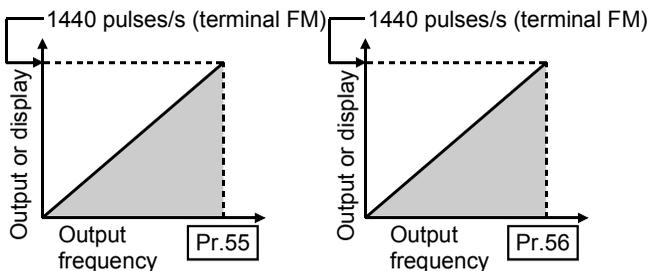

Parameter	Name	Factory Setting	Setting Range	Remarks
55	Frequency monitoring reference	60Hz	0 to 120Hz	Setting is enabled when Pr. 30 = "1"
56	Current monitoring reference	Rated inverter current	0 to 100A	

### <Setting>

Refer to the above diagrams and set the frequency monitoring reference value in Pr. 55 and the current monitoring reference value in Pr. 56.

Pr. 55 is set when Pr. 54 "FMterminal function selection" = "0" and Pr. 56 is set when Pr. 54 = "1".

Set the Pr. 55 and Pr. 56 values so that the output pulse train output of terminal FM is 1440 pulses/s.

### CAUTION

The maximum pulse train output of terminal FM is 2400 pulses/s. If Pr. 55 is not adjusted, the output of terminal FM will be filled to capacity. Therefore, adjust Pr. 55.

## 2.7 Restart operation

### 2.7.1 Restart setting (Pr. 57 **P57**, Pr. 58 **P58**)


At power restoration after an instantaneous power failure, you can restart the inverter without stopping the motor (with the motor coasting).

Parameter	Name	Factory Setting	Setting Range	Remarks
57	Restart coasting time	---	0 to 5s, ---	Setting is enabled when Pr. 30 = "1"
58	Restart cushion time	1s	0 to 60s	

**<Setting>**

Refer to the following table and set the parameters:

Parameter	Setting	Description	
57	0	0.4K to 1.5K	Coasting time of 0.5s
		2.2K to 7.5K	Coasting time of 1.0s
		11K or more	Coasting time of 3.0s
	0.1 to 5s	Waiting time for inverter-triggered restart after power is restored from an instantaneous power failure. (Set this time between 0.1 and 5s according to magnitude of the moment (J) of inertia of the load and torque.)	
	---	No restart	
58	0 to 60s	Normally the motor may be run with the factory settings. These values are adjustable to the load (moment of inertia, torque).	

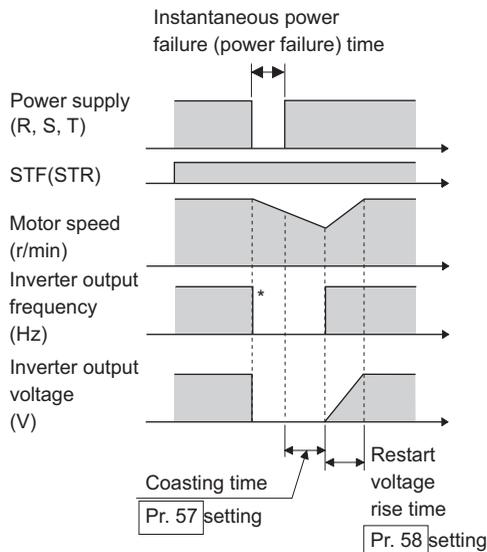

\* The output shut off timing differs according to the load condition.

**CAUTION**

•Automatic restart after instantaneous power failure operation is a reduced voltage starting system in which the output voltage is risen gradually at the preset frequency independently of the coasting speed of the motor.

It is a system which outputs the output frequency before an instantaneous power failure, unlike the motor coasting speed detection system (speed search system) used by the FR-E500 series Mitsubishi transistorized inverters. Hence, if the instantaneous power failure time is 0.2s or longer, the frequency before an instantaneous power failure cannot be stored in memory and the inverter restarts at 0Hz.

- Keep the starting signal (STF/STR) on during instantaneous power failure when using automatic restart after instantaneous power failure function (Pr. 57 ≠ ---). If the starting signal turns off during instantaneous power failure, the inverter starts at 0Hz.
- The SU and FU signals are not output during a restart. They are output after the restart cushion time has elapsed.




## **CAUTION**

-  **When automatic restart after instantaneous power failure has been selected, the motor and machine will start suddenly (after the restart coasting time has elapsed) after occurrence of an instantaneous power failure. Stay away from the motor and machine. When you have selected automatic restart after instantaneous power failure, apply in easily visible places the CAUTION stickers supplied to the instruction manual (basic).**
-  **The motor is coasted to a stop as soon as you turn off the start signal or press the  during the restart cushion time after instantaneous power failure.**

## 2.8 Additional function

### 2.8.1 Remote setting function selection (Pr. 59 **P59**)

Even if the operation panel is located away from the enclosure, you can use contact signals to perform continuous variable-speed operation, without using analog signals.

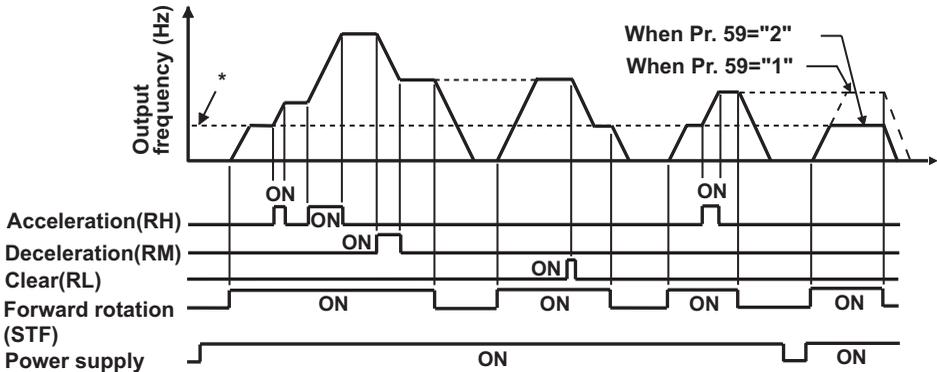

\* External running frequency (other than multi-speed) or PU running frequency


Parameter	Name	Factory Setting	Setting Range	Remarks
59	Remote setting function selection	0	0, 1, 2	Setting is enabled when Pr. 30 = "1"

#### REMARKS

- For the RL (clear) signal, set "0" in either Pr. 60 or Pr. 63 (input terminal function selection) and assign the signal to terminal AU or STR.
- By merely setting this parameter, you can use the acceleration, deceleration and setting clear functions of the motorized speed setter (FR-FK).
- When the remote function is used, the output frequency of the inverter can be compensated for as follows:

External operation mode	Frequency set by RH/RM operation plus external analog frequency command
PU operation mode	Frequency set by RH/RM operation plus setting dial or PU digital preset frequency

<Operation panel operation procedure>

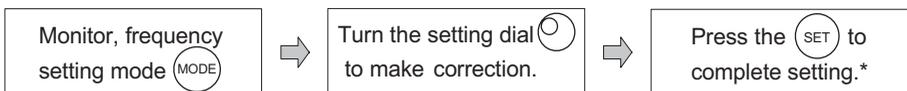

\* When you have set "1" in Pr. 53 "frequency setting operation selection", you need not press the (SET).

<Setting>

Pr. 59 Setting	Operation	
	Remote setting function	Frequency setting storage function (EEPROM)
0	No	—
1	Yes	Yes
2	Yes	No

- Use Pr. 59 to select whether the remote setting function is used or not and whether the frequency setting storage function\* in the remote setting mode is used or not. When "remote setting function - yes" is selected, the functions of signals RH, RM and RL are changed to acceleration (RH), deceleration (RM) and clear (RL), respectively. Use Pr. 60 to Pr. 63 (input terminal function selection) to set the signals RH, RM, RL.

\* Frequency setting storage function

This function stores the remotely-set frequency (frequency set by RH/RM operation) into memory.

When power is switched off once, then on, operation is resumed with that output frequency value. (Pr. 59="1")

## <Frequency setting storage conditions>

- The frequency at which the start signal (STF or STR) turns off is stored.
- The remotely-set frequency is stored every one minute after one minute has elapsed since turn off (on) of both the RH (acceleration) and RM (deceleration) signals. (The frequency is written if the present frequency setting compared with the past frequency setting every one minute is different.) (The state of the RL signal dose not affect writing.)


### REMARKS

- This function is invalid under jog operation and PID control operation.

Setting frequency is "0"


- Even when the remotely-set frequency is cleared by turning on the RL (clear) signal after turn off (on) of both the RH and RM signals, the inverter operates at the remotely-set frequency stored in the last operation if power is reapplied before one minute has elapsed since turn off (on) of both the RH and RM signals

remotely-set frequency stored in the last operation

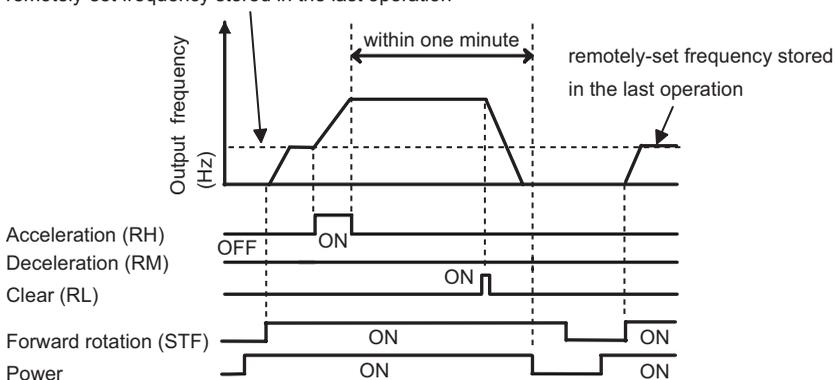


- When the remotely-set frequency is cleared by turning on the RL (clear) signal after turn off (on) of both the RH and RM signals, the inverter operates at the speed in the remotely-set frequency cleared state if power is reapplied after one minute has elapsed since turn off (on) of both the RH and RM signals.

remotely-set frequency stored in the last operation

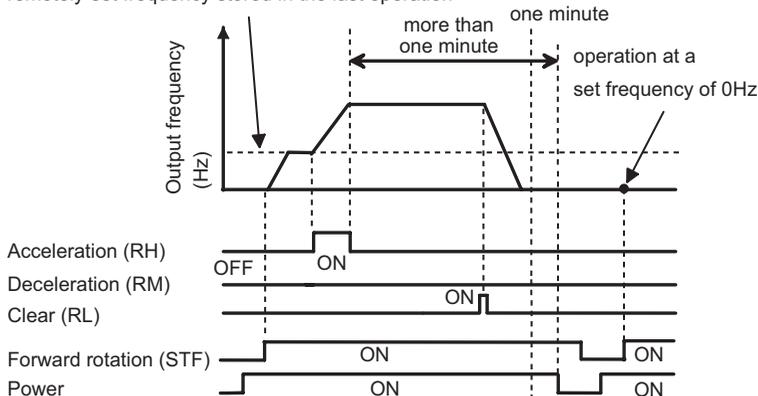

**CAUTION**

- The range of frequency changeable by RH (acceleration) and RM (deceleration) is 0 to maximum frequency (Pr. 1 setting). Note that the maximum value of set frequency is (main speed + maximum frequency).

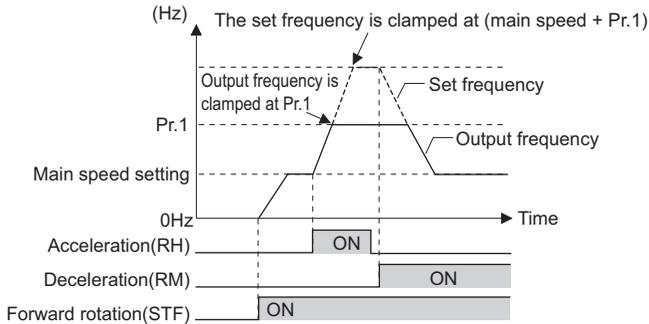

- When the acceleration or deceleration signal switches on, the set frequency varies according to the slope set in Pr. 44 "second acceleration/deceleration time" or Pr. 45 "second deceleration time". The output frequency acceleration and deceleration times are as set in Pr. 7 "acceleration time" and Pr. 8 "deceleration time", respectively. Therefore, the longer preset times are used to vary the actual output frequency.
- If the start signal (STF or STR) is off, turning on the acceleration (RH) or deceleration (RM) signal varies the preset frequency.

**CAUTION**

⚠ When selecting this function, re-set the maximum frequency according to the machine.

◆ Related parameters ◆

- RH, RM, RL signal terminal assignment ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (Refer to page 109.)
- Maximum frequency setting ⇒ Pr. 1 "maximum frequency" (Refer to page 74.)
- Output frequency acceleration/deceleration time ⇒ Pr. 7 "acceleration time", Pr. 8 "deceleration time" (Refer to page 78.)
- Time setting for acceleration/deceleration ⇒ Pr. 44 "second acceleration/deceleration time", Pr. 45 "second deceleration time" (Refer to page 78.)

## 2.9 Terminal function selection

### 2.9.1 Input terminal function selection (Pr. 60 **P60**, Pr. 61 **P61**, Pr. 62 **P62**, Pr. 63 **P63**)

Use these parameters to select/change the input terminal functions.

Parameter	Name	Factory Setting	Setting Range	Remarks
60	AU terminal function selection	4	0 to 10, 14, 16	Setting is enabled when Pr. 30 = "1"
61	RM terminal function selection	1		
62	RH terminal function selection	2		
63	STR terminal function selection	---	0 to 10, 14, 16, ---	

**<Setting>**

Refer to the following table and set the parameters:

Setting	Signal Name	Functions		Related Parameters
0	RL	Pr. 59 = "0"	Low-speed run command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 80 to Pr. 87
		Pr. 59 = "1", "2" (*1)	Remote setting (setting clear)	Pr. 59
1	RM	Pr. 59 = "0"	Middle-speed run command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 80 to Pr. 87
		Pr. 59 = "1", "2" (*1)	Remote setting (deceleration)	Pr. 59
2	RH	Pr. 59 = "0"	High-speed run command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 80 to Pr. 87
		Pr. 59 = "1", "2" (*1)	Remote setting (acceleration)	Pr. 59
3	RT	Second function selection		Pr. 44 to Pr. 47
4	AU	Current input selection		—
5	STOP	Start self-holding selection		—
6	MRS	Output shut-off stop		—
7	OH	External thermal relay input (*2) The inverter stops when the externally provided thermal relay for overheat protection, motor's embedded temperature relay etc. is actuated.		Refer to page 172.
8	REX	15-speed selection (combination with 3 speeds RL, RM, RH) (*3)		Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 80 to Pr. 87
9	JOG	Jog operation selection		Pr. 15, Pr. 16
10	RES	Reset		Pr. 75
14	X14	PID control presence/absence selection		Pr. 88 to Pr. 94
16	X16	PU-external operation switch-over		Pr. 79 (setting: 8)
---	STR	Reverse rotation start		(can be assigned to STR terminal (Pr. 63) only)

\*1. When Pr. 59 = "1 or 2", the functions of the RL, RM and RH signals change as listed above.

\*2. Actuated when the relay contact "opens".

\*3. When using the REX signal, an external command cannot be used to make a reverse rotation start.

**REMARKS**

- One function can be assigned to two or more terminals. In this case, the function is activated when one of the multiple terminals used for assignment turns on.
- The speed command priorities are higher in order of jog, multi-speed setting (RH, RM, RL, REX) and AU.
- Use common terminals to assign multi-speeds (7 speeds) and remote setting. They cannot be set individually.  
(Common terminals are used since these functions are designed for speed setting and need not be set at the same time.)

## 2.9.2 Output terminal function selection (Pr. 64 **P64**, Pr. 65 **P65**)

You can change the functions of the open collector output terminal and contact output terminal.

Parameter	Name	Factory Setting	Setting Range	Remarks
64	RUN terminal function selection	0	0, 1, 3, 4, 11 to 16, 95, 98, 99	Setting is enabled when Pr. 30 = "1"
65	A, B, C terminal function selection	99	0, 1, 3, 4, 11 to 16, 95, 98, 99	

### <Setting>

Setting	Signal Name	Function	Operation	Parameters Referred to
0	RUN	Inverter running	Output during operation when the inverter output frequency rises to or above the starting frequency.	Pr. 2, Pr. 13
1	SU	Up to frequency	Output when the output frequency is reached.	Pr. 41
3	OL	Overload alarm	Output while stall prevention function is activated.	Pr. 21, Pr. 22, Pr. 23, Pr. 28
4	FU	Output frequency detection	Output when the output frequency rises to or above the setting.	Pr. 42, Pr. 43
11	RY	Inverter operation ready	Output when the inverter is ready to be started by switching the start signal on.	—
12	Y12	Output current detection	Output when the output current rises to or above the setting.	Pr. 48, Pr. 49
13	Y13	Zero current detection	Output when the output current reaches 0.	Pr. 50, Pr. 51
14	FDN	PID lower limit	Outputs the detection signal under PID control.	Pr. 88 to Pr. 94
15	FUP	PID upper limit		
16	RL	PID forward-reverse rotation output		
95	Y95	Maintenance timer alarm	Output when additional parameter H1 is greater than maintenance parameter H2.	H1, H2
98	LF	Minor fault output	Output when a minor fault (fan failure or communication error warning) occurs.	Pr. 76, n5
99	ABC	Alarm output	Output when the inverter's protective function is activated to stop the output (major fault).	—

### REMARKS

One function can be assigned to two terminals.

## 2.10 Operation selection function

### 2.10.1 Retry function (Pr. 66 P66, Pr. 67 P67, Pr. 68 P68, Pr. 69 P69)

When any protective function (major fault) is activated and the inverter stops its output, the inverter itself resets automatically and performs retries. Whether retry is performed or not, alarms for retry, number of retries made and waiting time can be selected.

Parameter	Name	Factory Setting	Setting Range	Remarks
66	Retry selection	0	0 to 3	Setting is enabled when Pr. 30 = "1"
67	Number of retries at alarm occurrence	0	0, 1 to 10, 101 to 110	
68	Retry waiting time	1s	0.1 to 360s	
69	Retry count display erase	0	0	

#### <Setting>

- Use Pr. 66 to select the protective functions (major faults) to be activated for retries.No retry will be made for the alarm not indicated.(Refer to page 168)

Pr. 66 Setting	Protective Functions (Major Faults) for Retries								
	OCT	OVT	THM	THT	GF	OHT	OLT	PE	OPT
0	●	●	●	●	●	●	●	●	●
1	●								
2		●							
3	●	●							

\* ● Indicates the retry items selected. (OCT denotes any of OC1 to OC3 and OVT any of OV1 to OV3.)

- Use Pr. 67 to set the number of retries at alarm occurrence.

Pr. 67 Setting	Number of Retries	Alarm Signal (ABC) Output
0	Retry is not made.	_____
1 to 10	1 to 10 times	Not provided during retry operation *
101 to 110	1 to 10 times	Output every time

\* If the retry count is exceeded, " r E r " (retry count over) is displayed.

- Use Pr. 68 to set the waiting time from when an inverter alarm occurs until a restart in the range 0.1 to 360s.
- Reading the Pr. 69 value provides the cumulative number of successful restart times made by retry. The cumulative number of time is cleared when setting value "0" is written.

---

**CAUTION**

---

- The cumulative number in Pr. 69 is incremented by "1" when retry operation is regarded as successful, i.e. when normal operation is continued without the protective function (major fault) activated during a period four times longer than the time set in Pr. 68.
  - If the protective function (major fault) is activated consecutively within a period four times longer than the above waiting time, the operation panel may show data different from the most recent data or the parameter unit (FR-PU04) may show data different from the first retry data. The data stored as the error reset for retry is only that of the protective function (major fault) which was activated the first time.
  - When an inverter alarm is reset by the retry function at the retry time, the stored data of the electronic thermal relay function, etc. are not cleared. (Different from the power-on reset.)
- 

 **CAUTION**

-  When you have selected the retry function, stay away from the motor and machine when the inverter is tripped. They will start suddenly (after the reset time has elapsed) after the inverter trip.
- When you have selected the retry function, apply in easily visible places the CAUTION stickers supplied to the instruction manual (basic).

## 2.10.2 PWM carrier frequency (Pr. 70 **P70**, Pr. 72 **P72**)

You can change the motor sound.

Parameter	Name	Factory Setting	Setting Range	Remarks
70	Soft-PWM setting	11	0, 1, 10, 11	Setting is enabled when
72	PWM frequency selection	1	0 to 15	Pr. 30 = "1"

### <Setting>

- By parameter setting, you can set whether to exercise Soft-PWM control that changes the motor tone or select with or without long wiring mode.
- Soft-PWM control is a control method that changes the motor noise from a metallic tone into an unoffending complex tone.
- Surge voltage is suppressed regardless of wiring length in the long wiring mode. (When operating the 400V motor with wiring length of 40m or longer, select the long wiring mode.)

Pr.70 Setting	Description		
	Soft-PWM	Long wiring mode	Remarks
0	Invalid	Invalid	—
1	Valid (When Pr. 72 setting = any of "0" to "5")	Invalid	—
10	Invalid	Valid	•When Pr. 72 "PWM frequency selection" = 1 or more, the PWM carrier frequency is constant at 1kHz. (When "0" is set, the PWM carrier frequency is constant at 0.7kHz.)
11	Valid	Valid	

### CAUTION

1. When "10 or 11" is set in Pr. 70, the output voltage at rated frequency drops 5V maximum.
2. For the 400V class, use an insulation-enhanced motor.  
Refer to page 24 for an inverter-driven 400V class motor.

Pr. 72 Setting	Description
0 to 15	PWM carrier frequency can be changed. The setting displayed is in [kHz]. Note that 0 indicates 0.7kHz and 15 indicates 14.5kHz.

### REMARKS

- An increased PWM frequency will decrease the motor sound but increase noise and leakage currents. Therefore, perform the reduction techniques. (Refer to page 17.)
- Metallic sound may be generated from the motor at sudden deceleration but it is not a fault.
- If low acoustic noise operation is performed at higher PWM frequency, performing continuous operation at 75% or more of the rated current may increase motor noise, but it is not a failure.

**P71** ➡ Refer to **P9** (page 80).

### 2.10.3 Voltage input selection (Pr. 73 )

You can change the input (terminal 2) specifications according to the frequency setting voltage signal. When entering 0 to 10VDC, always make this setting.

Parameter	Name	Factory Setting	Setting Range	Remarks	
73	0-5V/0-10V selection	0	0, 1	Terminal 2 input voltage 0: 0-5VDC input 1: 0-10VDC input	Setting is enabled when Pr. 30 = "1"

#### CAUTION

- The acceleration/deceleration time, which is a slope up/down to the acceleration/deceleration reference frequency, is not affected by the change in Pr. 73 setting.
- When connecting a frequency setting potentiometer across terminals 10-2-5 for operation, always set "0" in this parameter.

### 2.10.4 Input filter time constant (Pr. 74 )

You can set the input section's built-in filter constant for an external voltage or current frequency setting signal.

- Effective for eliminating noise in the frequency setting circuit.

Parameter	Name	Factory Setting	Setting Range	Remarks
74	Input filter time constant	1	0 to 8	Setting is enabled when Pr. 30 = "1"

#### <Setting>

Increase the filter time constant if steady operation cannot be performed due to noise. A larger setting results in slower response. (The time constant can be set between approximately 1ms to 1s with the setting of 0 to 8. A larger setting results in a larger filter time constant.)

### 2.10.5 Reset selection/PU stop selection (Pr. 75 )

You can make reset input acceptance selection and choose the stop function from the operation panel (PU).

- Reset selection : You can choose the reset function input (RES signal) timing.
- PU stop selection : When an alarm etc. occurs in any operation mode, you can make a stop from the operation panel by pressing the .


Parameter	Name	Factory Setting	Setting Range	Remarks
75	Reset selection/PU stop selection	14	0, 1, 14, 15	Setting is enabled when Pr. 30 = "1"

#### <Setting>

Pr. 75 Setting	Reset Selection	PU Stop Selection
0	Reset input normally enabled.	The PU stop key is invalid. Note that the  is valid only in the PU operation mode or combined operation mode (Pr. 79 = "4").
1	Enabled only when the protective function is activated.	
14	Reset input normally enabled.	Pressing the  decelerates the inverter to a stop in any of the PU, external and communication operation modes.
15	Enabled only when the protective function is activated.	

## (1) How to make a restart after a stop by the **STOP RESET** input from the operation panel (Restarting method with **PS** shown)

1. After completion of deceleration to a stop, switch off the STF or STR signal.
2. Press the **PU EXT** to show **PU**  
(**PS** canceled)
3. Press the **PU EXT** to return to **EXT**.
4. Switch on the STF or STR signal.

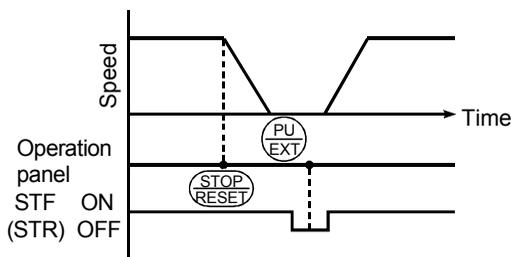


Stop and restart example for external operation

### REMARKS

- If the reset signal (RES) is provided during operation, the inverter shuts off its output while it is reset, the internal thermal integrated value of the electronic thermal relay function and the number of retries are reset, and the motor coasts.
- The Pr. 75 value can be set any time. Also, if parameter (all) clear is executed, this setting will not return to the initial value.
- When the inverter is stopped by the PU stop function, the display alternates between **PS** and **0.0**. An alarm is not output.

## (2) How to make a restart when a stop is made by the **STOP RESET** input from the parameter unit

1. After completion of deceleration to a stop, switch off the STF or STR signal.
2. Press the **EXT**.
3. Switch on the STF or STR signal.

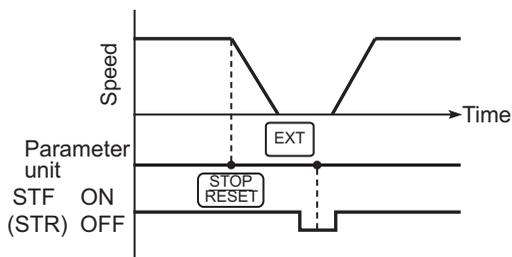

Stop and restart example for external operation

Besides the above operations, a restart can be made by performing a power-on reset or resetting the inverter with the inverter's reset terminal.

### REMARKS

- If the reset signal (RES) is provided during operation, the inverter shuts off its output while it is reset, the internal thermal integrated value of the electronic thermal relay function and the number of retries are reset, and the motor coasts.
- To resume operation, reset the inverter after confirming that the parameter unit is connected securely.
- The Pr. 75 value can be set any time. Also, if parameter (all) clear is executed, this setting will not return to the initial value.
- When the inverter is stopped by the PU stop function, PS is displayed but an alarm is not output.

## ⚠ CAUTION

⚠ Do not reset the inverter with the start signal on. Otherwise, the motor will start instantly after resetting, leading to potentially hazardous conditions.

### 2.10.6 Cooling fan operation selection (Pr. 76 Pr. 76)

You can control the operation of the cooling fan built in the inverter (whether there is a cooling fan or not depends on the model.).

Parameter	Name	Factory Setting	Setting Range	Remarks
76	Cooling fan operation selection	0	0, 1	0: Operation is performed with power on. 1: Cooling fan ON/OFF control Setting is enabled when Pr. 30 = "1"

#### <Setting>

Setting	Description
0	Operated at power on (independent of whether the inverter is running or at a stop).
1	Cooling fan ON/OFF control valid ● Always on during inverter operation ● During stop (reset or error), the inverter status is monitored and the fan is switched on/off according to the temperature. <ul style="list-style-type: none"> <li>• Heatsink temperature is less than 40°C .....Cooling fan off</li> <li>• Heatsink temperature is not less than 40°C .....Cooling fan on</li> </ul>

#### REMARKS

In either of the following cases, fan operation is regarded as faulty,  $F_n$  is shown on the operation panel, and the minor fault (LF) signal is output. Use any of Pr. 64, Pr. 65 (output terminal function selection) to allocate the terminal used to output the LF signal.\*

• Pr. 76 = "0"

When the fan comes to a stop with power on.

• Pr. 76 = "1"

When the inverter is running and the fan stops during fan ON command.

#### CAUTION

\* When the terminal assignment is changed using Pr. 64, Pr. 65, the other functions may be affected. Confirm the functions of the corresponding terminals before making settings.

### 2.10.7 Parameter write disable selection (Pr. 77 **Pr. 77**)

You can select between write-enable and disable for parameters. This function is used to prevent parameter values from being rewritten by incorrect operation.

Parameter	Name	Factory Setting	Setting Range	Remarks
77	Parameter write disable selection	0	0, 1, 2	Setting is enabled when Pr. 30 = "1"

#### <Setting>

Pr. 77 Setting	Function
0	Write is enabled only during a stop in the PU operation mode. (*)
1	Write disabled. Values of Pr. 22, Pr. 30, Pr. 75, Pr. 77 and Pr. 79 can be written.
2	Write is enabled even during operation. Write is enabled independently of the operation mode.

\* The shaded parameters in the parameter list always allow setting. Note that the Pr. 70 and Pr. 72 values may be changed during PU operation only.

#### CAUTION

- If Pr. 77 = 2, the values of Pr. 17, Pr. 23, Pr. 28, Pr. 60 to Pr. 63, Pr. 64, Pr. 65, Pr. 71, Pr. 79, Pr. 98, Pr. 99, CLr cannot be written during operation. Stop operation when changing their parameter settings.
- By setting "1" in Pr. 77, the following clear operations can be inhibited:
  - Parameter clear
  - All clear

## 2.10.8 Reverse rotation prevention selection (Pr. 78 **Pr. 78**)

This function can prevent reverse rotation faults resulting from the incorrect input of the start signal.

### POINT

Used for a machine which runs only in one direction, e.g. fan, pump.  
(The setting of this function is valid for the combined, PU, external and communication operations.)

Parameter	Name	Factory Setting	Setting Range	Remarks
78	Reverse rotation prevention selection	0	0, 1, 2	Setting is enabled when Pr. 30 = "1"

### <Setting>

Pr. 78 Setting	Function
0	Both forward and reverse rotations allowed
1	Reverse rotation disallowed
2	Forward rotation disallowed

## 2.10.9 Operation mode selection (Pr. 79 **Pr. 79**)

Used to select the operation mode of the inverter.

The inverter can be run from the operation panel or parameter unit (PU operation), with external command signals (external operation), or by combination of PU operation and external operation (external/PU combined operation).

The inverter is placed in the external operation mode at power on (factory setting).

Parameter	Name	Factory Setting	Setting Range
79	Operation mode selection	0	0 to 4, 7, 8

\* Pr.79 can be changed during a stop in any operation mode.

### <Setting>

In the following table, operation using the operation panel or parameter unit is abbreviated to PU operation.

Pr. 79 Setting	Function			LED Indication *			
				RUN	PU	EXT	
0	At power on, the inverter is put in the external operation mode. The operation mode can be changed between the PU and external operation modes from the operation panel (  ) or parameter unit (  /  ). For each mode, refer to the columns of settings 1 and 2.			RUN  PU  EXT 	PU	EXT	
1	<b>Operation mode</b>	<b>Frequency command</b>	<b>Start command</b>		Off: Stop without start command Forward rotation: On Reverse rotation: Slow flickering With start command } Fast flickering Without frequency setting }	On (Off)	Off
2	PU operation mode	Setting from operation panel or FR-PU04				Off	On
3	External operation mode	External signal input (across terminals 2(4)-5, multi-speed selection) jog	External signal input (terminal STF, STR)			On	On
4	External/ PU combined operation mode 1	Setting dial of operation panel, digital setting by parameter unit key operation, or external signal input (multi-speed setting, across terminals 4-5 (valid when AU signal is on))	External signal input (terminal STF, STR)			On	On
7	External/ PU combined operation mode 2	External signal input (across terminals 2(4)-5, multi-speed selection, jog)			Refer to settings "1" and "2".		
8	External operation mode (PU operation interlock) MRS signal ON... Switching to PU operation mode (output stop during external operation) allowed MRS signal OFF.. Switching to PU operation mode inhibited Operation mode change using external signal (disallowed during operation) X16 signal ON .... Switched to external operation mode X16 signal OFF..... Switched to PU operation mode			Refer to settings "1" and "2".			

#### REMARKS

- In other than the PU operation mode, the stop function (PU stop selection) activated by pressing  of the PU (operation panel/FR-PU04) is valid. (Refer to page 116.)
- Either "3" or "4" may be set to select the PU/external combined operation, and these settings differ in starting method.
- Refer to page 141 for the computer link operation mode.
- \* When the FR-PU04 is connected, the LED indicators (PU, EXT) are not lit.  
In the computer link operation mode, the LED indicators (PU, EXT) flicker slowly.

FUNCTIONS 2

## (1) PU operation interlock

The PU operation interlock function is designed to forcibly change the operation mode to external operation mode when the MRS signal switches off. This function prevents the inverter from being inoperative by the external command if the mode is accidentally left unswitched from PU operation mode.

### 1) Preparation

- Set "7" (PU operation interlock) in Pr. 79.
- Set the terminal used for MRS signal input with any of Pr. 60 to Pr. 63 (input terminal function selection).

Refer to page 109 for Pr. 60 to Pr. 63 (input terminal function selection).

### CAUTION

**Changing the terminal assignment using Pr. 60 to Pr. 63 (input terminal function selection) may affect the other functions.**

**Check the functions of the corresponding terminals before making settings.**

### 2) Function

MRS Signal	Function/Operation
ON	Output stopped during external operation. Operation mode can be switched to PU operation mode. Parameter values can be rewritten in PU operation mode. PU operation allowed.
OFF	Forcibly switched to external operation mode. External operation allowed. Switching to PU operation mode inhibited.

### <Function/operation changed by switching on-off the MRS signal>

Operating Condition Operation mode	Status	MRS Signal	Operation Mode (*2)	Operating Status	Parameter Write	Switching to PU Operation Mode
During operation	ON → OFF (*1)	If external operation frequency setting and start signal are entered, operation is performed in that status.	Allowed → disallowed	Disallowed		
External	During stop	OFF → ON	External	During stop	Disallowed → disallowed	Allowed
		ON → OFF			Disallowed → disallowed	Disallowed
	During operation	OFF → ON		During operation → output stop	Disallowed → disallowed	Disallowed
		ON → OFF		Output stop → operation	Disallowed → disallowed	Disallowed

**REMARKS**

- If the MRS signal is on, the operation mode cannot be switched to the PU operation mode when the start signal (STF, STR) is on.
- \*1. The operation mode switches to the external operation mode independently of whether the start signal (STF, STR) is on or off.  
Therefore, the motor is run in the external operation mode when the MRS signal is switched off with either of STF and STR on.
- \*2. Switching the MRS signal on and rewriting the Pr. 79 value to other than "7" in the PU operation mode causes the MRS signal to act as the ordinary MRS function (output stop). Also as soon as "7" is set in Pr. 79, the signal acts as the PU interlock signal.

**(2) Operation mode switching by external signal**

1) Preparation

Set "8" (switching to other than external operation mode) in Pr. 79.

Use any of Pr. 60 to Pr. 63 (input terminal function selection) to set the terminal used for X16 signal input.

**CAUTION**

**Changing the terminal assignment using Pr. 60 to Pr. 63 (input terminal function selection) may affect the other functions.**

**Check the functions of the corresponding terminals before making settings.**

**For details refer to page 109.**

2) Function

This switching is enabled during an inverter stop only and cannot be achieved during operation.

X16 Signal	Operation Mode
ON	External operation mode (cannot be changed to PU operation mode)
OFF	PU operation mode (cannot be changed to external operation mode)

**P80** to **P87** ➡ Refer to **P 4** to **P 6** (page 77).

### 2.10.10 PID control (Pr. 88 ~~P88~~ to Pr. 94 ~~P94~~)

The inverter can be used to exercise process control, e.g. flow rate, air volume or pressure.

- The voltage input signal (0 to +5V or 0 to +10V) or Pr. 93 setting is used as a set point and the 4 to 20mADC current input signal used as a feedback value to constitute a feedback system for PID control.


**POINT**

Made valid by turning on the X14 signal. Use Pr. 60 to Pr. 63 (input terminal function selection) to make assignment.

Parameter	Name	Factory Setting	Setting Range	Remarks
88	PID action selection	20	20, 21	Setting is enabled when Pr. 30 = "1"
89	PID proportional band	100%	0.1 to 999%, ---	
90	PID integral time	1s	0.1 to 999s, ---	
91	PID upper limit	---	0 to 100%, ---	
92	PID lower limit	---	0 to 100%, ---	
93	PID action set point for PU operation	0%	0 to 100%	
94	PID differential time	---	0.01 to 10s, ---	

<Setting>

#### (1) Basic PID control configuration

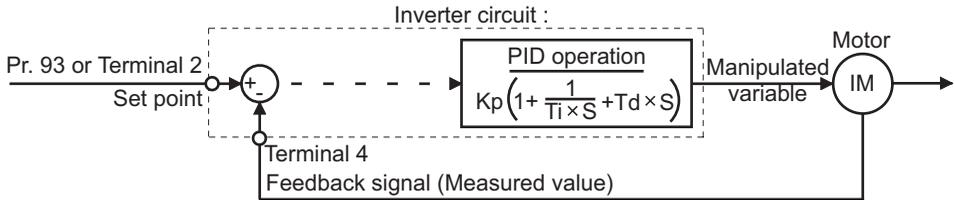


Kp: Proportion constant    Ti: Integral time    S: Operator    Td: Differential time

#### (2) PID action overview

##### 1) PI action

A combination of proportional control action (P) and integral control action (I) for providing a manipulated variable in response to deviation and changes with time.

##### [Operation example for stepped changes of measured value]

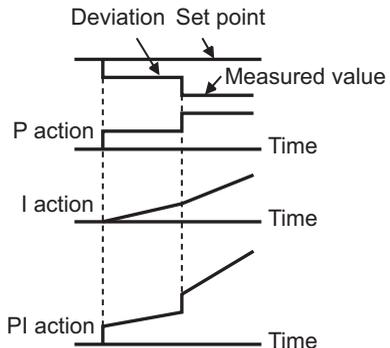

**REMARKS**

PI action is the sum of P and I actions.


2) PD action

A combination of proportional control action (P) and differential control action (D) for providing a manipulated variable in response to deviation speed to improve the transient characteristic.

**REMARKS**

PD action is the sum of P and D actions.

**[Operation example for proportional changes of measured value]**

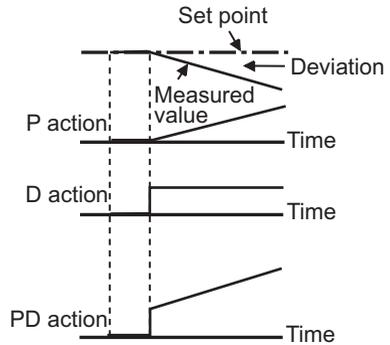


3) PID action

The PI action and PD action are combined to utilize the advantages of both actions for control.



**REMARKS**

The PID action is the sum of P, I and D actions.

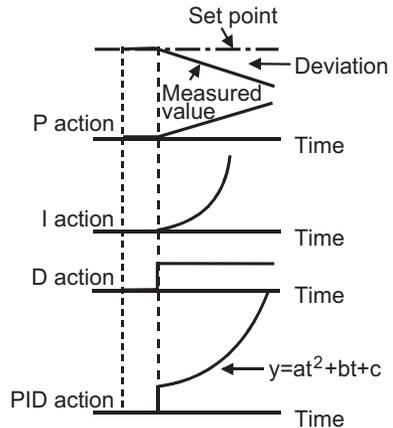


4) Reverse action

Increases the manipulated variable (output frequency) if deviation  $X = (\text{set point} - \text{measured value})$  is positive, and decreases the manipulated variable if deviation is negative.

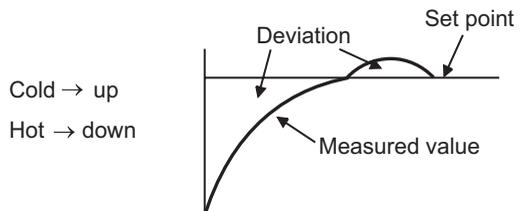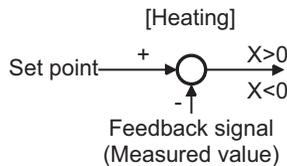


**5) Forward action**

Increases the manipulated variable (output frequency) if deviation  $X = (\text{set point} - \text{measured value})$  is negative, and decreases the manipulated variable if deviation is positive.

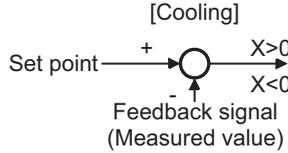

Too cold → down  
Hot → up

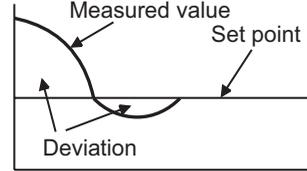


**Relationships between deviation and manipulated variable (output frequency)**

	Deviation	
	Positive	Negative
Reverse action	↗	↘
Forward action	↘	↗

**(3) Wiring example**

- Pr. 62 = 14
- Pr. 64 = 15
- Pr. 65 = 16
- Pr. 88 = 20

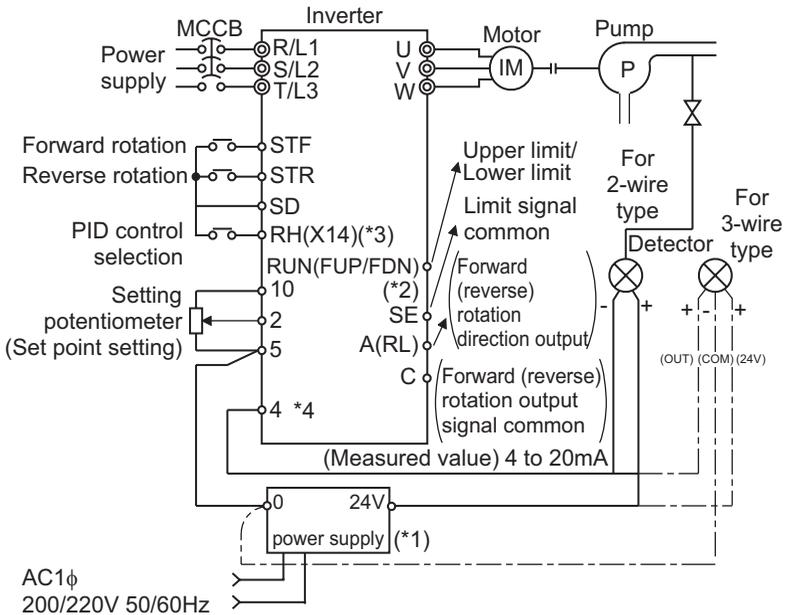

- \*1. The power supply must be selected in accordance with the power specifications of the detector used.
- \*2. The output signal terminals used depends on the Pr. 64, Pr. 65 settings.
- \*3. The input signal terminal used depends on the setting of Pr. 60 to Pr. 63.
- \*4. The contact input signal (AU Signal) need not be turned on.

#### (4) I/O signals

Signal		Terminal Used	Function	Description
Input	X14	Depending on Pr. 60 to Pr. 63	PID control selection	Turn on X14 to exercise PID control.
	2	2	Set point input	Enter the set point for PID control.
	4	4	Measured value input	Enter the 4 to 20mADC measured value signal from the detector.
Output	FUP	Depending on Pr. 64, Pr. 65	Upper limit output	Output to indicate that the measured value signal exceeded the upper limit value.
	FDN		Lower limit output	Output to indicate that the measured value signal exceeded the lower limit value.
	RL		Forward (reverse) rotation direction output	"Hi" is output to indicate that the output indication of the parameter unit is forward rotation (FWD) or "Low" to indicate that it is reverse rotation (REV) or stop (STOP).

- Enter the set point across inverter terminals 2-5 or in Pr. 93 and enter the measured value signal across inverter terminals 4-5.
- To exercise PID control, turn on the X14 signal. When this signal is off, PID control is not exercised.


Item	Entry	Description	
Set point	Across terminals 2-5	Set 0V as 0% and 5V as 100%.	When "0" is set in Pr. 73 (5V selected for terminal 2).
		Set 0V as 0% and 10V as 100%.	When "1" is set in Pr. 73 (10V selected for terminal 2).
	Pr. 93	Set the set point (%) in Pr. 93.	
Measured value	Across terminals 4-5	4mA is equivalent to 0% and 20mA to 100%.	

#### (5) Parameter setting

Parameter Number	Name	Setting	Description	
88	PID action selection	20	For heating, pressure control, etc.	PID reverse action
		21	For cooling, etc.	PID forward action
89	PID proportional band	0.1 to 999%	If the proportional band is narrow (parameter setting is small), the manipulated variable varies greatly with a slight change of the measured value. Hence, as the proportional band narrows, the response sensitivity (gain) improves but the stability deteriorates, e.g. hunting occurs. Gain $K = 1/\text{proportional band}$	
		---	No proportional control	
90	PID integral time	0.1 to 999s	Time required for the integral (I) action to provide the same manipulated variable as that for the proportional (P) action. As the integral time decreases, the set point is reached earlier but hunting occurs more easily.	
		---	No integral control.	


Parameter Number	Name	Setting	Description
91	PID upper limit	0 to 100%	Set the upper limit. If the feedback value exceeds the setting, the FUP signal is output. (Measured value of 4mA is equivalent to 0% and 20mA to 100%.)
		---	No function
92	PID lower limit	0 to 100%	Set the lower limit. (If the measured value falls below the setting, the FDN signal is output. In this case, the measured value of 4mA is equivalent to 0% and 20mA to 100%.)
		---	No function
93	PID action set point for PU operation	0 to 100%	Valid only when Pr. 79 = "3" (n9 = 0 for computer link operation) under the PU command in the PU operation or PU/external combined mode. (When the computer has the speed command source in the computer link operation mode (NET)) For external operation, the voltage across 2-5 is the set point. (C3 value is equivalent to 0% and C4 value to 100%.)
94	PID differential time	0.01 to 10s	Time required for the differential (D) action to provide the same measured value as that for the proportional (P) action. As the differential time increases, greater response is made to a deviation change.
		---	No differential control.

**(6) Adjustment procedure**

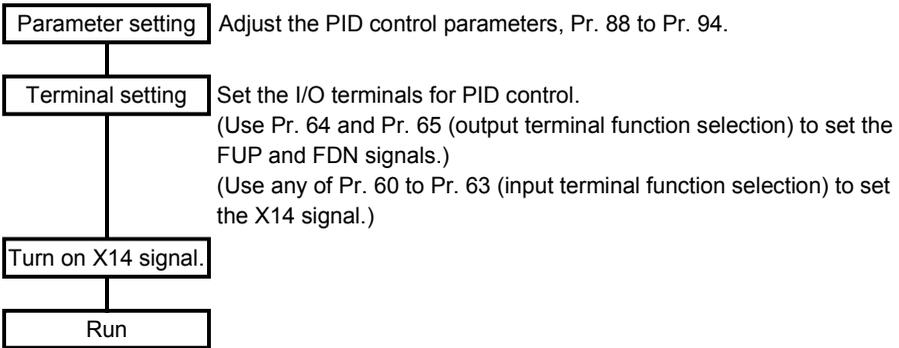

### (7) Calibration example

(A detector of 4mA at 0°C and 20mA at 50°C is used to adjust the room temperature to 25°C under PID control. The set point is given to across inverter terminals 2-5 (0-5V).)

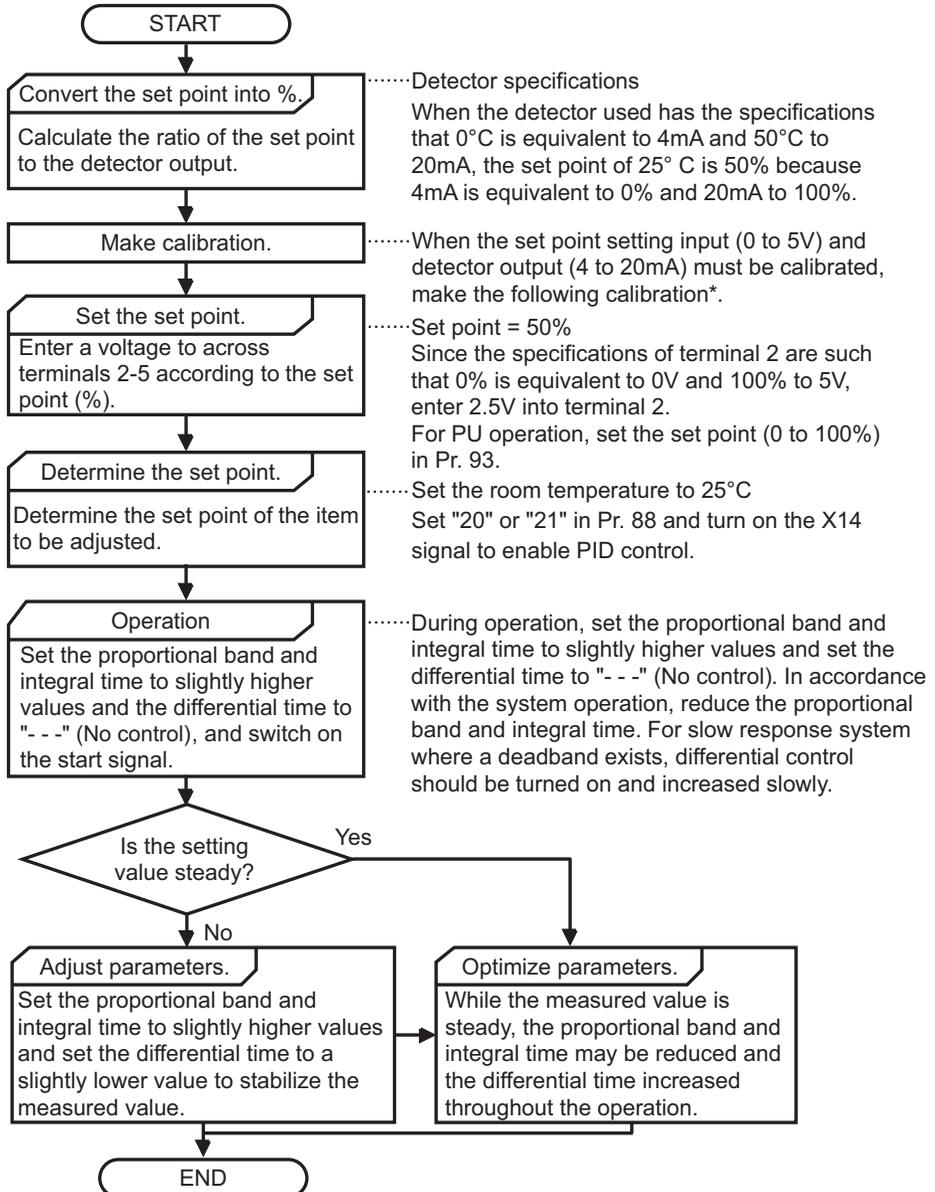

\*When calibration → Use Pr. 38 and calibration parameters C2 to C4 (terminal 2) and Pr. 39 and calibration parameters C5 to C7 (terminal 4) to calibrate the detector output and set point setting input. Make calibration in the PU mode when the inverter is at a stop.

### <Set point input calibration>


1. Apply the input voltage of 0% set point setting (e.g. 0V) across terminals 2-5.
2. Make calibration using the calibration parameters C2, C3. At this time, enter in C2 the frequency which should be output by the inverter at the deviation of 0% (e.g. 0Hz). (When using the FR-PU04, make calibration with Pr. 902.)
3. Apply the voltage of 100% set point (e.g. 5V) to across terminals 2-5.
4. Make calibration using Pr. 38 and calibration parameter C4. At this time, enter in Pr. 38 the frequency which should be output by the inverter at the deviation of 100% (e.g. 60Hz). (When using the FR-PU04, make calibration with Pr. 903.)

### <Detector output calibration>

1. Apply the output current of 0% detector setting (e.g. 4mA) across terminals 4-5.
2. Make calibration using the calibration parameter C6. (When using the FR-PU04, make calibration with Pr. 904.)
3. Apply the output current of 100% detector setting (e.g. 20mA) across terminals 4-5.
4. Make calibration using the calibration parameter C7. (When using the FR-PU04, make calibration with Pr. 905.)


Note: The frequencies set in the calibration parameter C5 and Pr. 39 should be equal to those set in the calibration parameter C2 and Pr. 38, respectively.

The results of the above calibration are as shown below:

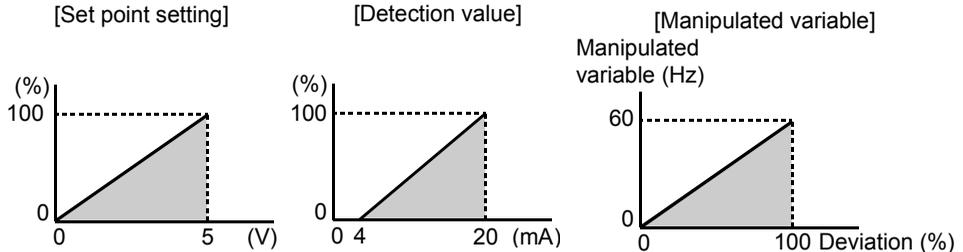

**REMARKS**

- If the multi-speed (RH, RM, RL signal) or jog operation (JOG signal) is entered, PID control is stopped and multi-speed or jog operation is started.
- Changing the terminal functions using Pr. 64 and Pr. 65 may affect the other functions. Confirm the functions of the corresponding terminals before making settings.
- When PID control is selected, the minimum frequency is the frequency set in the calibration parameter C2 and the maximum frequency is the frequency set in Pr. 38. (The Pr. 1 "maximum frequency" and Pr. 2 "minimum frequency" settings are also valid.)
- When the control is switched to PID control during normal operation, the frequency command value calculated by PID operation using 0Hz as standard is used without the frequency during the operation.

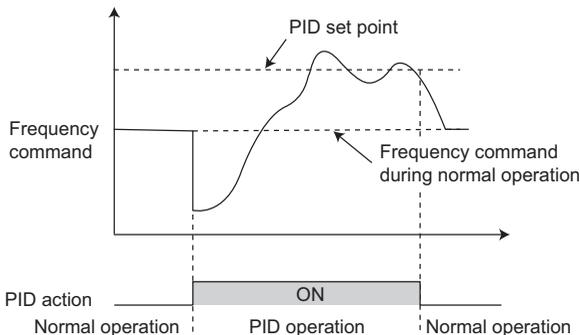

Operation when control is switched to PID control during normal operation

◆ **Related parameters** ◆

- X14 signal assignment ⇒ Pr. 60 to Pr. 63 (input terminal function selection) (refer to page 109)
- FUP, FDN and RL signal assignment ⇒ Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (refer to page 111)
- Voltage input selection (0 to ±5V, 0 to ±10V) ⇒ Pr. 73 "0-5V/0-10V selection" (refer to page 115)
- Operation mode selection ⇒ Pr. 79 "operation mode selection" (refer to page 120)
- Making terminal calibration ⇒ Pr. 38, Pr. 39, C2 to C7 (calibration parameters) (refer to page 92)

## 2.11 Auxiliary function

### 2.11.1 Slip compensation (Pr. 95 **P95**, Pr. 96 **P96**, Pr. 97 **P97**)

The inverter output current may be used to assume motor slip to keep the motor speed constant.

Parameter	Name	Factory Setting	Setting Range	Remarks
95	Rated motor slip	---	0 to 50%, ---	Setting is enabled when Pr. 30 = "1"
96	Slip compensation time constant	0.5s	0.01 to 10s	
97	Constant-power range slip compensation selection	---	0, ---	

#### <Setting>

$$\text{Rated slip} = \frac{\text{Synchronous speed at base frequency} - \text{rated speed}}{\text{Synchronous speed at base frequency}} \times 100[\%]$$

Parameter	Setting	Function
95	0.01 to 50%	Used to set the rated motor slip.
	0, ---	Slip compensation is not made.
96	0.01 to 10s	Used to set the slip compensation response time. (*)
97	0	Slip compensation is not made in the constant power range (frequency range above the frequency set in Pr. 3).
	---	Slip compensation is made in the constant power range.

\*When this value is made smaller, response will be faster.

However, as load inertia is greater, a regenerative overvoltage (OVT) error is more liable to occur.

#### REMARKS

When making slip compensation at 60Hz, set the maximum frequency (Pr. 1) to slightly higher than 60Hz.

In the factory setting status, it is clamped at 60Hz.

## 2.11.2 Automatic torque boost selection (Pr. 98 ~~998~~)

You can choose automatic torque boost control.

● Automatic torque boost control

Not only gives the motor the optimum excitation but also provides high torque even in a low speed range.

Parameter	Name	Factory Setting	Setting Range	Remarks
98	Automatic torque boost selection (motor capacity)	---	0.2 to 15kW, ---	Setting is enabled when Pr. 30 = "1"

### <Operating conditions>

- The number of motor poles should be any of 2, 4 and 6 poles.
- Single-motor operation (One motor for one inverter)
- The wiring length from inverter to motor should be within 30m.

### <Setting>

Parameter	Setting	Description
98	---	Ordinary V/F control and torque boost (Pr. 0, Pr. 46) are valid.
	0.2 to 15kW	Automatic torque boost control valid (Set the applied motor capacity or one rank lower motor capacity.)

- Also when the Pr. 98 setting is other than " - - -", Pr. 3 "base frequency" and Pr. 19 "base frequency voltage" are valid.
- When " - - -" or "888" is set in Pr. 19, the rated output voltage is selected.

### CAUTION

**During operation using automatic torque boost, write to Pr. 3 and Pr. 19 is disabled even if "2" is set in Pr. 77.**

#### ◆ Related parameters ◆

- Torque boost ⇒ Pr. 0 "torque boost", Pr. 46 "second torque boost" (refer to page 73)
- Base frequency ⇒ Pr. 3 "base frequency", Pr. 19 "base frequency voltage" (refer to page 75)
- Applied motor setting ⇒ Pr. 71 "applied motor" (refer to page 80)
- Motor primary resistance ⇒ Pr. 99 "motor primary resistance" (refer to page 134)

### 2.11.3 Motor primary resistance (Pr. 99 **999**)

Generally this parameter need not be set. At the factory setting of "- - -", the standard motor constant of the motor capacity set in Pr. 98 (including that of the constant-torque motor) is used.

Parameter	Name	Factory Setting	Setting Range	Remarks
99	Motor primary resistance	- - -	0 to 50Ω, - - -	Setting is enabled when Pr. 30 = "1"

◆ **Related parameters** ◆

- Applied motor setting ⇒ Pr. 71 "applied motor" (refer to page 80)
- Automatic torque boost selection ⇒ Pr. 98 "automatic torque boost selection (motor capacity)" (refer to page 133)

## 2.12 Maintenance function


### 2.12.1 Maintenance output function (H1 **H 1**, H2 **H 2**)

The maintenance timer alarm signal (Y95) is output when the cumulative energization time (H1 "maintenance timer") of the inverter reaches the time set in H2 "maintenance alarm output set time". (Used to alert the operator of the main circuit smoothing capacitor life expiration, for example.)

Parameter	Name	Factory Setting	Setting Range	Remarks
H1 (503)	Maintenance timer	0	0 to 999	Write disabled
H2 (504)	Maintenance alarm output set time	87 (87000h)	0 to 999, - - -	- - -: Function as 87000h

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

#### <Setting>

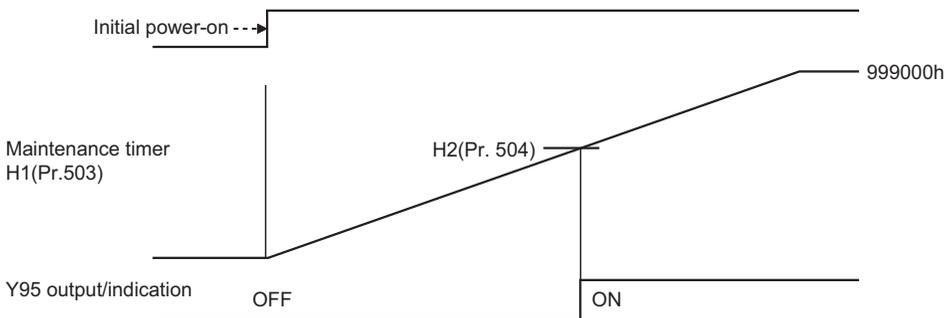

## 1) H1 (Pr. 503) "maintenance timer"

- The cumulative energization time of the inverter is stored into the EEPROM every hour and indicated in 1000h increments. (Cannot be written.)
- The maintenance timer is clamped at 999 (999000h).

## 2) H2 (Pr. 504) "maintenance alarm output set time"

- Set the time when the maintenance timer alarm signal (Y95) is output.
- The setting unit is 1000h.

**REMARKS**

The factory setting (87000h) is the guideline for the main circuit smoothing capacitor life (about 10 years in the operating environment of 40°C ambient temperature, 24h/day, and 365 days/year) of the inverter. The lifetime changes depending on the operating environment of the inverter.

## 3) Maintenance timer alarm signal (Y95)

- Made valid by setting "95" (maintenance timer alarm output signal) in Pr. 64 or Pr. 65 (output terminal function selection).
- If the value set in H2 is equal to or greater than the H1 setting, the maintenance timer alarm output (Y95) turns off.

◆ **Related parameters** ◆

- Assignment of Y95 signal to terminal ⇒ Pr. 64 "RUN terminal function selection", Pr. 65 "A, B, C terminal function selection" (Refer to page 111)

**2.12.2 Output phase failure protection selection (H8 H 8)**

You can select whether to enable/disable the output phase failure protection function that stops the inverter output if one of the inverter output side (load side) three phases (U, V, W) opens at motor start.

Parameter	Name	Factory Setting	Setting Range	Remarks
H8(251)	Output phase failure protection selection	0	0, 1	Setting is enabled when Pr. 30 = "1"

The parameter number in parentheses is the one for use with the parameter unit (FR-PU04).

**<Setting>**

H8 Setting	Description
0	Without output phase failure protection
1	With output phase failure protection

When output phase failure protection is made valid (H8 = "1"), the inverter stops output if output phase failure protection (LF) functions when one of the three phases (U, V, W) on the inverter output side (load side) opens at motor start. (This function is invalid at an automatic restart after instantaneous power failure.)

Choose "without output phase failure protection" when the motor capacity is smaller than the inverter capacity (two ranks or less as a guideline), since performing operation in such a case may activate output phase failure protection.

**REMARKS**

When parameters are copied from the conventional version of the inverter, setting value of H8 is displayed as "- - -" (65535) and output phase failure protection becomes invalid.

Output phase failure protection function (H8, ELF) is available with the FR-F500J series having the following serial number or later.

<b>Voltage Class</b>	<b>Model</b>	<b>SERIAL (Serial No.)</b>
200V class	FR-F520J-0.4 to 2.2K(F)	Q640000000
	FR-F520J-3.7K(F)	T640000000
	FR-F520J-5.5K	K670000000
	FR-F520J-5.5KF	J670000000
	FR-F520J-7.5 to 15K(F)	J670000000
400V class	FR-F540J-0.4 to 3.7K(F)	M640000000
	FR-F540J-5.5/7.5K(F)	K670000000
	FR-F540J-11K(F)	L670000000
	FR-F540J-15K(F)	K670000000

Check the rating plate for the month when the inverter was manufactured. (Refer to page 211.)

## 2.13 Calibration parameters

### 2.13.1 Meter (frequency meter) calibration (C1 )

- By using the operation panel or parameter unit, you can calibrate an analog meter connected to terminal FM to full scale deflection.
- Terminal FM provides the pulse output. By setting the calibration parameter C1, you can use the parameter to calibrate the analog meter connected to the inverter without providing a calibration resistor.


Parameter	Name	Factory Setting	Setting Range	Remarks
C1 (900)	FM terminal calibration	———	———	Setting is enabled when Pr. 30 = "1"

The parameter number in parentheses is the one for use with the parameter unit (FR-PU04).

**Changing example** Deflecting the meter (analog indicator) to full-scale (1mA) at the preset frequency of 60Hz (for frequency setting, refer to the instruction manual (basic).)

**POINT**

- The calibration parameters "C1" can be made to be ready by setting "1" (extended function parameter valid) in Pr. 30 "extended function display selection".
- Set the value of the calibration parameter C1 "FM terminal calibration".

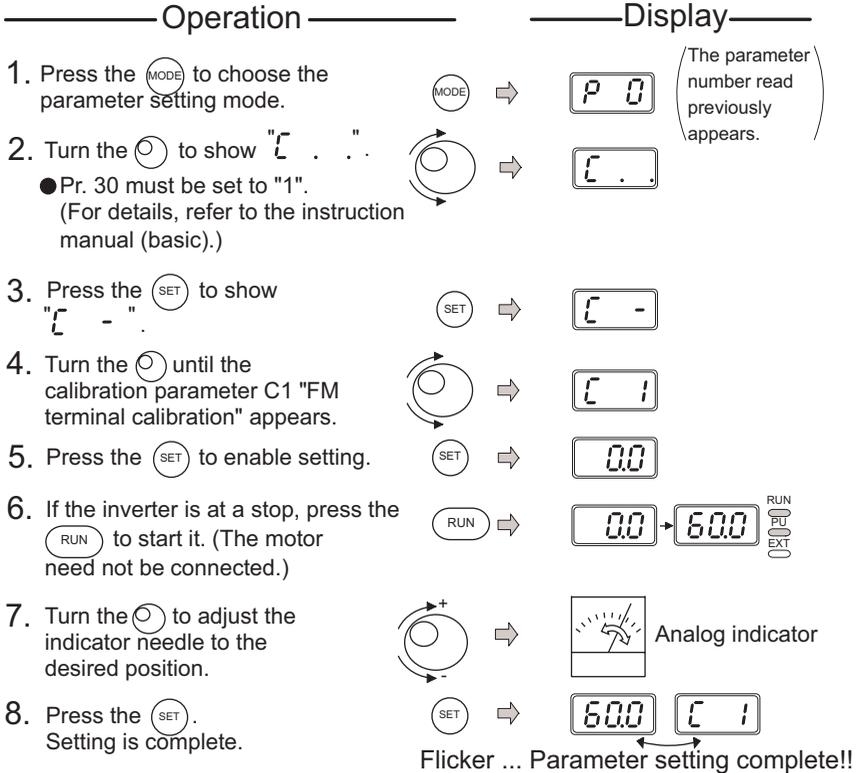

Flicker ... Parameter setting complete!!

- By turning the , you can read another parameter.
- Press the  to return to the  - indication (step 3).
- Press the  twice to show the next parameter ().

**REMARKS**

- Depending on the set value, it may take some time for the needle to move.
- If "1" is set in Pr. 30 "extended function display selection", the calibration parameter C1 "FM terminal calibration" can also be set in the external operation mode.
- C1 is factory-set to 1mA full-scale or 1440 pulses/s FM output frequency at 60Hz. The maximum pulse train output of terminal FM is 2400 pulses/s.
- When a frequency meter is connected to across terminals FM-SD to monitor the running frequency, the FM terminal output is filled to capacity at the factory setting if the maximum output frequency reaches or exceeds 100Hz. In this case, the Pr. 55 setting must be changed to the maximum frequency.
- When the FR-PU04 is used, make calibration with Pr. 900.

**POINT**

By setting the Pr. 54 "FM terminal function selection" value, preset Pr. 55 "frequency monitoring reference" or Pr. 56 "current monitoring reference" to the running frequency or current value at which the output signal is 1440 pulses/s. At 1440 pulses/s, the meter generally deflects to full-scale.

**◆ Related parameters ◆**

Choosing signal to be output to FM terminal ⇒ Pr. 54 "FM terminal function selection" (refer to page 100)

Reference values of frequency and current values ⇒ Pr. 55 "frequency monitoring reference", Pr. 56 "current monitoring reference" (refer to page 102)

**C 2** to **C 7** ➡ Refer to **P 38**, **P 39** (page 92).

## 2.14 Clear parameters

### 2.14.1 Parameter clear (CLr **ECL**)

Initializes the parameter values to the factory settings.  
Clear the parameters during a stop in the PU operation mode.

Parameter	Name	Factory Setting	Setting Range	Remarks	
CLr	Parameter clear	0	0, 1, 10	0: Clear is not executed. 1: Parameter clear *1 (Calibration parameters C1 to C7 are not cleared) 10: All clear *2 (All settings including those of the calibration parameters C1 to C7 return to factory settings)	Setting is enabled when Pr. 30 = "1"

\*1.Parameters are not cleared by setting "1" in Pr. 77 "parameter write disable selection".

Pr. 75, Pr. 38, Pr. 39, Pr. 53, Pr. 60 to Pr. 65, Pr. 99, additional parameters H1, H2, calibration parameters C1 to C7 and communication parameters n13, n15 are not cleared.

\*2.Pr. 75, additional parameter H1 and communication parameter n13 are not cleared.

#### REMARKS

For details of the operation procedure, refer to the instruction manual (basic).

### 2.14.2 Alarm history clear (ECL **ECL**)

Clear all alarm history.


Parameter	Name	Factory Setting	Setting Range	Remarks	
ECL	Alarm history clear	0	0, 1	0: Not cleared 1: Alarm history clear	Setting is enabled when Pr. 30 = "1"

## 2.15 Communication parameters

You can perform communication operation from the RS-485 connector of the inverter through RS-485.

### (1) Operational functions

1) Operation mode switching  
[Operation mode switching method]

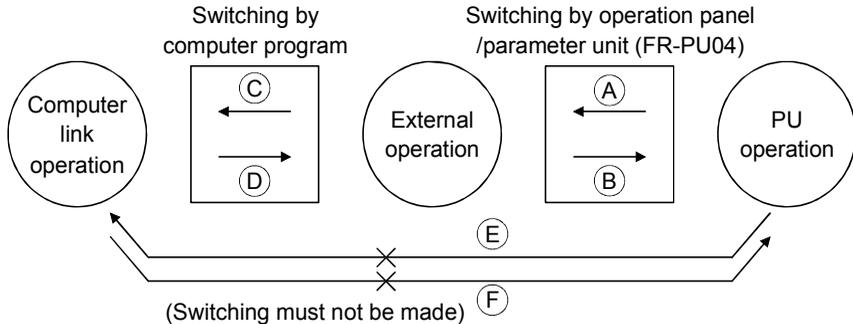

Symbol	Switching Type	Switching Method		
(A)	PU operation to external operation	Using the $\begin{matrix} \text{PU} \\ \text{EXT} \end{matrix}$ of the operation panel or the $\begin{matrix} \text{PU} \\ \text{EXT} \end{matrix}$ of the parameter unit (FR-PU04)		
(B)	External operation to PU operation	Using the $\begin{matrix} \text{PU} \\ \text{EXT} \end{matrix}$ of the operation panel or the $\begin{matrix} \text{PU} \\ \text{EXT} \end{matrix}$ of the parameter unit (FR-PU04)		
(C)	External operation to computer link operation	Using the computer program	Read (H7B)/ Write (HFB)	H0000: Communication operation H0001: External operation
(D)	Computer link operation to external operation	Using the computer program		
(E)	PU operation to computer link operation	Switching must not be made (External operation may be selected at (A) and then switched to computer link operation at (C)*)		
(F)	Computer link operation to PU operation	Switching must not be made (External operation may be selected at (D) and then switched to PU operation at (B)*)		

\* When "1" is set in the communication parameter n10 "link startup mode selection", the inverter is placed in the computer link operation mode at power on or inverter reset. (Note that it is overridden by the Pr. 79 "operation mode selection" setting.)

#### REMARKS

Unlike the other inverters, the FR-F500J series is not the type of inverter whose operation panel is removed to make communication.

Parameter setting using setup S/W is not enabled in the PU operation mode and external / PU combined operation mode (Pr. 79 = 1, 3, 4). Also, pressing the  $\begin{matrix} \text{RUN} \end{matrix}$  on the operation panel starts the inverter in the external / PU combined operation mode. (Pr. 79=1, 3)

2) Operation mode-based functions

Operation Location	Item	Operation Mode		
		PU operation	External operation	Computer link operation
Operation panel or FR-PU04	Run command (start)	Enabled	Enabled (Combined operation mode)	Disabled
	Running frequency setting	Enabled	Enabled (Combined operation mode)	Disabled
	Monitoring	Enabled	Enabled	Enabled
	Parameter write	Enabled (*4)	Disabled (*4)	Disabled (*4)
	Parameter read	Enabled	Enabled	Enabled
	Inverter reset	Enabled	Enabled	Enabled
	Stop command	Enabled	Enabled (*3)	Enabled (*3)
On-computer user program by RS-485 communication	Run command	Disabled	Disabled	Enabled (*1)
	Running frequency setting (*)	Disabled	Disabled	Enabled (*1)
	Monitoring	Enabled	Enabled	Enabled
	Parameter write	Disabled (*4)	Disabled (*4)	Enabled (*4)
	Parameter read	Enabled	Enabled	Enabled
	Inverter reset	Disabled	Disabled	Enabled (*2)
	Stop command	Disabled	Disabled	Enabled
Control circuit external terminal	Inverter reset	Enabled	Enabled	Enabled
	Run command	Enabled (Combined operation mode)	Enabled	Enabled (*1)
	Frequency setting	Enabled (Combined operation mode)	Enabled	Enabled (*1)

\*1. As set in the communication parameters n8 "operation command source" and n9 "speed command source". (refer to page 158)

\*2. At occurrence of RS-485 communication error, the inverter cannot be reset from the computer.

\*3. As set in Pr. 75 "reset selection/PU stop selection".

\*4. As set in Pr. 77 "parameter write disable selection".

**CAUTION**

**When the user program of the computer is used to make the running frequency setting by RS-485 communication, setting can be made in the minimum setting increments of 0.01Hz, but the setting may be written to the inverter in increments of 0.1Hz. (0 is written in the second decimal place.)**

**POINT**

To perform parameter write, give the run command, make inverter reset, etc. using RS-485 communication, the operation mode must be changed to the "computer link operation mode".

Set "0", "2", "7" or "8" in Pr. 79 "operation mode selection" to select the external operation mode, and change the operation mode to the "computer link operation mode" in either of the following methods.

- 1) Set "1" in the communication parameter n10 "link startup mode selection" to start the inverter in the "computer link operation mode" at power on. (Refer to page 159 for the communication parameter n10.)
- 2) Using operation mode write (instruction code HFB), write H0000 to choose the "computer link operation mode". (Refer to page 152 for operation mode write.)

## 2.15.1 Communication settings (n1 to n7 , n11 )

### ● Communication-related parameters

Parameter	Name	Factory Setting	Setting Range	Remarks	Reflection Timing
n1(331)	Communication station number	0	0 to 31	Setting is enabled when Pr. 30 = "1"	After reset
n2(332)	Communication speed	192	48,96,192		After reset
n3(333)	Stop bit length	1	0,1,10,11		After reset
n4(334)	Parity check presence/ absence	2	0,1,2		After reset
n5(335)	Number of communication retries	1	0 to 10, ---		Immediately
n6(336)	Communication check time interval (*)	0s	0, 0.1 to 999s, ---		Immediately
n7(337)	Waiting time setting	---	0 to 150ms, ---		After reset
n11(341)	CR/LF selection	1	0,1,2		After reset

- The parameter numbers within parentheses are those for use of the parameter unit (FR-PU04).
- Refer to page 206 for the instruction codes.

### POINTS

\*When making RS-485 communication, set any value other than 0 in the communication parameter n6 "communication check time interval". RS-485 communication is disabled if n6 remains unchanged from the factory setting "0s".

### ● Communication specifications

Item		Computer	
Conforming standard		EIA-485 (RS-485)	
Number of inverters connected		1:N (max. 32 inverters)	
Communication speed		Selected between 19200, 9600 and 4800bps	
Control protocol		Asynchronous	
Communication method		Half-duplex	
Communication specifications	Character system	ASCII (7 bits/8 bits) selectable	
	Stop bit length	Selectable between 1 bit and 2 bits.	
	Terminator	CR/LF (presence/absence selectable)	
	Check system	Parity check	Selectable between presence (even/odd) and absence
		Sum check	Presence
Waiting time setting		Selectable between presence and absence	

### REMARKS

- For computer link operation, set 65535 (HFFFF) as the value "- - -" and 65520 (HFFF0) as the Pr. 19 value "888".
- Refer to page 48 for handling the RS-485 connector.
- For parameter instruction codes, refer to the appended parameter instruction code list (page 206).

### <Setting>

To make communication between the personal computer and inverter, initialization of the communication specifications must be made to the inverter. If initial setting is not made or there is a setting fault, data transfer cannot be made.


\*After making the initial setting of the parameters, always reset the inverter. After you have changed the communication-related parameters, communication cannot be made until the inverter is reset.

Parameter	Name	Setting	Description	
n1	Communication station number	0 to 31	Station number specified for communication from the RS-485 connector. Set the inverter station numbers when two or more inverters are connected to one personal computer.	
n2	Communication speed	48	4800bps	
		96	9600bps	
		192	19200bps	
n3	Stop bit length/ data length	8 bits	0	Stop bit length 1 bit
			1	Stop bit length 2 bits
		7 bits	10	Stop bit length 1 bit
			11	Stop bit length 2 bits
n4	Parity check presence/ absence	0	Absent	
		1	Odd parity present	
		2	Even parity present	
n5	Number of communication retries	0 to 10	Set the permissible number of retries at occurrence of a data receive error. If the number of consecutive errors exceeds the permissible value, the inverter will come to an alarm stop (OPT).	
		--- (65535)	If a communication error occurs, the inverter will not come to an alarm stop. At this time, the inverter can be coasted to a stop by MRS or RES input. During a communication error (H0 to H5), the minor fault signal (LF) is switched on. Allocate the used terminal with any of Pr. 64, Pr. 65 (output terminal function selection).	
n6	Communication check time interval	0	No communication	
		0.1 to 999	Set the communication check time [s] interval. If a no-communication state persists for longer than the permissible time, the inverter will come to an alarm stop (OPT).	
		---	Communication check suspension.	
n7	Waiting time setting	0 to 150	Set the waiting time between data transmission to the inverter and response.	
		---	Set with communication data.	
n11	CR/LF selection	0	Without CR/LF	
		1	With CR, without LF	
		2	With CR/LF	

## <Computer programming>

### (1) Communication protocol

Data communication between the computer and inverter is performed using the following procedure:

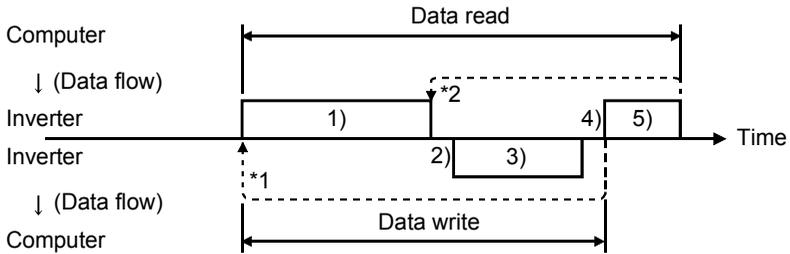

#### REMARKS

- \*1. If a data error is detected and a retry must be made, execute retry operation with the user program. The inverter comes to an alarm stop if the number of consecutive retries exceeds the parameter setting.
- \*2. On receipt of a data error occurrence, the inverter returns "reply data 3)" to the computer again. The inverter comes to an alarm stop if the number of consecutive data errors reaches or exceeds the parameter setting.

### (2) Communication operation presence/absence and data format types

Communication operation presence/absence and data format types are as follows:

No.	Operation	Run Command	Running Frequency	Parameter Write	Inverter Reset	Monitoring	Parameter Read	
1)	Communication request is sent to the inverter in accordance with the user program in the computer.	A'	A (A")*1	A (A")*2	A	B	B	
2)	Inverter data processing time	Present	Present	Present	Absent	Present	Present	
3)	Reply data from the inverter. (Data 1) is checked for error)	No error* (Request accepted)	C	C	C	Absent	E, E' (E")*1	E (E")*2
		With error (request rejected)	D	D	D	Absent	F	F
4)	Computer processing delay time	Absent	Absent	Absent	Absent	Absent	Absent	
5)	Answer from computer in response to reply data 3). (Data 3) is checked for error)	No error* (No inverter processing)	Absent	Absent	Absent	Absent	G (Absent)	G (Absent)
		With error. (Inverter outputs 3) again.)	Absent	Absent	Absent	Absent	H	H

\* In the communication request data from the computer to the inverter, 10ms or more is also required after "no data error (ACK)". (Refer to page 148.)

2  
FUNCTIONS

**REMARKS**

- \*1. Setting any of "0.1" to "999" in Pr. 37 "speed display" and "1" in instruction code "HFF" sets the data format to A" or E" (6-digit data). Also, the output frequency turns to a speed display, which is valid in 0.01r/min increments. (The third decimal place is invalid.) If the instruction code "HFF" is other than "1", the display is in 1r/min increments and a 4-digit data format can be used. Reply data is given in format E if the requested monitor data has 4 digits, in format E' if the data has 2 digits, or in format E" if the data has 6 digits.
- \*2. The data format to read/write Pr. 37 "speed display" is always E"/A" (6-digit data).


**(3) Data format**

Data communication between the computer and inverter is made in ASCII code (hexadecimal code).

● Data format types

1) Communication request data from computer to inverter


[Data write]

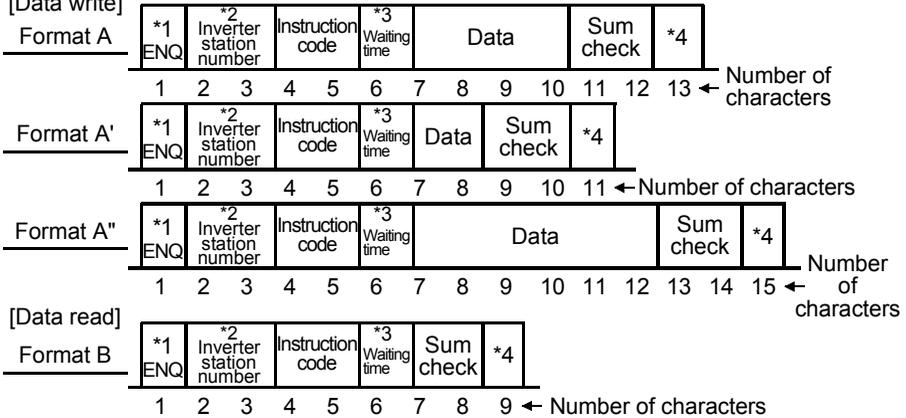

2) Reply data from inverter to computer during data write

[No data error detected]


[Data error detected]

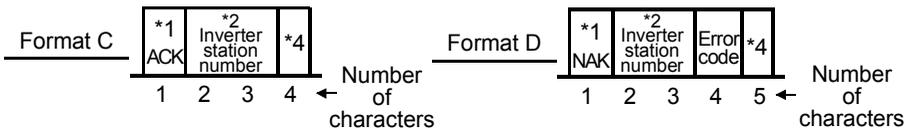

3) Reply data from inverter to computer during data read


[No data error detected]

[Data error detected]

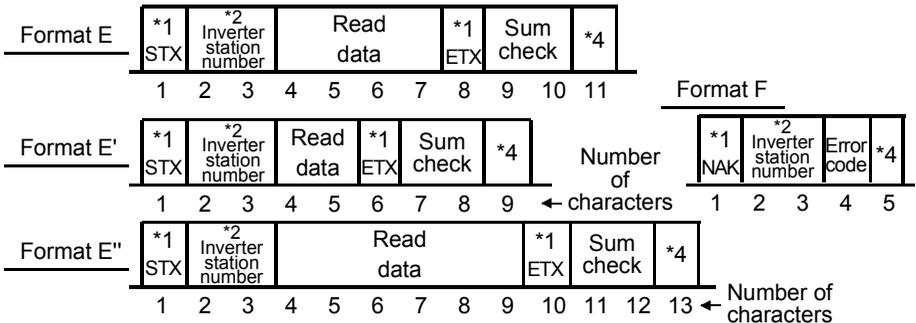


#### 4) Send data from computer to inverter during data read

[No data error detected]  
(May be omitted)

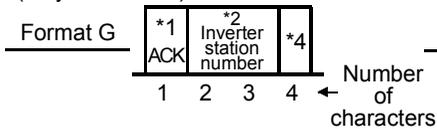

[Data error detected]

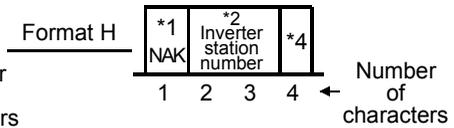

#### REMARKS

- \*1. Indicates the control code. (Refer to the table below.)
- \*2. Specify the inverter station numbers between H00 and H1F (stations 0 to 31) in hexadecimal.
- \*3. When communication parameter n7 "waiting time setting" ≠ ---, create the communication request data without "waiting time" in the data format. (The number of characters is decremented by 1.)
- \*4. CR or LF code  
When data is transmitted from the computer to the inverter, codes CR (carriage return) and LF (line feed) codes are automatically set at the end of a data group on some computers. In this case, setting must also be made on the inverter according to the computer.  
Also, the presence or absence of the CR and LF codes can be selected using n11.

#### (4) Data definitions

##### 1) Control codes

Signal	ASCII Code	Description
STX	H02	Start of Text (Start of data)
ETX	H03	End of Text (End of data)
ENQ	H05	Enquiry (Communication request)
ACK	H06	Acknowledge (No data error detected)
LF	H0A	Line Feed
CR	H0D	Carriage Return
NAK	H15	Negative Acknowledge (Data error detected)

##### 2) Inverter station number

Specify the station number of the inverter which communicates with the computer.

##### 3) Instruction code


Specify the processing request, e.g. operation or monitoring, given by the computer to the inverter. Hence, the inverter can be run and monitored in various ways by specifying the instruction code as appropriate. (Refer to page 206.)

##### 4) Data

Indicates the data such as frequency and parameters transferred to and from the inverter. The definitions and ranges of set data are determined in accordance with the instruction codes. (Refer to page 206.)

### 5) Waiting time


Specify the waiting time between the receipt of data at the inverter from the computer and the transmission of reply data. Set the waiting time in accordance with the response time of the computer between 0 and 150ms in 10ms increments (e.g. 1 = 10ms, 2 = 20ms).

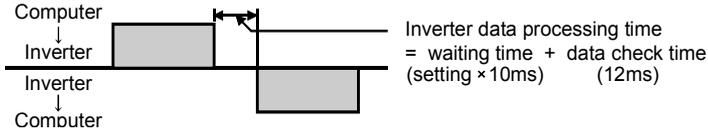

### REMARKS

When communication parameter n7 "waiting time setting" ≠ "--", create the communication request data without "waiting time" in the data format. (The number of characters is decremented by 1.)

### 6) Response time

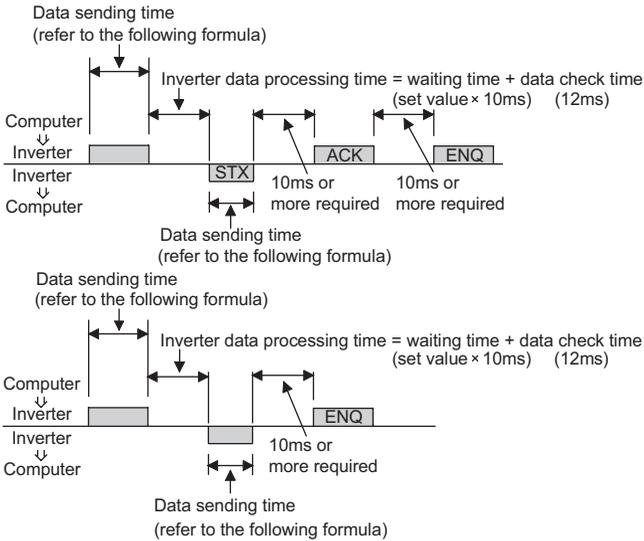

[Formula for data sending time]

$$\frac{1}{\text{Communication speed (bps)}} \times \text{Number of data characters (Refer to page 146)} \times \text{Communication specification (Total number of bits) (See below)} = \text{Data sending time (s)}$$

● Communication specification

Name		Number of Bits
Stop bit length		1 bit 2 bits
Data length		7 bits 8 bits
Parity check	Yes	1 bit
	No	0 bit

In addition to the bits in the above table, 1 bit is required for the start bit.


Minimum total number of bits ... 9 bits

Maximum total number of bits ... 12 bits

## 7) Signal loss detection (Communication parameter n6 "communication check time interval")

- If a signal loss (communication stop) is detected between the inverter and computer as a result of a signal loss detection check, a communication error (OPT) occurs and the inverter output is shut off.
- A signal loss detection is made when the setting is any of "0.1s" to "999s". To make a signal loss detection, it is necessary to send data (control code refer to page 147) from the computer within the communication check time interval. (The send data has nothing to do with the station number)
- Communication check is performed in computer link operation mode from at the first communication.
- When the setting is "---", communication check (disconnection detection) is not made.
- When the setting is "0", RS-485 communication is disabled.

Example: When communication parameter n6= "0.1 to 999"


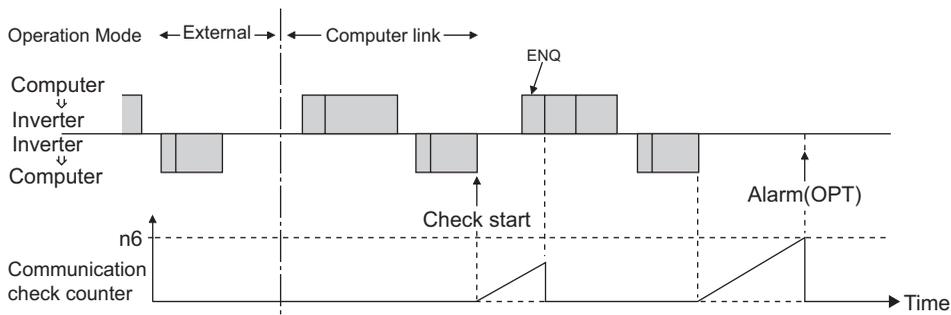


### CAUTION

**When the setting is "---" = n6, communication check (signal loss detection) is not made. When signal is lost (communication is disconnected), motor can not be stopped from communication.**

### 8) Sum check code

The sum check code is 2-digit ASCII (hexadecimal) representing the lower 1 byte (8 bits) of the sum (binary) derived from the checked ASCII data

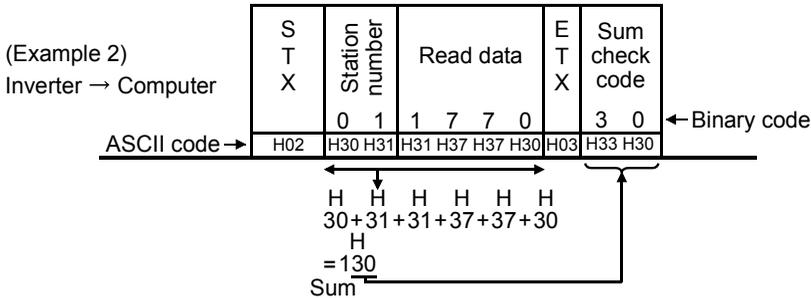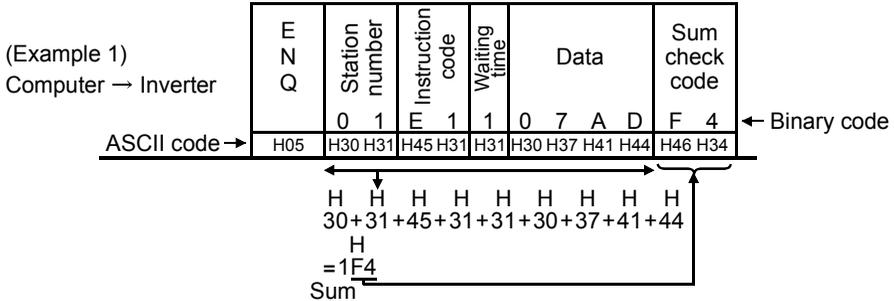

### 9) Error code

If any error is found in the data received by the inverter, its definition is sent back to the computer together with the NAK code. (Refer to page 156.)

#### REMARKS

1. When the data from the computer has an error, the inverter will not accept that data.
2. All data communication, e.g. run command or monitoring, are started when the computer gives a communication request. The inverter does not return any data without the computer's request. For monitoring, therefore, design the program to cause the computer to provide a data read request as required.
3. When the parameter setting is read or written, the data of the link parameter expansion setting changes depending on the parameter. For the data, refer to the parameter instruction code list on page 206.

 **CAUTION**

-  **When the inverter's communication check time interval is not set, interlocks are provided to disable operation to prevent hazardous conditions.**
-  **Always set the communication check time interval before starting operation to prevent hazardous conditions.**
-  **Data communication is not started automatically but is made only once when the computer provides a communication request. If communication is disabled during operation due to signal cable breakage etc., the inverter cannot be stopped. When the communication check time interval has elapsed, the inverter will come to an alarm stop (OPT).  
The inverter can be coasted to a stop by switching on its RES signal or by switching power off.**
-  **If communication is broken due to signal cable breakage, computer fault etc., the inverter does not detect such a fault. This should be fully noted.**

### <Setting items and set data>

After completion of parameter settings, set the instruction codes and data then start communication from the computer to allow various types of operation control and monitoring.

No.	Item	Instruction Code	Description	Number of Data Digits																																																								
1	Operation mode	Read	H7B H0000: Communication operation H0001: External operation H0002: PU operation	4 digits																																																								
		Write	HFB H0000: Communication operation H0001: External operation																																																									
2	Output frequency [speed]	H6F	H0000 to HFFFF: Output frequency in 0.01Hz increments Pr. 37 = 0 (factory setting)	4 digits																																																								
			H0000 to HFFFF: Speed in 1r/min increments When Pr. 37 = "0.1 to 999", expansion link parameter (HFF) = 0																																																									
		H000000 to HFFFFFF: Speed in 0.01r/min increments When Pr. 37 = "0.1 to 999", expansion link parameter (HFF) = 1	6 digits																																																									
	Output current	H70	H0000 to HFFFF: Output current (hexadecimal) in 0.01A increments	4 digits																																																								
Monitoring	Alarm definition	H74 to H75	H0000 to HFFFF: Two most recent alarm definitions Alarm definition display example (instruction code H74)	4 digits																																																								
			<div style="text-align: center;"> <p>b15                      b8b7                      b0</p> <table border="1" style="margin: auto;"> <tr> <td>0</td><td>0</td><td>1</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td> </tr> </table> <p>Previous alarm (H30)                      Most recent alarm (HA0)</p> </div> <p>Alarm data</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Data</th> <th>Description</th> <th>Data</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>H00</td><td>No alarm</td><td>H60</td><td>OLT</td></tr> <tr><td>H10</td><td>OC1</td><td>H80</td><td>GF</td></tr> <tr><td>H11</td><td>OC2</td><td>H81</td><td>LF</td></tr> <tr><td>H12</td><td>OC3</td><td>H90</td><td>OHT</td></tr> <tr><td>H20</td><td>OV1</td><td>HA0</td><td>OPT</td></tr> <tr><td>H21</td><td>OV2</td><td>HB0</td><td>PE</td></tr> <tr><td>H22</td><td>OV3</td><td>HB1</td><td>PUE</td></tr> <tr><td>H30</td><td>THT</td><td>HB2</td><td>RET</td></tr> <tr><td>H31</td><td>THM</td><td>HC0</td><td>CPU*</td></tr> <tr><td>H40</td><td>FIN</td><td></td><td></td></tr> </tbody> </table> <p>* Error code may not be returned.</p>		0	0	1	1	0	0	0	0	1	0	1	0	0	0	0	0	Data	Description	Data	Description	H00	No alarm	H60	OLT	H10	OC1	H80	GF	H11	OC2	H81	LF	H12	OC3	H90	OHT	H20	OV1	HA0	OPT	H21	OV2	HB0	PE	H22	OV3	HB1	PUE	H30	THT	HB2	RET	H31	THM	HC0	CPU*
0	0	1	1	0	0	0	0	1	0	1	0	0	0	0	0																																													
Data	Description	Data	Description																																																									
H00	No alarm	H60	OLT																																																									
H10	OC1	H80	GF																																																									
H11	OC2	H81	LF																																																									
H12	OC3	H90	OHT																																																									
H20	OV1	HA0	OPT																																																									
H21	OV2	HB0	PE																																																									
H22	OV3	HB1	PUE																																																									
H30	THT	HB2	RET																																																									
H31	THM	HC0	CPU*																																																									
H40	FIN																																																											

No.	Item	Instruction Code	Description	Number of Data Digits
3	Run command	HFA	<p>b7 <span style="border: 1px solid black; padding: 2px;">0</span> <span style="border: 1px solid black; padding: 2px;">1</span> <span style="border: 1px solid black; padding: 2px;">0</span> b0</p> <p>[For example 1]                      [Example 1] H02 ... Forward rotation                      [Example 2] H00 ... Stop</p> <p>b0 : _____                      b1 : Forward rotation (STF)                      b2 : Reverse rotation (STR)*1                      b3 : Current input selection (AU) *1, *2                      b4 : Middle speed (RM)*1                      b5 : High speed (RH)*1                      b6 : _____                      b7 : _____</p> <p>*1 Function change can be made using Pr. 60 to Pr. 63 (input terminal function selection).                      *2 When operating the AU signal using RS-485 communication, set the speed command right to external. (n9 = 1)                      Refer to page 158 for details.</p>	2 digits
4	Inverter status monitor	H7A	<p>b7 <span style="border: 1px solid black; padding: 2px;">0</span> <span style="border: 1px solid black; padding: 2px;">1</span> <span style="border: 1px solid black; padding: 2px;">0</span> b0</p> <p>[For example 1]                      [Example 1] H02 ... During forward rotation                      [Example 2] H80 ... Stop due to alarm</p> <p>b0 : Inverter running (RUN)*                      b1 : Forward rotation                      b2 : Reverse rotation                      b3 : Up to frequency (SU)                      b4 : Overload (OL)                      b5 : _____                      b6 : Frequency detection (FU)                      b7 : Alarm occurrence*</p> <p>* Function change can be made using Pr. 64 and Pr. 65 (output terminal function selection).</p>	2 digits

No.	Item	Instruction Code	Description	Number of Data Digits
5	Set frequency read (RAM)	H6D	<ul style="list-style-type: none"> <li>When Pr. 37 = "0" (factory setting) The set frequency (RAM or EEPROM) is read. H0000 to H2EE0: 0.01Hz increments</li> <li>When Pr. 37 = "0.1 to 999", expansion link parameter (HFF) = 0 The set speed is read. H0000 to H03E7: 1r/min increments</li> </ul>	4 digits (6 digits)
	Set frequency read (EEPROM)	H6E	<ul style="list-style-type: none"> <li>When Pr. 37 = "0.1 to 999", expansion link parameter (HFF) = 1 The set speed is read. (The number of data digits is 6 digits.) H0000 to HF3E58: 0.001r/min increments</li> </ul>	
	Set frequency write (RAM only)	HED	<ul style="list-style-type: none"> <li>When Pr. 37 = "0" (factory setting) H0000 to H2EE0 (0 to 120.00Hz): Set frequency in 0.01Hz increments When changing the set frequency continuously, write it to the inverter RAM (instruction code: HED). The minimum setting increments are 0.01Hz but setting can be made in only 0.1Hz increments.</li> <li>When Pr. 37 = "0.1 to 999", expansion link parameter HFF = 0 H0000 to H03E7 (0 to 999): Set speed in 1r/min increments</li> </ul>	4 digits (6 digits)
Set frequency write (RAM and EEPROM)	HEE	<ul style="list-style-type: none"> <li>When Pr. 37 = "0.1 to 999", expansion link parameter HFF = 1 H0000 to HF3E58 (0 to 999.000): Set speed in 0.001r/min increments Set the number of data digits as 6 digits. The minimum setting increments are 0.001r/min but setting can be made in only 0.01r/min increments.</li> </ul>		
6	Inverter reset	HFD	<p>H9696: Resets the inverter. As the inverter is reset on start of communication by the computer, the inverter cannot send reply data back to the computer.</p>	4 digits
7	Alarm definition batch clear	HF4	H9696: Alarm history batch clear	4 digits

No.	Item	Instruction Code	Description	Number of Data Digits																									
8	All parameter clear	HFC	<p>All parameters return to the factory settings. Any of four different all clear operations are performed according to the data.</p> <table border="1"> <thead> <tr> <th>Data \ Pr.</th> <th>Communication Pr.</th> <th>Calibration Pr</th> <th>Other Pr.*</th> <th>HEC HFF</th> </tr> </thead> <tbody> <tr> <td>H9696</td> <td>○</td> <td>×</td> <td>○</td> <td>○</td> </tr> <tr> <td>H9966</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>H5A5A</td> <td>×</td> <td>×</td> <td>○</td> <td>○</td> </tr> <tr> <td>H55AA</td> <td>×</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>When all parameter clear is executed for H9696 or H9966, communication-related parameter settings also return to the factory settings. When resuming operation, set the parameters again. * Pr. 75 is not cleared.</p>	Data \ Pr.	Communication Pr.	Calibration Pr	Other Pr.*	HEC HFF	H9696	○	×	○	○	H9966	○	○	○	○	H5A5A	×	×	○	○	H55AA	×	○	○	○	4 digits
Data \ Pr.	Communication Pr.	Calibration Pr	Other Pr.*	HEC HFF																									
H9696	○	×	○	○																									
H9966	○	○	○	○																									
H5A5A	×	×	○	○																									
H55AA	×	○	○	○																									
9	Parameter read	H00 to H63	Refer to the "Instruction Code List" (page 206) and write and/or read the values as required.	4 digits																									
10	Parameter write	H80 to HE3	When setting Pr.100 and later, set link parameter expansion setting.	4 digits																									
11	Link parameter expansion setting	Read	H7F	Set any of H00 to H09 to change the parameter settings. For details of the settings, refer to the parameter instruction code list (page 206).	2 digits																								
		Write	HFF																										
12	Second parameter changing (Code HFF = 1)	Read	H6C	<p>When setting the bias/gain (instruction code H5E to H61, HDE to HE1) parameters H00: Frequency (*1) H01: Analog H02: Analog value of terminal (*2)</p> <p>*1. The gain frequencies may also be written using Pr. 38 and Pr. 39 (instruction codes A6 and A7). *2. When a voltage is given to the external terminal to make bias or gain calibration, the data value written is 4 digits.</p>	2 digits																								
		Write	HEC																										

**REMARKS**

For the instruction codes HFF, HEC, their set values are held once they are written, but changed to 0 when the inverter is reset or all clear is performed.

### <Error Code List>

The corresponding error code in the following list is displayed if an error is detected in any communication request data from the computer:

Error Code	Item	Definition	Inverter Operation
H0	Computer NAK error	The number of errors consecutively detected in communication request data from the computer is greater than allowed number of retries.	Brought to an alarm stop (OPT) if error occurs continuously more than the allowable number of retries.
H1	Parity error	The parity check result does not match the specified parity	
H2	Sum check error	The sum check code in the computer does not match that of the data received by the inverter.	
H3	Protocol error	Data received by the inverter is in wrong protocol, data receive is not completed within given time, or CR and LF are not as set in the parameter.	
H4	Framing error	The stop bit length is not as specified by initialization.	
H5	Overrun error	New data has been sent by the computer before the inverter completes receiving the preceding data.	
H6	_____	_____	_____
H7	Character error	The character received is invalid (other than 0 to 9, A to F, control code).	Does not accept received data but is not brought to alarm stop
H8	_____	_____	_____
H9	_____	_____	_____
HA	Mode error	Parameter write was attempted in other than the computer link operation mode or during inverter operation.	Does not accept received data but is not brought to alarm stop.
HB	Instruction code error	The specified command does not exist.	
HC	Data range error	Invalid data has been specified for parameter write, frequency setting, etc.	
HD	_____	_____	
HE	_____	_____	_____
HF	_____	_____	_____

### (5) Operation at alarm occurrence

Fault Location	Status	Operation Mode	
		Communication Operation (RS-485 connector)	External Operation
Inverter fault	Inverter operation	Stop	Stop
	Communication   RS-485 connector	Continued	Continued
Communication error (Communication from RS-485 connector)	Inverter operation	Stop/continued (*3)	Continued
	Communication   RS-485 connector	Stop	Stop

\*3: Can be selected using the corresponding parameter (factory-set to stop).

### (6) Communication error

Fault Location	Error Message (Operation panel)	Remarks
Communication error (Communication from RS-485 connector)	OPT	Error code is OPT


## (7) Program example

To change the operation mode to computer link operation

### Program

<p>Line number</p> <p>10 OPEN"COM1:9600,E,8,2,HD"AS #1</p> <p>20 COMST1,1,1:COMST1,2,1</p> <p>30 ON COM(1)GOSUB*REC</p> <p>40 COM(1)ON</p> <p>50 D\$="01FB10000"</p> <p>60 S=0</p> <p>70 FOR I=1 TO LEN(D\$)</p> <p>80 A\$=MID\$(D\$,I,1)</p> <p>90 A=ASC(A\$)</p> <p>100 S=S+A</p> <p>110 NEXT I</p> <p>120 D\$=CHR\$(&amp;H5)+D\$+RIGHT\$(HEX\$(S),2)</p> <p>130 PRINT#1,D\$</p> <p>140 GOTO 50</p> <p>1000 *REC</p> <p>1010 IF LOC(1)=0 THEN RETURN</p> <p>1020 PRINT"RECEIVE DATA"</p> <p>1030 PRINT INPUT\$(LOC(1),#1)</p> <p>1040 RETURN</p>	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 10px;">Initial setting of I/O file</div> <ul style="list-style-type: none"> <li>★ Opening the communication file</li> <li>★ ON/OFF setting of circuit control signals (RS, ER)</li> <li>★ Interrupt definition for data receive</li> <li>★ Interrupt enable</li> </ul> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 10px;">Send data setting</div> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 10px;">Sum code calculation</div> <ul style="list-style-type: none"> <li>★ Addition of control and sum codes</li> </ul> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 10px;">Data send</div> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 10px;">Interrupt data receive</div> <ul style="list-style-type: none"> <li>★ Interrupt occurrence during data receive</li> </ul>
---	--

### General flowchart

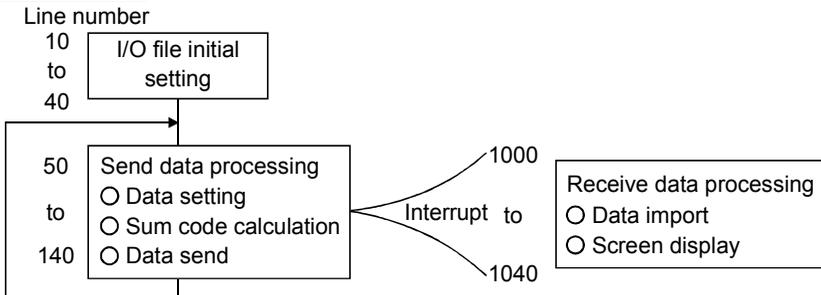

## 2.15.2 Operation and speed command source (n8 , n9 )

Used to make valid the run and speed commands from the computer or external terminals.

Parameter	Name	Factory Setting	Setting Range	Remarks
n8 (338)	Operation command source	0	0, 1	Setting is enabled when Pr. 30 = "1"
n9 (339)	Speed command source	0	0, 1	

The parameter numbers within parentheses are those for use of the parameter unit (FR-PU04).

### <Setting>

In the computer operation mode, commands from the external terminals and computer are as listed below.

(Refer to page 109 for Pr. 60 to Pr. 63 (input terminal function selection).)

Operation location selection	n8 (Pr. 338) "operation command source"		0:	0:	1:	1:	Remarks	
	n9 (Pr. 339) "speed command source"		0:	1:	0:	1:		
			Computer	Computer	External	External		
			Computer	External	Computer	External		
Fixed function (Terminal-equivalent function)	Forward rotation command (STF)		Computer	Computer	External	External		
	Computer link operation frequency		Computer	—	Computer	—		
		2	—	External	—	External		
	4	—	External	—	External			
Selection function	Pr. 60 to Pr. 63 settings	0	Low-speed run command (RL)	Computer	External	Computer	External	Pr. 59 = "0"
		1	Middle-speed run command (RM)	Computer	External	Computer	External	Pr. 59 = "0"
		2	High-speed run command (RH)	Computer	External	Computer	External	Pr. 59 = "0"
		3	Second function selection (RT)	Computer	Computer	External	External	
		4	Current input selection (AU)	—	Combined	—	Combined	
		5	Start self-holding selection (STOP)	—	—	External	External	
		6	Output stop (MRS)	Combined	Combined	External	External	Pr. 79 ≠ "7"
		7	External thermal relay input (OH)	External	External	External	External	
		8	15-speed selection (REX)	Computer	External	Computer	External	Pr. 59 = "0"
		9	Jog operation selection (JOG)	—	—	External	External	
		10	Reset (RES)	External	External	External	External	
		14	PID control valid terminal (X14)	Computer	External	Computer	External	
		16	PU-external operation switch-over (X16)	External	External	External	External	
---	Reverse rotation command (STR)	Computer	Computer	External	External			

Operation location selection	n8 (Pr. 338) "operation command source"	0: Computer	0: Computer	1: External	1: External	Remarks
	n9 (Pr. 339) "speed command source"	0: Computer	1: External	0: Computer	1: External	
RH, RM, RL, REX selection function	Remote setting (RH, RM, RL)	Computer	External	Computer	External	Pr. 59 = "1", "2"
	15-speed selection (REX)	—	—	—	—	
MRS selection function	PU operation interlock (MRS)	External	External	External	External	Pr. 79 = "7"

### [Explanation of table]

External : Operation is valid only from external terminal signal.

Computer : Operation is valid only from computer.

Combined : Operation is valid from either of external terminal and computer.

— : Operation is invalid from either of external terminal and computer.

### CAUTION

When Pr. 79 "operation mode selection" is set to "7" (PU operation interlock function), only the external terminal is made valid independently of the n8 and n9 settings because the MRS terminal is shared.

### 2.15.3 Link startup mode selection (n10 )

The operation mode at power on and at power restoration after instantaneous power failure can be selected.

Set "1" in n10 to select the computer link operation mode.

After a link start, parameter write is enabled with a program.

Parameter	Name	Factory Setting	Setting Range	Remarks
n10 (340)	Link startup mode selection	0	0, 1	Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

## &lt;Setting&gt;

n10 Setting	Pr. 79 Setting	Operation Mode at Power on or Power Restoration	Remarks
0 (Factory setting)	0	External operation mode	Can be changed to the computer link operation mode by RS-485 communication.
	1	PU operation mode	Operation mode cannot be changed.
	2	External operation mode	Can be changed to the computer link operation mode by RS-485 communication.
	3	External/PU combined mode	Operation mode cannot be changed.
	4	External/PU combined mode	
	7	External operation mode (PU operation interlock)	MRS signal ON.....Can be changed to PU operation by RS-485 communication. MRS signal OFF...Operation mode cannot be changed.
	8	•X16 signal ON Started in the external operation mode.	Can be changed to the computer link operation mode by RS-485 communication.
		•X16 signal OFF Started in the PU operation mode.	Operation mode cannot be changed.
1	0	Computer link operation mode	Can be changed to the external operation mode by RS-485 communication.
	1	PU operation mode	Operation mode cannot be changed.
	2	Computer link operation mode	Can be changed to the external operation mode by RS-485 communication.
	3	External/PU combined mode	Operation mode cannot be changed.
	4	External/PU combined mode	
	7	PU operation interlock •MRS signal ON Started in the computer link operation mode.	Can be changed to external operation by RS-485 communication.
		•MRS signal OFF Started in the external operation mode.	Operation mode cannot be changed.
	8	•X16 signal ON Started in the computer link operation mode.	Can be changed to external operation by RS-485 communication.
		•X16 signal OFF Started in the PU operation mode.	Operation mode cannot be changed.

- n10 can be changed from the operation panel independently of the operation mode.
- Setting of n10 = "1" is made valid when "0" or "2" is set in Pr. 79 "operation mode selection".

 Refer to  to  (page 143)

## 2.15.4 EEPROM write selection (n12 ~~n13~~)

You can choose whether the parameters are stored into the EEPROM or not at the parameter setting for computer communication. When performing parameter write frequently, write them to the RAM.

Parameter	Name	Factory Setting	Setting Range	Remarks
n12 (342)	EEPROM write selection	0	0, 1	0: Written to RAM and EEPROM 1: Written to RAM only Not written to EEPROM* Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

### REMARKS

\*When the parameter setting is "not written to EEPROM" (setting=1), the settings return to the original values (values saved in the EEPROM) at power-on reset or terminal reset.

## 2.16 Parameter unit (FR-PU04) setting

When the optional parameter unit (FR-PU04) is connected to the RS-485 connector of the inverter, you can make the environment setting of the parameter unit.

### CAUTION

When the parameter unit (FR-PU04) is used, operation from the operation panel is not accepted. (The stop key () is valid)

### 2.16.1 PU display language selection (n13 )

By setting the communication parameter n13 "PU display language selection", you can switch the display language of the parameter unit to another.

Parameter	Name	Factory Setting	Setting Range	Remarks
n13 (145)	PU display language selection	0	0 to 7	Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

#### <Setting>

n13 Setting	Display Language
0	Japanese (factory setting)
1	English
2	German
3	French
4	Spanish
5	Italian
6	Swedish
7	Finnish

### 2.16.2 PU buzzer control (n14 )

By setting the communication parameter n14 "PU buzzer control", you can control "beep" produced when any of the parameter unit (FR-PU04) keys is operated.

Parameter	Name	Factory Setting	Setting Range	Remarks
n14 (990)	PU buzzer control	1	0, 1	0: Without sound 1: With sound (factory setting) Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

### 2.16.3 PU contrast adjustment (n15 )

By setting the communication parameter n15 "PU contrast adjustment", you can adjust the LCD contrast of the parameter unit (FR-PU04). When using the FR-PU04, adjust the numerical value to any darkness with the / and define that brightness with the  of the parameter unit.

Parameter	Name	Factory Setting	Setting Range	Remarks
n15 (991)	PU contrast adjustment	58	0 to 63	Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

### 2.16.4 PU main display screen data selection (n16 )

You can choose the main display screen of the parameter unit (FR-PU04).

Parameter	Name	Factory Setting	Setting Range	Remarks
n16 (992)	PU main display screen data selection	0	0, 100	Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

#### <Setting>

When "100" is set in n16, the monitor value is different depending on whether the inverter is at a stop or running.

	n16		
	0	100	
	During operation/stop	During stop	During operation
Output frequency	Output frequency	Set frequency	Output frequency
Output current	Output current		
Alarm display	Alarm display		

#### REMARKS

- During an error, the output frequency at error occurrence appears.
- During MRS signal is on, the values displayed are the same as during a stop.

#### ◆ Related parameters ◆

- Speed display ⇒ Pr. 37 "speed display" (refer to page 91)

## 2.16.5 Disconnected PU detection/PU setting lock selection (n17 )

You can choose the connector disconnection detection function of the parameter unit (FR-PU04) and the control source of the PU (operation panel, FR-PU04).

● Disconnected PU detection :

This function detects that the parameter unit (FR-PU04) has been disconnected from the inverter for longer than 1s and causes the inverter to provide an alarm output (PUE) and come to an alarm stop. When the PU has been disconnected since before power-on, it is not judged as an alarm.

● PU setting lock :

Control source of operation command, frequency command and parameter setting is restricted to the operation panel or parameter unit (FR-PU04).

Parameter	Name	Factory Setting	Setting Range	Remarks
n17 (993)	Disconnected PU detection/PU setting lock	0	0, 1, 10	Setting is enabled when Pr. 30 = "1"

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

## &lt;Setting&gt;

n17 Setting	Disconnected PU Detection	PU Setting Lock*
0	Operation is continued as-is if the PU is disconnected (without disconnected PU detection)	Parameter unit (FR-PU04) is valid
1	Inverter output is shut off when the PU is disconnected (with disconnected PU detection)	
10	Operation is continued as-is if the PU is disconnected (without disconnected PU detection)	Operation panel is valid

\* The monitor display and the  are valid.

**CAUTION**

**The motor decelerates to a stop when the PU is disconnected during PU jog operation with n17 set to any of "0, 10" (operation is continued if the PU is disconnected).**

**REMARKS**

When RS-485 communication operation is performed through the RS-485 connector, the reset selection/PU stop selection function is valid but the disconnected PU detection function is invalid.

 **CAUTION**


**Do not reset the inverter while the start signal is being input. Doing so will cause the inverter to start immediately after a reset, leading to hazardous conditions.**

# MEMO

# 3. PROTECTIVE FUNCTIONS

This chapter explains the "protective functions" of this product.

Always read the instructions before using the equipment.

<b>3.1 Errors (Alarms) .....</b>	<b>168</b>
<b>3.2 Troubleshooting .....</b>	<b>178</b>
<b>3.3 Precautions for maintenance and inspection...</b>	<b>181</b>

Chapter 1

Chapter 2

Chapter 3

Chapter 4

### 3.1 Errors (Alarms)

---

When an alarm occurs in the inverter, the protective function is activated bringing the inverter to an alarm stop and the PU display automatically changes to any of the following error (alarm) indications.

If your fault does not correspond to any of the following errors or if you have any other problem, please contact your sales representative.

- Retention of alarm output signal ..... When the magnetic contactor (MC) provided on the power supply side of the inverter is opened at the activation of the protective function, the inverter's control power will be lost and the alarm output will not be held.
- Alarm indication ..... When the protective function is activated, the operation panel display automatically switches to the above indication.
- Resetting method..... When the protective function is activated, the inverter output is kept stopped. Unless reset, therefore, the inverter cannot restart. Switch power off once, then on again; or apply RES signal for more than 0.1s. If the RES signal is kept on, "Err." appears (flickers) to indicate that the inverter is in a reset status.
- When the protective function is activated, take the appropriate corrective action, then reset the inverter, and resume operation.

### 3.1.1 Error (alarm) definitions

#### (1) Major failures

When the protective function is activated, the inverter output is shut off and the alarm is output.

Operation Panel Indication	OC1	OC 1	FR-PU04	OC During Acc
Name	Overcurrent shut-off during acceleration			
Description	When the inverter output current reaches or exceeds approximately 150% of the rated inverter current during acceleration, the protective circuit is activated to stop the inverter output.			
Check point	Check for sudden acceleration. Check that the downward acceleration time is not long in vertical lift application. Check for output short-circuit/earth (ground) fault.			
Corrective action	Increase the acceleration time. Shorten the downward acceleration time in vertical lift application.			

Operation Panel Indication	OC2	OC 2	FR-PU04	Stedy Spd OC
Name	Overcurrent shut-off during constant speed			
Description	When the inverter output current reaches or exceeds approximately 150% of the rated inverter current during constant-speed operation, the protective circuit is activated to stop the inverter output.			
Check point	Check for sudden load change. Check for output short-circuit/earth (ground) fault.			
Corrective action	Keep load stable.			

Operation Panel Indication	OC3	OC 3	FR-PU04	OC During Dec
Name	Overcurrent shut-off during deceleration			
Description	When the inverter output current reaches or exceeds approximately 150% of the rated inverter current during deceleration (other than acceleration or constant speed), the protective circuit is activated to stop the inverter output.			
Check point	Check for sudden speed reduction. Check for output short-circuit/earth (ground) fault. Check for too fast operation of the motor's mechanical brake.			
Corrective action	Increase the deceleration time. Adjust brake operation.			

## Errors (Alarms)

Operation Panel Indication	OV1	OV1	FR-PU04	OV During Acc
Name	Regenerative overvoltage shut-off during acceleration			
Description	When the main circuit DC voltage in the inverter rises to or above the specified value due to excessive regenerative energy during acceleration, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.			
Check point	Check for too slow acceleration. (e.g. during downward acceleration in vertical lift load)			
Corrective action	<ul style="list-style-type: none"> <li>• Decrease the acceleration time.</li> <li>• Install a power factor improving reactor.</li> </ul>			

Operation Panel Indication	OV2	OV2	FR-PU04	Stedy Spd OV
Name	Regenerative overvoltage shut-off during constant speed			
Description	When the main circuit DC voltage in the inverter rises to or above the specified value due to excessive regenerative energy during constant speed, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.			
Check point	Check for sudden load change.			
Corrective action	<ul style="list-style-type: none"> <li>• Keep load stable.</li> <li>• Install a power factor improving reactor.</li> </ul>			

Operation Panel Indication	OV3	OV3	FR-PU04	OV During Dec
Name	Regenerative overvoltage shut-off during deceleration or stop			
Description	When the main circuit DC voltage in the inverter rises to or above the specified value due to excessive regenerative energy during deceleration or stop, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.			
Check point	Check for sudden speed reduction.			
Corrective action	<ul style="list-style-type: none"> <li>• Increase the deceleration time. (Set the deceleration time which matches the moment of inertia of the load)</li> <li>• Decrease the braking duty.</li> <li>• Install a power factor improving reactor.</li> </ul>			

Operation Panel Indication	THM	<i>THM</i>	FR-PU04	Motor Overload
Name	Motor overload shut-off (electronic thermal relay function) (* 1)			
Description	The electronic thermal relay function in the inverter detects motor overheat due to overload or reduced cooling capability during low-speed operation to stop the inverter output. When a multi-pole motor or two or more motors are run, provide a thermal relay on the output side of the inverter. Protection from burning due to motor temperature rise.			
Check point	Check the motor for use under overload.			
Corrective action	<ul style="list-style-type: none"> <li>• Reduce the load weight.</li> <li>• For a constant-torque motor, set the constant-torque motor in Pr. 71 "applied motor".</li> </ul>			

Operation Panel Indication	THT	<i>THT</i>	FR-PU04	Inv. Overload
Name	Inverter overload shut-off (electronic thermal relay function) (* 1)			
Description	If a current of more than 120% of the rated output current flows and overcurrent shut-off does not occur (150% or less), inverse-time characteristics cause the electronic thermal relay function to be activated to stop the inverter output in order to protect the output transistors. Output transistor protection from overheat			
Check point	Check the motor for use under overload.			
Corrective action	Reduce the load weight.			

\*1. Resetting the inverter initializes the internal thermal integrated data of the electronic thermal relay function.

Operation Panel Indication	FIN	<i>Fin</i>	FR-PU04	H/Sink O/Temp
Name	Fin overheat			
Description	If the heatsink overheats, the temperature sensor is actuated to stop the inverter output.			
Check point	<ul style="list-style-type: none"> <li>• Check for too high ambient temperature.</li> <li>• Check for heatsink clogging.</li> </ul>			
Corrective action	Set the ambient temperature to within the specifications.			

Operation Panel Indication	GF	<i>GF</i>	FR-PU04	Ground Fault
Name	Start-time output side earth (ground) fault overcurrent			
Description	This function stops the inverter output if an earth (ground) fault overcurrent flows due to an earth (ground) fault which occurred on the inverter's output (load) side. Made valid when Pr. 40 "start-time earth (ground) fault detection selection" = "1".			
Check point	Check for an earth (ground) fault in the motor and connection cable.			
Corrective action	Remedy the earth (ground) fault portion.			

Operation Panel Indication	LF	<i>LF</i>	FR-PU04	E.LF
Name	Output phase failure protection			
Description	This function stops the inverter output if one of the three phases (U, V, W) on the inverter's output side (load side) opens at motor start.			
Check Point	<ul style="list-style-type: none"> <li>• Check the wiring (Check that the motor is normal.).</li> <li>• Check that a motor used is not smaller (two ranks or less) than an inverter in capacity.</li> </ul>			
Corrective Action	<ul style="list-style-type: none"> <li>• Wire the cables properly.</li> <li>• Set "0" (without output phase failure protection) in H8 "Output phase failure protection selection" when using a smaller motor (two ranks or less) than an inverter in capacity.</li> </ul>			

Operation Panel Indication	OHT	<i>OHT</i>	FR-PU04	OH Fault
Name	External thermal relay (*2)			
Description	If the external thermal relay provided for motor overheat protection or the internally mounted temperature relay in the motor switches on (contacts open), the inverter output is stopped. Even if the relay contacts are reset automatically, the inverter will not restart unless it is reset.			
Check point	<ul style="list-style-type: none"> <li>• Check for motor overheating.</li> <li>• Check that the value of 7 (OH signal) is set correctly in any of Pr. 60 to Pr. 63 (input terminal function selection).</li> </ul>			
Corrective action	Reduce the load and operating duty.			

\*2. Functions only when any of Pr. 60 to Pr. 63 (input terminal function selection) is set to OH.

Operation Panel Indication	OLT	<i>OLT</i>	FR-PU04	Still Prev STP
Name	Stall prevention (overload)			
Description	The running frequency has fallen to 0 by stall prevention operation activated. OL appears while stall prevention is being activated.			
Check point	Check the motor for use under overload.			
Corrective action	Reduce the load weight.			

Operation Panel Indication	OPT	<i>OPT</i>	FR-PU04	Option Fault
Name	Communication error			
Description	Stops the inverter output if a setting error or connection (connector) fault occurs during use of RS-485 communication function.			
Check point	Check that the connector is plugged securely.			
Corrective action	Make connection securely. Please contact your sales representative.			

Operation Panel Indication	PE	<i>PE</i>	FR-PU04	Corrupt Memory
Name	Parameter storage device alarm			
Description	A fault occurred in parameters stored (example: EEPROM fault).			
Check point	Check for too many number of parameter write times.			
Corrective action	Please contact your sales representative.			

Operation Panel Indication	PUE	<i>PUE</i>	FR-PU04	PU Leave Out
Name	Parameter Unit disconnection			
Description	Stops the inverter output if communication between inverter and PU is suspended, e.g. if the PU is disconnected with "1" set in the communication parameter n17 "disconnected PU detection/PU setting lock".			
Check point	<ul style="list-style-type: none"> <li>• Check that the FR-PU04 is fitted securely.</li> <li>• Check the setting of the communication parameter n17 "disconnected PU detection".</li> </ul>			
Corrective action	Fit the FR-PU04 securely.			

Operation Panel Indication	RET	<i>RET</i>	FR-PU04	Retry No Over
Name	Retry count over			
Description	If operation cannot be resumed properly within the number of retries set, this function stops the inverter output.			
Check point	Find the cause of alarm occurrence.			
Corrective action	Eliminate the cause of the error preceding this error indication.			

Operation Panel Indication	CPU	<i>CPU</i>	FR-PU04	CPU Fault
Name	CPU error			
Description	If the arithmetic operation of the built-in CPU does not end within a predetermined period, the inverter self-determines it as an alarm and stops the output.			
Check point	—			
Corrective action	Please contact your sales representative.			

## (2) Minor failures

When the protective function is activated, the output is not shut off. You can make parameter setting to output the minor fault signal. (Set "98" in any of Pr. 64, Pr. 65 (output terminal function selection). Refer to page 111.)

Operation Panel Indication	FN	<i>F<sub>n</sub></i>	FR-PU04	FN
Name	Fan trouble			
Description	For the inverter which contains a cooling fan, <i>F<sub>n</sub></i> appears on the operation panel when the cooling fan stops due to a fault.			
Check point	Check the cooling fan for a fault.			
Corrective action	Replace the fan.			

**(3) Warnings**

Operation Panel Indication	OL	<i>OL</i>	FR-PU04	OL
Name	Stall prevention (overcurrent)			
Description	During acceleration	If a current of more than 120% (* 3) of the rated inverter current flows in the motor, this function stops the increase in frequency until the overload current decreases to prevent the inverter from resulting in overcurrent shut-off. When the overload current has decreases below 120%, this function increases the frequency again.		
	During constant-speed operation	If a current of more than 120% (* 3) of the rated inverter current flows in the motor, this function lowers the frequency until the overload current decreases to prevent overcurrent shut-off. When the overload current has reduced below 120%, this function increases the frequency up to the set value.		
	During deceleration	If a current of more than 120% (* 3) of the rated inverter current flows in the motor, this function stops the decrease in frequency until the overload current decreases to prevent the inverter from resulting in overcurrent shut-off. When the overload current has decreases below 120%, this function decreases the frequency again.		
Check point	Check the motor for use under overload.			
Corrective action	<ul style="list-style-type: none"> <li>• The acceleration/deceleration time may change.</li> <li>• Increase the stall prevention operation level with Pr. 22 "stall prevention operation level", or disable stall prevention with Pr. 21 "stall prevention function selection".</li> <li>• Check that the torque boost (Pr. 0) setting is not higher than required.</li> </ul>			

\*3. The stall prevention operation current can be set as desired. It is factory-set to 120%.

Operation Panel Indication	oL	<i>oL</i>	FR-PU04	oL
Name	Stall prevention (overvoltage)			
Description	During deceleration	If the regenerative energy of the motor increases too much to exceed the brake capability, this function stops the decrease in frequency to prevent overvoltage shut-off. As soon as the regenerative energy has reduced, deceleration resumes.		
Check point	Check for sudden speed reduction.			
Corrective action	The deceleration time may change. Increase the deceleration time using Pr. 8 "deceleration time".			

Operation Panel Indication	PS	<i>PS</i>	FR-PU04	PS
Name	PU stop			
Description	Pr. 75 "reset selection/PU stop selection" had been set and a stop was made by pressing the  of the operation panel or parameter unit (FR-PU04) during operation in the external operation mode.			
Check point	Check for a stop made by pressing the  of the operation panel during external operation.			
Corrective action	Refer to page 116.			

Operation Panel Indication	UV / F5J	<i>Uu / F5J</i>
Name	Undervoltage	
Description	<p>If the power supply voltage of the inverter decreases, the control circuit will not operate properly and will result in decreased motor torque or increased heat generation. To prevent this, if the power supply voltage decreases below about 150VAC (below about 300VAC for the three phase 400V power input series), this function stops the inverter output.</p> <p>When undervoltage occurs during inverter operation, <i>Uu</i> and <i>F5J</i> are displayed on the operation panel alternately.</p>	
Check point	<ul style="list-style-type: none"> <li>• Check for a start of large-capacity motor.</li> <li>• Check that the power supply capacity is as indicated in the specifications (Refer to page 196.).</li> </ul>	
Corrective action	Check the power supply system equipment such as the power supply.	

**(4) Write errors**

Operation Panel Indication	Er1	<i>Er 1</i>	FR-PU04	Control Mode
Name	Write disable error			
Description	<ul style="list-style-type: none"> <li>Write was performed with "1" (write disable) set in Pr. 77 "parameter write disable selection".</li> <li>Frequency jump setting range overlapped.</li> <li>Parameter write was performed though the operation panel does not have the write precedence.</li> </ul>			
Corrective action	<ul style="list-style-type: none"> <li>Check the setting of Pr. 77 "parameter write disable selection". (Refer to page 119.)</li> <li>Check the settings of Pr. 31 to 36 (frequency jump). (Refer to page 90.)</li> <li>When the FR-PU04 is fitted and n17 = "0" or "1", the operation of the operation panel is invalid. For RS-485 connector (RS-485) communication, the operation of the operation panel is invalid.</li> </ul>			

Operation Panel Indication	Er2	<i>Er 2</i>	FR-PU04	In PU/EXT Mode OPERATOR ERR
Name	Write-while-running error/mode designation error			
Description	<ul style="list-style-type: none"> <li>Write was performed during operation.</li> <li>An attempt was made to change the Pr. 79 setting to the operation mode where the run command has been input.</li> <li>Write was performed in the external operation mode.</li> </ul>			
Corrective action	<ul style="list-style-type: none"> <li>After stopping operation, make parameter setting.</li> <li>After setting the operation mode to the "PU operation mode", make parameter setting. (Refer to page 120.)</li> </ul>			

Operation Panel Indication	Er3	<i>Er 3</i>	FR-PU04	Incr I/P
Name	Calibration error			
Description	Analog input bias and gain calibration values are too close.			
Corrective action	Check the settings of C3, C4, C6 and C7 (calibration functions). (Refer to page 92.)			

### 3.1.2 To know the operating status at the occurrence of alarm (only when FR-PU04 is used)

When any alarm has occurred, the display automatically switches to the indication of the corresponding protective function (error). By pressing the **(MON)** at this point without resetting the inverter, the display shows the output frequency. In this way, it is possible to know the running frequency at the occurrence of the alarm. It is also possible to know the current in the same manner. After resetting, you can confirm the definitions in "Alarm History". (For details, refer to the instruction manual of the parameter unit (FR-PU04).)

### 3.1.3 Correspondence between digital and actual characters

There are the following correspondences between the actual alphanumeric characters and the digital characters displayed on the operation panel:

Actual	Display	Actual	Display	Actual	Display
0	0	A	A	M	7
1	1	B	b	N	7
2	2	C	C	O	0
3	3	D	d	o	0
4	4	E	E	P	P
5	5	F	F	S	5
6	6	G	G	T	7
7	7	H	H	U	U
8	8	I	I	V	U
9	9	J	J	r	r
		L	L	-	-

### 3.1.4 Resetting the inverter

The inverter can be reset by performing any of the following operations. Note that the internal thermal integrated value of the electronic thermal relay function and the number of retries are cleared (erased) by resetting the inverter. Recover about 1s after reset is cancelled.

**F5J**(F5J) and **Err**.(Err) appears alternately on the operation panel during reset.

- Operation 1 ..... Using the operation panel, perform a reset with the **(STOP RESET)**.  
(Enabled only when the inverter protective function is activated (major failure))
- Operation 2 ..... Switch power off once, then switch it on again after the LED on the operation panel turns off.
- Operation 3 ..... Turn on the reset signal (RES). (Assign this signal using any of Pr. 60 to Pr. 63.) (Refer to page 40, 109.)

## 3.2 Troubleshooting

### POINTS

If the cause is still unknown after every check, it is recommended to initialize the parameters (return to factory setting) then reset the required parameter values and check again.

### 3.2.1 Motor remains stopped

#### 1) Check the main circuit

- Check that a proper power supply voltage is applied (operation panel display is provided).
- Check that the motor is connected properly.
- Check that the jumper across P-P1 is connected.  
(Check that P-P1 of the filter pack are connected correctly.)

#### 2) Check the input signals

- Check that the start signal is input.
- Check that both the forward and reverse rotation start signals are not input simultaneously.
- Check that the frequency setting signal is not zero.
- Check that the AU signal is on when the frequency setting signal is 4 to 20mA.
- Check that the output stop signal (MRS) or reset signal (RES) is not on. (Assign signals MRS and RES using Pr. 60 to Pr. 63 (input terminal function selection).)
- Check that the sink or source jumper connector is fitted securely.

#### 3) Check the parameter settings

- Check that the reverse rotation prevention (Pr. 78) is not selected.
- Check that the operation mode (Pr. 79) setting is correct.
- Check that the bias and gain (C2 to C7) settings are correct.
- Check that the starting frequency (Pr. 13) setting is not greater than the running frequency.
- Check that various operational functions (such as three-speed operation), especially the maximum frequency (Pr. 1), are not zero.

#### 4) Check the load

- Check that the load is not too heavy.
- Check that the shaft is not locked.

#### 5) Others

- Check that the operation panel display does not show an error (e.g. OC1).
- Check that the Pr. 15 "jog frequency" setting is not lower than the Pr. 13 "starting frequency" value.

### 3.2.2 Motor rotates in opposite direction

- Check that the phase sequence of output terminals U, V and W is correct.
- Check that the start signals (forward rotation, reverse rotation) are connected properly.
- Check the setting of Pr. 17 "RUN key rotation direction selection".

### 3.2.3 Speed greatly differs from the setting

- Check that the frequency setting signal is correct. (Measure the input signal level.)
- Check that the following parameter settings are correct (Pr. 1, Pr. 2, Pr. 19, Pr. 38, Pr. 39, Pr. 95, C2 to C7).
- Check that the input signal lines are not affected by external noise. (Use shielded cables)
- Check that the load is not too heavy.

### 3.2.4 Acceleration/deceleration is not smooth

- Check that the acceleration and deceleration time settings are not too short.
- Check that the load is not too heavy.
- Check that the torque boost setting is not too large to activate the stall prevention function.

### 3.2.5 Motor current is large

- Check that the load is not too heavy.
- Check that the torque boost setting is not too large.
- Check that the rated motor frequency is set in the Pr. 3 "base frequency".

### 3.2.6 Speed does not increase

- Check that the maximum frequency setting is correct.
- Check that the load is not too heavy. (In agitators, etc., load may become heavier in winter.)
- Check that the torque boost setting is not too large to activate the stall prevention function.

### 3.2.7 Speed varies during operation

When slip compensation is selected, the output frequency varies with load fluctuation between 0 and 2Hz. This is a normal operation and is not a fault.

#### 1) Inspection of load

- Check that the load is not varying.

#### 2) Inspection of input signal

- Check that the frequency setting signal is not varying.
- Check that the frequency setting signal is not affected by noise.
- Check for a malfunction due to an undesirable current when the transistor output unit is connected. (Refer to page 26.)

#### 3) Others

- Check that the wiring length is not too long.
- Check that GD<sup>2</sup> load is not small. (at the motor GD<sup>2</sup> or smaller)  
 . . . . . FR-F540J-1.5K to 3.7K  
 If so, set the Pr. 72 "PWM frequency selection" to 6kHz or higher.  
 (Check for noise or leakage current problem.)

### 3.2.8 Operation mode is not changed properly

If the operation mode does not change correctly, check the following:

- 1. External input signal ..... Check that the STF or STR signal is off.  
When it is on, the operation mode cannot be changed.
- 2. Parameter setting ..... Check the Pr. 79 setting.  
When the Pr. 79 "operation mode selection" setting is "0", switching input power on places the inverter in external operation mode. Press the  to switch to PU operation mode.  
For other settings (1 to 8), the operation mode is limited accordingly.  
(For details of Pr. 79, refer to page 120.)

### 3.2.9 Operation panel display is not operating

- Make sure that terminals PC-SD are not shorted.
- Make sure that the connector is fitted securely across terminals P-P1.  
(Check that P-P1 of the filter pack are connected correctly.)

### 3.2.10 Parameter write cannot be performed

- Make sure that operation is not being performed (signal STF or STR is not ON).
- Check that the  () was pressed.
- Make sure that you are not attempting to set the parameter outside the setting range.
- Make sure that you are not attempting to set the parameter in external operation mode.
- Check Pr. 77 "parameter write disable selection".

### 3.2.11 Motor produces annoying sound

- Check the Pr. 70 "Soft-PWM setting" and Pr. 72 "PWM frequency selection" settings.
- Make sure that the deceleration time is not too short.

### 3.3 Precautions for maintenance and inspection

The inverter is a static unit mainly consisting of semiconductor devices. Daily inspection must be performed to prevent any fault from occurring due to the adverse effects of the operating environment, such as temperature, humidity, dust, dirt and vibration, changes in the parts with time, service life, and other factors.

#### 3.3.1 Precautions for maintenance and inspection

For some short time after the power is switched off, a high voltage remains in the smoothing capacitor. When accessing the inverter for inspection, wait for at least 10 minutes after the power supply has been switched off, and then make sure that the voltage across the main circuit terminals P-N of the inverter is not more than 30VDC using a tester, etc.

#### 3.3.2 Inspection item

##### (1) Daily inspection

- Basically, check for the following faults during operation.
  - 1) Motor operation fault
  - 2) Improper installation environment
  - 3) Cooling system fault
  - 4) Abnormal vibration, abnormal noise
  - 5) Abnormal overheat, discoloration
- During operation, check the inverter input voltages using a tester.

##### (2) Cleaning

Always run the inverter in a clean status.

When cleaning the inverter, gently wipe dirty areas with a soft cloth immersed in neutral detergent or ethanol.

#### CAUTION

**Do not use solvent, such as acetone, benzene, toluene and alcohol, as they will cause the inverter surface paint to peel off.**


#### 3.3.3 Periodic inspection

Check the areas inaccessible during operation and requiring periodic inspection. Consult us for periodic inspection.

- 1) Cooling system fault. .... Clean the air filter, etc.
- 2) Tightening check and retightening ..... The screws and bolts may become loose due to vibration, temperature changes, etc. Check and tighten them. Tighten them according to the specified tightening torque.
- 3) Check the conductors and insulating materials for corrosion and damage.
- 4) Measure insulation resistance.
- 5) Check and replace the cooling fan, smoothing capacitor and relay.

### 3.3.4 Insulation resistance test using megger

- 1) Before performing the insulation resistance test on the external circuit, disconnect the cables from all terminals of the inverter and filter pack so that the test voltage is not applied to the inverter.
- 2) For the continuity test of the control circuit, use a tester (high resistance range) and do not use the megger or buzzer.
- 3) For the inverter, conduct the insulation resistance test on the main circuit only as shown below and do not perform the test on the control circuit. (use the 500VDC megger)

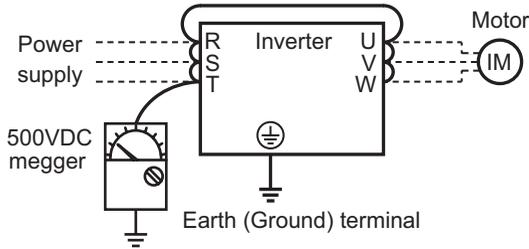

### 3.3.5 Pressure test

Do not conduct a pressure test. Deterioration may occur.

### 3.3.6 Daily and periodic inspection

Area of Inspection	Inspection Item	Inspection Item	Interval		Corrective Action at Alarm Occurrence	Customer's Check
			Daily	Periodic *2		
General	Surrounding environment	Check the ambient temperature, humidity, dirt, corrosive gas, oil mist, etc	○		Improve environment	
	Overall unit	Check for unusual vibration and noise	○		Check alarm location and retighten	
	Power supply voltage	Check that the main circuit voltages and control voltages are normal *1	○		Inspect the power supply	
Main circuit	General	(1) Check with megger (across main circuit terminals and earth (ground) terminal). (2) Check for loose screws and bolts. (3) Check for overheat traces on the parts. (4) Check for stain		○ ○ ○ ○	Contact the manufacturer Retighten Contact the manufacturer Clean	
	Conductors, cables	(1) Check conductors for distortion. (2) Check cable sheaths for breakage and deterioration (crack, discoloration, etc.)		○ ○	Contact the manufacturer Contact the manufacturer	
	Transformer/reactor	Check for unusual odor and abnormal increase in whining sound.	○		Stop the device and contact the manufacturer.	
	Terminal block	Check for damage.		○	Stop the device and contact the manufacturer.	
	Smoothing aluminum electrolytic capacitor	(1) Check for liquid leakage. (2) Check for safety valve projection and bulge.		○ ○	Contact the manufacturer Contact the manufacturer	
	Relay/contacter	Check that the operation is normal and no chatter is heard.		○	Contact the manufacturer	
	Resistor	(1) Check for crack in resistor insulation. (2) Check for a break in the cable.		○ ○	Contact the manufacturer Contact the manufacturer	

**Precautions for maintenance and inspection**

Area of Inspection	Inspection Item	Inspection Item	Interval		Corrective Action at Alarm Occurrence	Customer's Check
			Daily	Periodic *2		
Control circuit / protective circuit	Operation check	(1) Check that the output voltages across phases with the inverter operated alone is balanced		○	Contact the manufacturer	
		(2) Check that no fault is found in protective and display circuits in a sequence protective operation test.		○	Contact the manufacturer	
	Parts check	Overall	(1) Check for unusual odor and discoloration. (2) Check for serious rust development		○ ○	
Aluminum electrolytic capacitor		Check for liquid leakage in a capacitor and deformation trace		○	Contact the manufacturer	
Cooling system	Cooling fan	(1) Check for unusual vibration and noise. (2) Check for loose screws and bolts (3) Check for stain	○	○ ○ ○	Replace the fan Retighten Clean	
	Heatsink	(1) Check for clogging (2) Check for stain		○ ○	Clean Clean	
	Air filter, etc.	(1) Check for clogging (2) Check for stain		○ ○	Clean or replace Clean or replace	
Display	Indication	(1) Check that display is normal. (2) Check for stain	○	○	Contact the manufacturer Clean	
	Meter	Check that reading is normal	○		Stop the device and contact the manufacturer.	
Load motor	Operation check	Check for vibration and abnormal increase in operation noise	○		Stop the device and contact the manufacturer.	

\*1 It is recommended to install a device to monitor voltage for checking the power supply voltage to the inverter.

\*2 One to two years of periodic inspection cycle is recommended. However, it differs according to the installation environment.  
Consult us for periodic inspection.

### ●Checking the inverter and converter module

#### <Preparation>

- (1) Disconnect the external power supply cables (R, S, T) and motor cables (U, V, W).
- (2) Prepare a tester. (Use 100Ω range).

#### <Checking method>

Change the polarity of the tester alternately at the inverter terminals R, S, T, U, V, W, P and N, and check for continuity.


#### CAUTION

- Before measurement, check that the smoothing capacitor is discharged.
- At the time of discontinuity, the measured value is almost ∞. When there is an instantaneous continuity, due to the smoothing capacitor, the tester may not indicate ∞. At the time of continuity, the measured value is several to several ten's-of ohms depending on the module type, circuit tester type, etc. If all measured values are almost the same, the modules are without fault.

#### Module device numbers and terminals to be checked

		Tester Polarity		Process value			Tester Polarity		Process value
		⊕	⊖				⊕	⊖	
Converter Module	D1	R	P	Discontinuity	D4	R	N	Continuity	
		P	R	Continuity		N	R	Discontinuity	
	D2	S	P	Discontinuity	D5	S	N	Continuity	
		P	S	Continuity		N	S	Discontinuity	
	D3	T	P	Discontinuity	D6	T	N	Continuity	
		P	T	Continuity		N	T	Discontinuity	
Inverter Module	TR1	U	P	Discontinuity	TR4	U	N	Continuity	
		P	U	Continuity		N	U	Discontinuity	
	TR3	V	P	Discontinuity	TR6	V	N	Continuity	
		P	V	Continuity		N	V	Discontinuity	
	TR5	W	P	Discontinuity	TR2	W	N	Continuity	
		P	W	Continuity		N	W	Discontinuity	

(Assumes the use of an analog meter.)

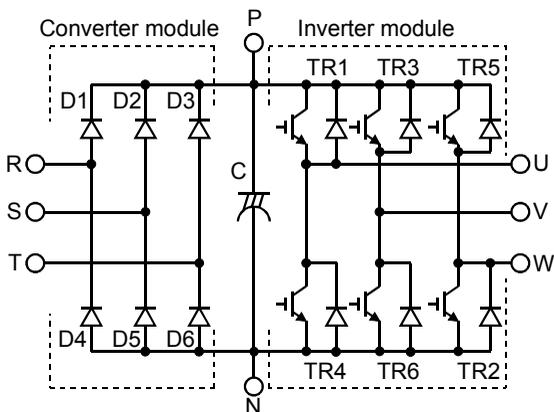

### 3.3.7 Replacement of parts

The inverter consists of many electronic parts such as semiconductor devices. The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or fault of the inverter. For preventive maintenance, the parts must be replaced periodically.

Part Name	Standard Replacement Interval	Description
Cooling fan	2 to 3 years	Replace (as required)
Main circuit smoothing capacitor	10 years *	Replace (as required)
On-board smoothing capacitor	10 years *	Replace the board (as required)
Relays	—	Replace as required

\*The design life of electrolytic capacitor is about ten years (87000h) if used for 24 hours a day and 365 days a year in the average yearly ambient temperature of 40°C .

---

---

#### CAUTION

---

---

**For parts replacement, consult the nearest Mitsubishi FA Center.**

---

---

## (1) Cooling fan

The cooling fan is used to cool heat-generating parts such as the main circuit semiconductors. The life of the cooling fan bearing is usually 10,000 to 35,000 hours. Hence, the cooling fan must be replaced every 2 to 3 years if the inverter is run continuously. When unusual noise and/or vibration is noticed during inspection, the cooling fan must be replaced immediately.

### <1.5K to 7.5K>

FR-F520J-1.5K, 2.2K, 3.7K	MMF-06D24DS BKO-C2461H07
FR-F540J-1.5K, 2.2K, 3.7K	MMF-06D24ES-FC4 BKO-CA1027H09
FR-F520J-5.5K, 7.5K	MMF-06D24ES-FC6 BKO-CA1027H17
FR-F540J-5.5K, 7.5K	
FR-F520J-11K, 15K	MMF-08C24ES-RM1 BKO-CA1321H01
FR-F540J-11K, 15K	

### ●Removal

1) Remove the front cover and wiring cover.

2) Unplug the fan connectors.  
The cooling fan is connected to the cooling fan connector beside the main circuit terminal block of the inverter.

Unplug the connector and separate the inverter from the cooling fan.


3) Remove the cooling fan cover.  
Disengage the fixing hooks pointed by arrows to remove the cooling fan cover.

4) Remove the cooling fan and cooling fan cover.  
The cooling fan is secured by the fixing hooks.  
Disengage the fixing hooks to remove the cooling fan and cooling fan cover.




1.5K to 3.7K

5.5K, 7.5K

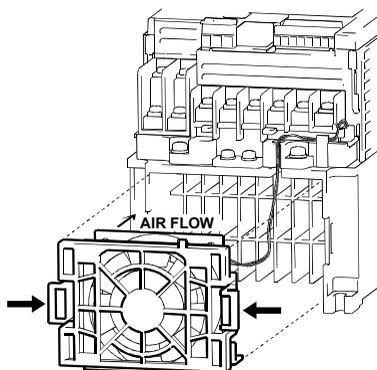

1.5K to 3.7K

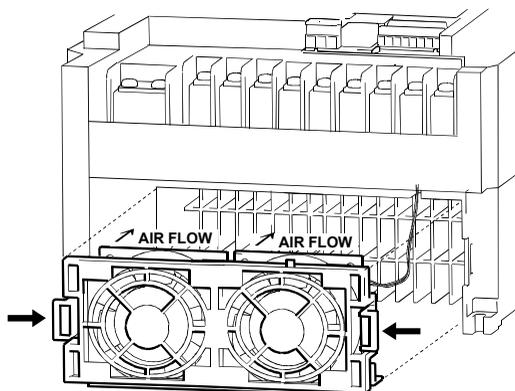


5.5K, 7.5K

<1.5K to 7.5K>


●Reinstallation

- 1) After confirming the orientation of the fan, reinstall the fan so that the arrow on the left of "AIR FLOW" faces up.

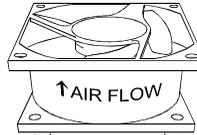

— CAUTION —

**Installing the fan in the opposite air flow direction can cause the inverter life to be shorter.**

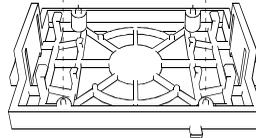


- 2) Reinstall the fan cover to the inverter.  
Run the cable through the wiring groove to prevent it from being caught between the chassis and cover.
- 3) Reconnect the cable to the connector. (Refer to "Removal" on the previous page for the position of the connector.)
- 4) Reinstall the wiring cover.


**<11K, 15K>**

● **Removal**

- 1) Push the hooks from above and remove the fan cover.

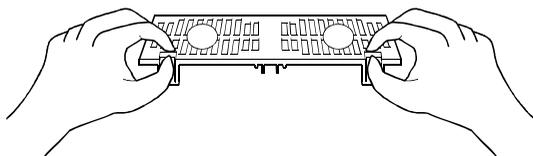


- 2) Disconnect the fan connectors.
- 3) Remove the fan.

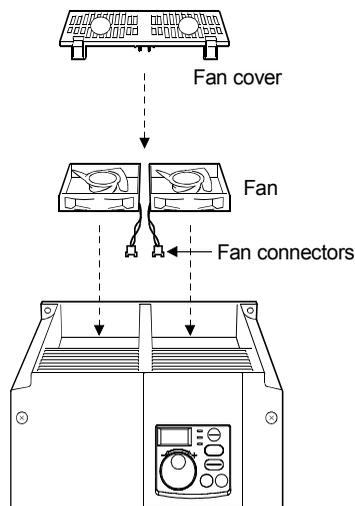

● **Reinstallation**


- 1) After confirming the orientation of the fan, reinstall the fan so that the arrow on the left of "AIR FLOW" faces up.

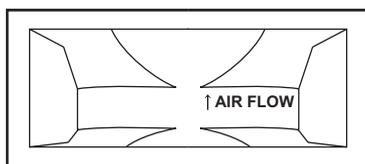

<Fan side face>

**CAUTION**  
**Installing the fan in the opposite air flow direction can cause the inverter life to be shorter.**

- 2) Reconnect the fan connectors.  
 When wiring, use care to avoid the cables being caught by the fan.
- 3) Reinstall the fan cover.

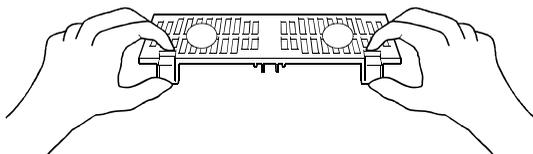

## **(2) Smoothing capacitors**

A large-capacity aluminum electrolytic capacitor is used for smoothing in the main circuit DC section, and an aluminum electrolytic capacitor is used for stabilizing the control power in the control circuit. Their characteristics are deteriorated by the adverse effects of ripple currents, etc. The replacement intervals greatly vary with the ambient temperature and operating conditions. When the inverter is operated in air-conditioned, normal environment conditions, replace the capacitors about every 10 years.

When a certain period of time has elapsed, the capacitors will deteriorate more rapidly. Check the capacitors at least every year (less than six months if the life will be expired soon).

The appearance criteria for inspection are as follows:

- 1) Case: Check the side and bottom faces for expansion
- 2) Sealing plate: Check for remarkable warp and extreme crack.
- 3) Check for external crack, discoloration, fluid leakage, etc. Judge that the capacitor has reached its life when the measured capacitance of the capacitor reduced below 85% of the rating.

## **(3) Relays**


To prevent a contact fault, etc., relays must be replaced according to the cumulative number of switching times (switching life).

### 3.3.8 Measurement of main circuit voltages, currents and powers

- Measurement of voltages and currents

Since the voltages and currents on the inverter power supply and output sides include harmonics, measurement data depends on the instruments used and circuits measured.

When instruments for commercial frequency are used for measurement, measure the following circuits with the instruments given on the next page.

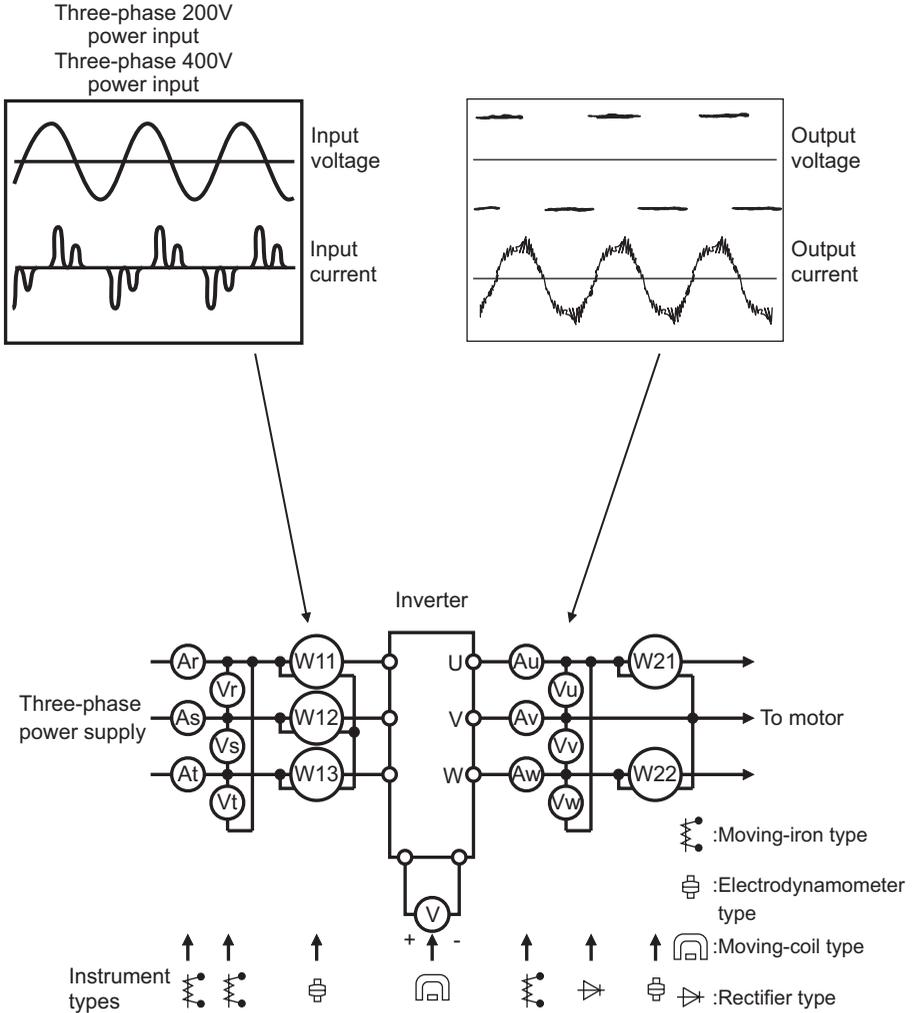


#### Examples of Measuring Points and Instruments

#### CAUTION

Use an FFT to measure the output voltages accurately.  
A tester or general measuring instrument cannot measure accurately.

## Measuring Points and Instruments

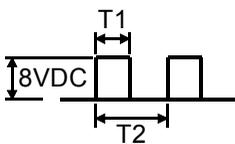Item	Measuring Point	Measuring Instrument	Remarks (Reference Measurement Value)
Power supply voltage V1	Across R-S, S-T, T-R	Moving-iron type AC voltmeter	Commercial power supply Within permissible AC voltage fluctuation (Refer to page 196.)
Power supply side current I1	R, S, and T line currents	Moving-iron type AC ammeter	
Power supply side power P1	At R, S and T, and across R-S, S-T and T-R	Electrodynamic type single-phase wattmeter	P1 = W11 + W12 + W13 (3-wattmeter method)
Power supply side power factor Pf1	Calculate after measuring power supply voltage, power supply side current and power supply side power. [Three phase power supply] $Pf1 = \frac{P1}{\sqrt{3}V1 \times I1} \times 100\%$		
Output side voltage V2	Across U-V, V-W and W-U	Rectifier type AC voltmeter (Caution 1) (Moving-iron type cannot measure)	Difference between the phases is within $\pm 1\%$ of the maximum output voltage.
Output side current I2	U, V and W line currents	Moving-iron type AC ammeter (Caution 2)	Current should be equal to or less than rated inverter current. Difference between the phases is 10% or lower of the rated inverter current.
Output side power P2	U, V, W and U-V, V-W	Electrodynamic type single-phase wattmeter	P2 = W21 + W22 2-wattmeter method (or 3-wattmeter method)
Output side power factor Pf2	Calculate in similar manner to power supply side power factor. $Pf2 = \frac{P2}{\sqrt{3}V2 \times I2} \times 100\%$		
Converter output	Across P-N	Moving-coil type (such as tester)	Inverter LED display is lit $1.35 \times V1$
Frequency setting signal	Across 2(+)-5		0 to 5VDC/0 to 10VDC
	Across 4(+)-5		4 to 20mADC
Frequency setting power supply	Across 10(+)-5		5VDC
Frequency meter signal	Across FM(+)-SD	Moving-coil type (Tester and such may be used) (Internal resistance: 50k $\Omega$ or larger)	Approx. 5VDC at maximum frequency (without frequency meter)  Pulse width T1: Adjust with C1 Pulse cycle T2: Set with Pr. 55 (Pr. 56)

"5" is common

"SD" is common

Item	Measuring Point	Measuring Instrument	Remarks (Reference Measurement Value)
Start signal Select signal	Across STF, STR, RH, RM, AU-SD	Moving-coil type (Tester and such may be used) (Internal resistance: 50kΩ or larger)	When open 20 to 30VDC ON voltage: 1V or less
Alarm signal	Across A-C Across B-C	Moving-coil type (such as tester)	Continuity check <Normal> <Abnormal> Across A-C: Discontinuity Continuity Across B-C: Continuity Discontinuity

"SD" is common

**CAUTION**

1. Use an FFT to measure the output voltage accurately. An FA tester or general measuring instrument cannot measure accurately.
2. When the carrier frequency exceeds 5kHz, do not use this instrument since using it may increase eddy-current losses produced in metal parts inside the instrument, leading to burnout.  
In this case, use the approximately effective value type instrument.

# MEMO

# 4. SPECIFICATIONS

This chapter provides the "specifications" of this product. Always read the instructions before using the equipment

<b>4.1</b>	<b>Specification list .....</b>	<b>196</b>
<b>4.2</b>	<b>Outline dimension drawings .....</b>	<b>200</b>

Chapter 1

Chapter 2

Chapter 3

Chapter 4

## 4.1 Specification list

### 4.1.1 Ratings

(1) Three-phase 200V power supply

Inverter											
Type FR-F520J-□K		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	
Applicable motor capacity (kW) (*1)		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	
Output	Rated capacity (kVA) (*2)	1.0	1.6	2.8	4.0	6.6	9.1	12.1	17.1	22.1	
	Rated current (A)	2.5	4.1	7.0	10	16.5	23.8	31.8	45	58	
	Overload current rating (*3)	120% 60s, 150% 0.5s (inverse time characteristics)									
	Voltage (*4)	Three-phase 200 to 240V									
Power supply	Rated input AC voltage/frequency	Three-phase 200 to 240V 50Hz/60Hz									
	Permissible AC voltage fluctuation	170 to 264V 50Hz/60Hz									
	Permissible frequency fluctuation	Within ±5%									
	Power supply system capacity (kVA) (*5)	Without filter pack	1.2	2.1	4.0	5.0	8.8	12	17	20	27
		With filter pack	0.8	1.2	2.6	3.4	5.5	8.4	11	16	19
Protective structure (JEM1030)		Enclosed type (IP20) (*6)					Open type (IP00)				
Cooling system		Self-cooling			Forced air cooling						
Approximate mass (kg)		0.8	0.9	1.5	1.5	2.1	3.8	3.8	5.1	7.5	

Filter pack										
Type FR-BFP-□K		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15
Approximate mass (kg)		1.3	1.4	2.0	2.2	2.8	3.8	4.5	6.7	7.0
Power factor improving reactor		Install the DC reactor on the DC side. (93% to 95% of power supply power factor under 100% load)								
Noise filter	Common mode core	Install a ferrite core on the input side								
	Capacitive filter	About 4mA of capacitor leakage current (*7)								

- \*1. The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- \*2. The rated output capacity indicated assumes that the output voltage is 220V.
- \*3. The % value of the overload current rating indicated is the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.
- \*4. The maximum output voltage does not exceed the power supply voltage. You can set the maximum output voltage to any value below the power supply voltage. However, the pulse voltage value of the inverter output side voltage remains unchanged at about  $\sqrt{2}$  that of the power supply.
- \*5. The power supply capacity varies with the value of the power supply side inverter impedance (including those of the input reactor and cables).
- \*6. The inverter with filter pack is open type (IP00).
- \*7. The leakage current indicated is equivalent to one-phase of cable for the three-phase three wire  $\Delta$  connection.

(2) Three-phase 400V power supply

<b>Inverter</b>											
Type FR-F540J-□K		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	
Applicable motor capacity (kW) (*1)		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	
Output	Rated capacity (kVA) (*2)	0.9	1.6	2.8	3.7	6.2	9.1	12.4	17.5	22.5	
	Rated current (A)	1.1	2.1	3.7	4.8	8.1	12	16.3	23	29.5	
Overload current rating (*3)		120% 60s, 150% 0.5s (inverse time characteristics)									
Voltage (*4)		Three-phase 380 to 480V									
Power supply	Rated input AC voltage/frequency	Three-phase 380 to 480V 50Hz/60Hz									
	Permissible AC voltage fluctuation	325 to 528V 50Hz/60Hz									
	Permissible frequency fluctuation	Within ±5%									
	Power supply system capacity (kVA) (*5)	Without filter pack	1.1	2.2	4.2	4.8	8.6	12	17	20	28
With filter pack		0.7	1.3	2.7	3.3	5.4	8.5	11	16	19	
Protective structure (JEM1030)		Enclosed type (IP20) (*6)					Open type (IP00)				
Cooling system		Self-cooling			Forced air cooling						
Approximate mass (kg)		1.5	1.5	1.5	1.6	1.7	3.8	3.8	5.0	7.5	

<b>Filter pack</b>										
Type FR-BFP-H□K		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15
Approximate mass (kg)		1.6	1.7	1.9	2.3	2.6	4.5	5.0	7.0	8.2
Power factor improving reactor		Install the DC reactor on the DC side. (93% to 95% of power supply power factor under 100% load)								
Noise filter	Common mode core	Install a ferrite core on the input side								
	Capacitive filter	About 8mA of capacitor leakage current (*7)								

- \*1. The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- \*2. The rated output capacity indicated assumes that the output voltage is 440V.
- \*3. The % value of the overload current rating indicated is the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.
- \*4. The maximum output voltage does not exceed the power supply voltage. You can set the maximum output voltage to any value below the power supply voltage. However, the pulse voltage value of the inverter output side voltage remains unchanged at about  $\sqrt{2}$  that of the power supply.
- \*5. The power supply capacity varies with the value of the power supply side inverter impedance (including those of the input reactor and cables).
- \*6. The inverter with filter pack is open type (IP00).
- \*7. The leakage current indicated is equivalent to one-phase of cable for the three-phase three wire  $\Delta$  connection.

## 4.1.2 Common specifications

Control method		Selectable between Soft-PWM control and high carrier frequency PWM control, V/F control or automatic torque boost control are selectable.	
Output frequency range		0.5 to 120Hz (starting frequency variable between 0 and 60Hz)	
Frequency setting resolution		5VDC input: 1/500 of max. set frequency, 10V, 4 to 20mADC input: 1/1000 of max. set frequency Digital input: 0.1Hz (less than 100Hz), 1Hz (100Hz or higher)	
Frequency accuracy		Analog input: Within $\pm 1\%$ of max. output frequency( $25^{\circ}\text{C}\pm 10^{\circ}\text{C}$ ) Digital input: Within $\pm 0.5\%$ of set output frequency (when set by the setting dial)	
Torque boost		Manual torque boost, automatic torque boost	
Acceleration/deceleration time setting		0, 0.1 to 999s (acceleration and deceleration can be set individually), linear or S-pattern acceleration/deceleration mode can be selected.	
Braking torque		Regeneration	15% torque/continuity
		DC injection brake	Operation frequency (0 to 120Hz), operation time (0 to 10s), operation voltage (0 to 15%)
Control specifications	Frequency setting signal	Analog input	0 to 5VDC, 0 to 10VDC, 4 to 20mA
		Digital input	Entered from operation panel
	Start signal	STF, STR	Forward and reverse rotation, start signal automatic self-holding input (3-wire input) can be selected.
	Reset		Reset the alarm output when the protective function is activated
	Multi-speed selection		Up to 15 speeds can be selected. (Each speed can be set between 0 and 120Hz, running speed can be changed during operation from the operation panel.)
	Second function selection		Used to select second functions (acceleration time, deceleration time, torque boost, base frequency, electronic thermal relay function).
	Output stop		Instantaneous shut-off of inverter output (frequency, voltage)
	Current input selection		Used to select second functions (acceleration time, deceleration time, torque boost, base frequency, electronic thermal relay function).
	External thermal relay input		Thermal relay contact input for use when the inverter is stopped by the thermal relay.
	Jog signal		Jog operation mode selection
	PID control valid		Selection for exercising PID control
	PU operation-external operationswitching		Used to switch between PU operation and external operation from outside the inverter.

Control specifications	Operational functions	Maximum and minimum frequency settings, frequency jump operation, external thermal relay input selection, automatic restart after instantaneous power failure, forward/reverse rotation prevention, slip compensation, operation mode selection, PID control, computer link operation (RS-485).		
	Output signals	Operating Status	1 open collector signal can be selected from among inverter running, up-to-frequency, frequency detection, overload warning, zero current detection, output current detection, PID upper limit, PID lower limit, PID forward/reverse rotation, operation ready, maintenance timer, minor failure and alarm. 1 changeover contact output (1 changeover contact, 230V 0.3AAC, 30V 0.3ADC) signal can be selected.	Use Pr. 64 and Pr. 65 for selection
		For meter	1 signal can be selected from between output frequency and motor current. Pulse train output (1440 pulses/s, 1mA full scale)	
Protective/warning function		Overcurrent shut-off (during acceleration, deceleration, constant speed), regenerative overvoltage shut-off (during acceleration, deceleration, constant speed), overload shut-off (electronic thermal relay function), heatsink overheat, fan failure (*2), stall prevention, start-time output side earth (ground) fault protection (*3), output phase failure, external thermal relay (*4), parameter storage device alarm, PU disconnection, retry count excess, CPU error, PU stop (*5), undervoltage (*1)		
Environment	Ambient temperature	-10°C to +50°C (non-freezing)		
	Ambient humidity	90%RH or less (non-condensing)		
	Storage temperature (*6)	-20°C to +65°C		
	Atmosphere	Indoors (without corrosive gas, flammable gas, oil mist, dust and dirt etc.)		
	Altitude, vibration	Maximum 1000m above sea level, 5.9m/s <sup>2</sup> or less (*7)		

- \*1. When undervoltage occurs, no alarm output is provided but the output is shut off. After power restoration, the inverter may be run as it is. Depending on the running status (e.g. load magnitude), however, overcurrent, regenerative overvoltage or other protection may be activated at power restoration. (in external operation mode)
- \*2. Compatible with only the product having the built-in cooling fan.
- \*3. Activated only when "1" is set in Pr. 40 "start-time earth (ground) fault detection selection".
- \*4. Activated only when external thermal relay input (OH) is selected in any of Pr. 60 to Pr. 63 (input terminal function selection).
- \*5. This function is activated only when "14 or 15" is set in Pr. 75 "reset selection/PU stop selection".
- \*6. Temperature applicable for a short period such as transportation.
- \*7. When using with the filter pack installed on the rear panel of the FR-F520J-15K or FR-F540J-15K, do not install this combination on moving objects or places that have vibrations exceeding 1.96m/s<sup>2</sup>.



## 4.2 Outline dimension drawings

● FR-F520J-0.4K,0.75K


• Three-phase 200V power supply

Capacity	D	D1
0.4K	112.5	42
0.75K	132.5	62

(Unit: mm)

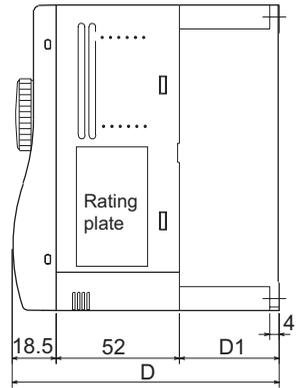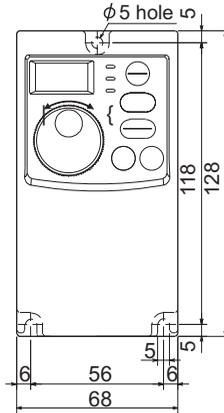


● FR-F520J-1.5K,2.2K,3.7K  
● FR-F540J-0.4K,0.75K,1.5K,2.2K,3.7K

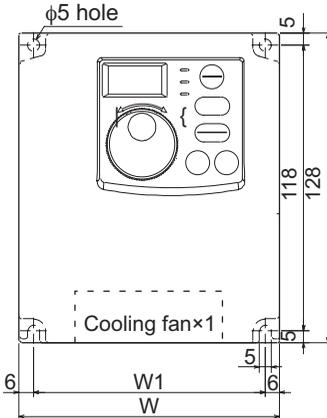

• Three-phase 200V power supply

Capacity	W	W1	D	D1	D2	D3
1.5K,2.2K	108	96	135.5	65	52	8
3.7K	170	158	142.5	72	52	5

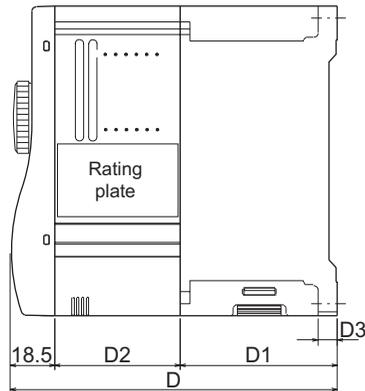

• Three-phase 400V power supply


Capacity	W	W1	D	D1	D2	D3
0.4K,0.75K	108	96	129.5	59	52	5
1.5K	108	96	135.5	65	52	8
2.2K	108	96	155.5	65	72	8
3.7K	108	96	165.5	65	82	8

(Unit: mm)

### REMARKS

The FR-F540-J-0.4K and 0.75K are not provided with a cooling fan.

- FR-F520J-5.5K, 7.5K, 11K, 15K
- FR-F540J-5.5K, 7.5K, 11K, 15K

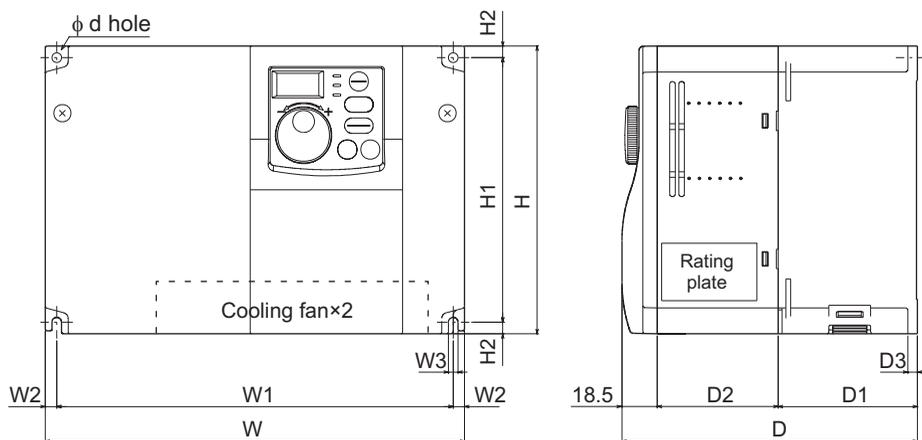

- Three-phase 200V,400V power supply

Capacity	W	W1	W2	W3	H	H1	H2	d	D	D1	D2	D3
5.5K,7.5K	220	208	6	5	150	138	6	5	155	73	63.5	5
11K,15K	220	195	12.5	6	260	245	7.5	6	190	90	81.5	10



(Unit: mm)

### REMARKS

The 11K and 15K have a cooling fan in the upper part.

**Outline dimension drawings**

● FR-BFP-0.4K,0.75K

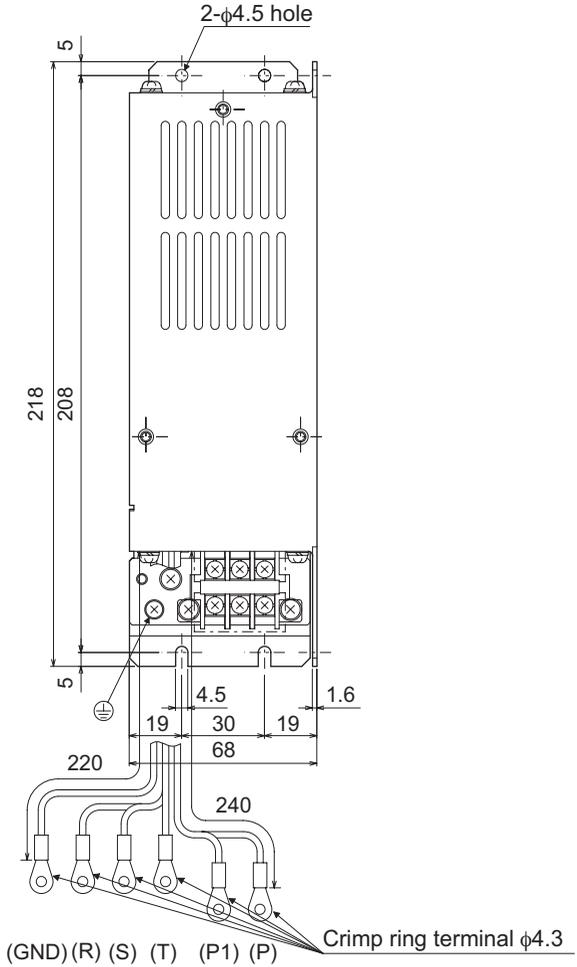
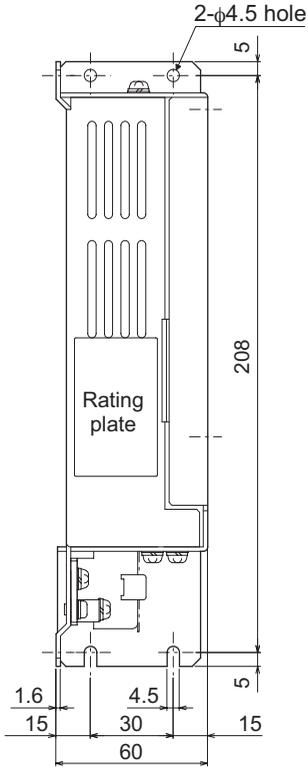


(GND) (R) (S) (T) (P1) (P)

Crimp ring terminal φ4.3

(Unit: mm)

- FR-BFP-1.5K, 2.2K, 3.7K
- FR-BFP-H0.4K, H0.75K, H1.5K, H2.2K, H3.7K

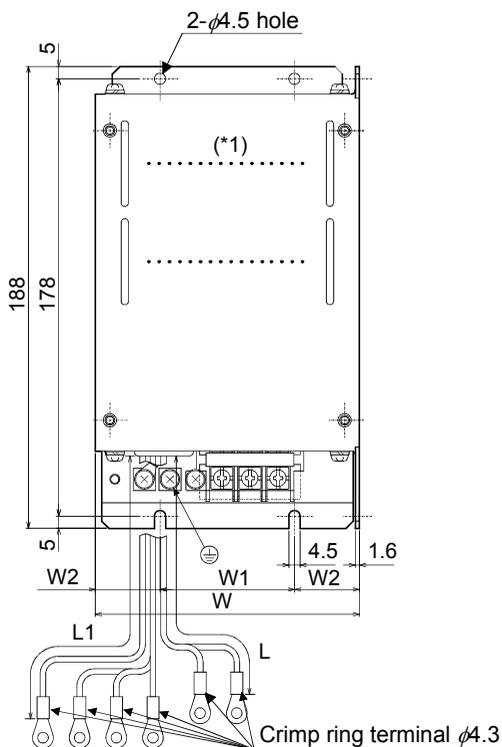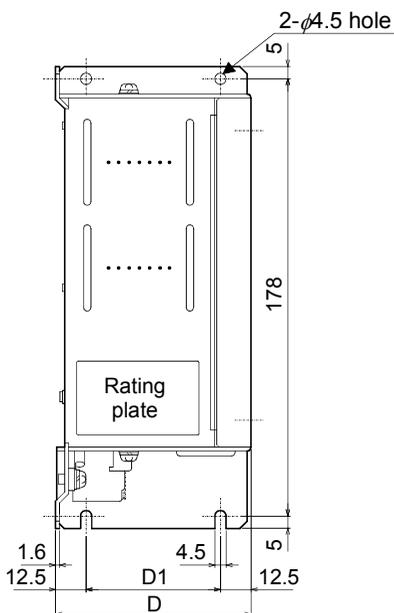

(GND)(R) (S) (T) (P1) (P)

●200V power supply

Capacity	W	W1	W2	D	D1	L	L1
1.5K, 2.2K	108	55	26.5	80	55	200	220
3.7K	170	120	25	65	40	220	240

●400V power supply

Capacity	W	W1	W2	D	D1	L	L1
H0.4K, H0.75K	108	55	26.5	55	30	200	220
H1.5K, H2.2K, H3.7K	108	55	26.5	80	55	200	220

(Unit: mm)

\*1 The 400V class H0.4K and H0.75K have no slit.



# APPENDIX

<b>APPENDIX 1</b>	<b>Parameter instruction code list .....</b>	<b>206</b>
<b>APPENDIX 2</b>	<b>SERIAL number check .....</b>	<b>211</b>

## APPENDIX 1 Parameter instruction code list

Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments*	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Basic functions	0	Torque boost	00	80	0.1%	0
	1	Maximum frequency	01	81	0.01Hz	0
	2	Minimum frequency	02	82	0.01Hz	0
	3	Base frequency	03	83	0.01Hz	0
	4	Multi-speed setting (high speed)	04	84	0.01Hz	0
	5	Multi-speed setting (middle speed)	05	85	0.01Hz	0
	6	Multi-speed setting (low speed)	06	86	0.01Hz	0
	7	Acceleration time	07	87	0.1s	0
	8	Deceleration time	08	88	0.1s	0
	9	Electronic thermal O/L relay	09	89	0.01A	0
	30	Extended function display selection	1E	9E	1	0
79	Operation mode selection	4F	None	1	0	

The extended function parameters are made valid by setting "1" in Pr. 30 "extended function display selection".

Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments *	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Standard operation functions	10	DC injection brake operation frequency	0A	8A	0.01Hz	0
	11	DC injection brake operation time	0B	8B	0.1s	0
	12	DC injection brake voltage	0C	8C	0.1%	0
	13	Starting frequency	0D	8D	0.01Hz	0
	14	Load pattern selection	0E	8E	1	0
	15	Jog frequency	0F	8F	0.01Hz	0
	16	Jog acceleration/ deceleration time	10	90	0.1s	0
	17	RUN key rotation direction selection	11	91	1	0
	19	Base frequency voltage	13	93	0.1V	0
	20	Acceleration/deceleration reference frequency	14	94	0.01Hz	0
	21	Stall prevention function selection	15	95	1	0
	22	Stall prevention operation level	16	96	0.1%	0

Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments *	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Standard operation functions	23	Stall prevention operation level compensation factor at double speed	17	97	0.1%	0
	24	Multi-speed setting (speed 4)	18	98	0.01Hz	0
	25	Multi-speed setting (speed 5)	19	99	0.01Hz	0
	26	Multi-speed setting (speed 6)	1A	9A	0.01Hz	0
	27	Multi-speed setting (speed 7)	1B	9B	0.01Hz	0
	28	Stall prevention operation reduction starting frequency	1C	9C	0.01Hz	0
	29	Acceleration/deceleration pattern	1D	9D	1	0
	31	Frequency jump 1A	1F	9F	0.01Hz	0
	32	Frequency jump 1B	20	A0	0.01Hz	0
	33	Frequency jump 2A	21	A1	0.01Hz	0
	34	Frequency jump 2B	22	A2	0.01Hz	0
	35	Frequency jump 3A	23	A3	0.01Hz	0
	36	Frequency jump 3B	24	A4	0.01Hz	0
	37	Speed display	25	A5	0.001	0
	38	Frequency setting voltage gain frequency	26	A6	0.01Hz	0
	39	Frequency setting current gain frequency	27	A7	0.01Hz	0
40	Start-time earth (ground) fault detection selection	28	A8	1	0	
Output terminal functions	41	Up-to-frequency	29	A9	0.1%	0
	42	Output frequency detection	2A	AA	0.01Hz	0
	43	Output frequency detection for reverse rotation	2B	AB	0.01Hz	0
Second functions	44	Second acceleration/deceleration time	2C	AC	0.1s	0
	45	Second deceleration time	2D	AD	0.1s	0
	46	Second torque boost	2E	AE	0.1%	0
	47	Second V/F (base frequency)	2F	AF	0.01Hz	0
Current detection	48	Output current detection level	30	B0	0.1%	0
	49	Output current detection signal delay time	31	B1	0.1s	0
	50	Zero current detection level	32	B2	0.1%	0
	51	Zero current detection period	33	B3	0.01s	0

**Parameter instruction code list**

Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments *	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Display functions	52	Operation panel display data selection	34	B4	1	0
	53	Frequency setting operation selection	35	B5	1	0
	54	FM terminal function selection	36	B6	1	0
	55	Frequency monitoring reference	37	B7	0.01Hz	0
	56	Current monitoring reference	38	B8	0.01A	0
Automatic restart functions	57	Restart coasting time	39	B9	0.1s	0
	58	Restart cushion time	3A	BA	0.1s	0
Additional function	59	Remote setting function selection	3B	BB	1	0
Terminal functions selection	60	RL terminal function selection	3C	BC	1	0
	61	RM terminal function selection	3D	BD	1	0
	62	RH terminal function selection	3E	BE	1	0
	63	STR terminal function selection	3F	BF	1	0
	64	RUN terminal function selection	40	C0	1	0
	65	A, B, C terminal function selection	41	C1	1	0
Operation selection functions	66	Retry selection	42	C2	1	0
	67	Number of retries at alarm occurrence	43	C3	1	0
	68	Retry waiting time	44	C4	0.1s	0
	69	Retry count display erase	45	C5	1	0
	70	Soft-PWM setting	46	C6	1	0
	71	Applied motor	47	C7	1	0
	72	PWM frequency selection	48	C8	1	0
	73	0-5V/0-10V selection	49	C9	1	0
	74	Input filter time constant	4A	CA	1	0
	75	Reset selection/PU stop selection	4B	CB	1	0
	76	Cooling fan operation selection	4C	CC	1	0
	77	Parameter write disable selection	4D	None	1	0
	78	Reverse rotation prevention selection	4E	CE	1	0

Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments *	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Multi-speed operation	80	Multi-speed setting (speed 8)	50	D0	0.01Hz	0
	81	Multi-speed setting (speed 9)	51	D1	0.01Hz	0
	82	Multi-speed setting (speed 10)	52	D2	0.01Hz	0
	83	Multi-speed setting (speed 11)	53	D3	0.01Hz	0
	84	Multi-speed setting (speed 12)	54	D4	0.01Hz	0
	85	Multi-speed setting (speed 13)	55	D5	0.01Hz	0
	86	Multi-speed setting (speed 14)	56	D6	0.01Hz	0
	87	Multi-speed setting (speed 15)	57	D7	0.01Hz	0
PID control	88	PID action selection	58	D8	1	0
	89	PID proportional band	59	D9	0.1%	0
	90	PID integral time	5A	DA	0.1s	0
	91	PID upper limit	5B	DB	0.1%	0
	92	PID lower limit	5C	DC	0.1%	0
	93	PID action set point for PU operation	5D	DD	0.01%	0
	94	PID differential time	5E	DE	0.01s	0
Sub functions	95	Rated motor slip	5F	DF	0.01%	0
	96	Slip compensation time constant	60	E0	0.01s	0
	97	Constant power range slip compensation selection	61	E1	1	0
	98	Automatic torque boost selection (Motor capacity)	62	E2	0.01kW	0
	99	Motor primary resistance	63	E3	0.001Ω	0
Maintenance function	H1 (503)	Maintenance timer	03	—	1	5
	H2 (504)	Maintenance timer alarm output set time	04	84	1	5
	H8 (251)	Output phase failure protection selection	3B	BB	1	2

**Parameter instruction code list**


Function	Parameter Number	Name	Instruction Code		Computer Link Data Setting Increments *	Link Parameter Extension Setting (Instruction Code 7F/FF)
			Read	Write		
Calibration parameters	C1 (900)	FM terminal calibration	5C	DC	—	1
	C2(902)	Frequency setting voltage bias frequency	5E	DE	0.01Hz	1 (6C/EC=0)
	C3(902)	Frequency setting voltage bias	5E	DE	0.1%	1 (6C/EC=1)
	C4(903)	Frequency setting voltage gain	5F	DF	0.1%	1 (6C/EC=1)
	C5(904)	Frequency setting current bias frequency	60	E0	0.01Hz	1 (6C/EC=0)
	C6(904)	Frequency setting current bias	60	E0	0.1%	1 (6C/EC=1)
	C7(905)	Frequency setting current gain	61	E1	0.1%	1 (6C/EC=1)
	C8(269)	Parameter for manufacturer setting.				
Clear parameters	CLr	Parameter clear	—	FC	1	—
	ECL	Alarm history clear	—	F4	1	—
Communication parameters	n1 (331)	Communication station number	1F	9F	1	3
	n2 (332)	Communication speed	20	A0	1	3
	n3 (333)	Stop bit length	21	A1	1	3
	n4 (334)	Parity check presence/absence	22	A2	1	3
	n5 (335)	Number of communication retries	23	A3	1	3
	n6 (336)	Communication check time interval	24	A4	0.1s	3
	n7 (337)	Waiting time setting	25	A5	1	3
	n8 (338)	Run command source	26	A6	1	3
	n9 (339)	Speed command source	27	A7	1	3
	n10 (340)	Link startup mode selection	28	A8	1	3
	n11 (341)	CR, LF selection	29	A9	1	3
	n12 (342)	EEPROM write selection	2A	AA	1	3
	n13 (145)	PU display language selection	2D	AD	1	1
	n14 (990)	PU buzzer control	5A	DA	1	9
	n15 (991)	PU contrast adjustment	5B	DB	1	9
	n16 (992)	PU main display screen data selection	5C	DC	1	9
	n17 (993)	Disconnected PU detection/PU setting lock	5D	DD	1	9

The parameter numbers in parentheses are those for use with the parameter unit (FR-PU04).

\* Though parameter setting by RS-485 communication can be made in the setting increments indicated in the table, note that the valid setting increments are as indicated in the parameter list (page 58).

## APPENDIX 2 SERIAL number check

Check the SERIAL number indicated on the rating plate and package for the inverter SERIAL number.

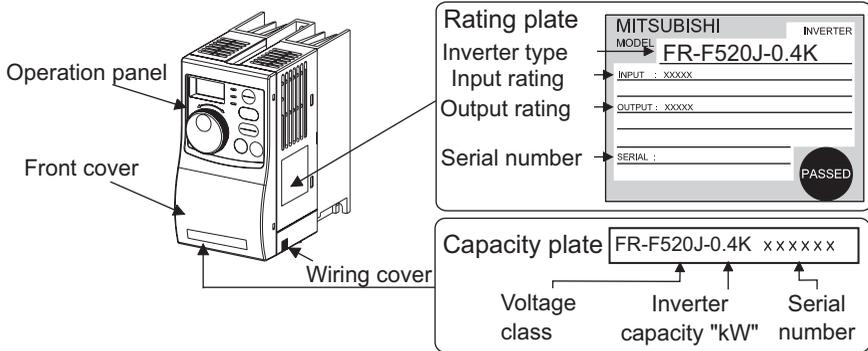

### Rating plate example

□	6	7	○○○○○○
Symbol	Year	Month	Control number
SERIAL (Serial No.)			

The SERIAL consists of 1 version symbol, 2 numeric characters or 1 numeric character and 1 alphabet letter indicating year and month, and 6 numeric characters indicating control number. Month is indicated as 1 to 9, X (October), Y (November), and Z (December).

# REVISIONS

\*The manual number is given on the bottom left of the back cover.

Print Date	*Manual Number	Revision	
Oct., 2002	IB(NA)-0600130E-A	First edition	
Dec., 2002	IB(NA)-0600130E-B	<table border="1"><tr><td>Addition</td></tr></table> Three-phase 200V power supply input specifications	Addition
Addition			
Dec., 2006	IB(NA)-0600130E-C	<table border="1"><tr><td>Addition</td></tr></table> H8 "output phase failure protection selection" Output phase failure protection function	Addition
Addition			
Oct., 2008	IB(NA)-0600130E-D	<table border="1"><tr><td>Modification</td></tr></table> Partial modification	Modification
Modification			